


User Guide

24.02



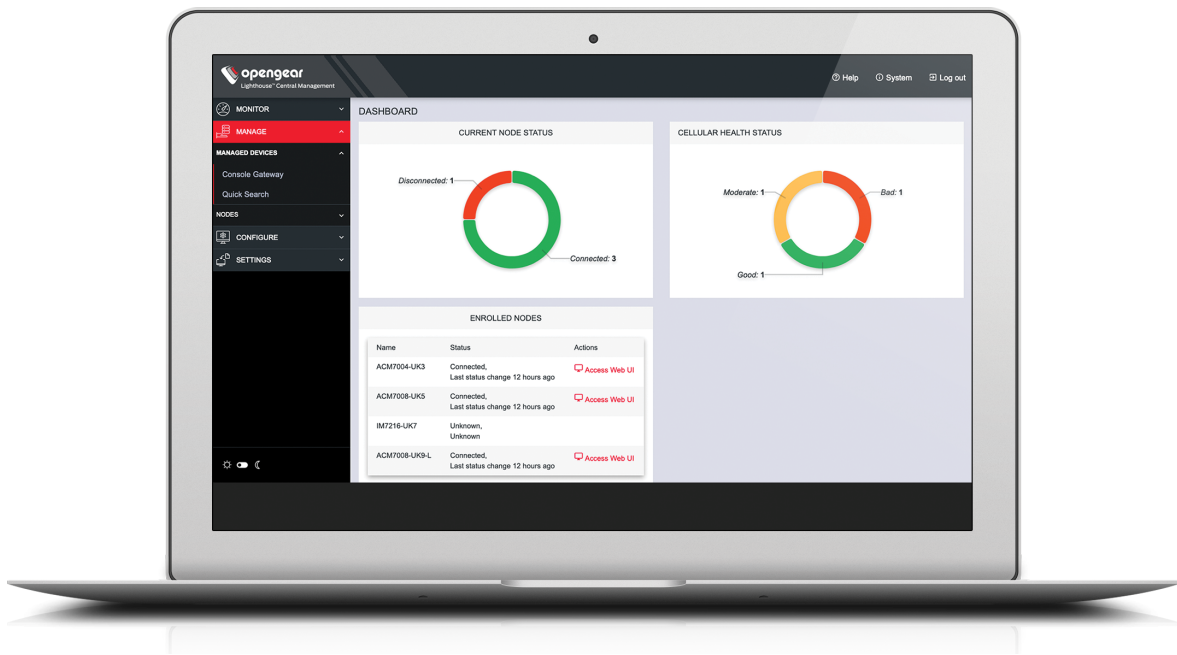

COPYRIGHT ©

Opengear Inc. 2024. All Rights Reserved.

Information in this document is subject to change without notice and does not represent a commitment on the part of Opengear. Opengear provides this document “as is,” without warranty of any kind, expressed or implied, including, but not limited to, the implied warranties of fitness or merchantability for a particular purpose.

Opengear may make improvements and/or changes in this manual or in the product (s) and/or the program(s) described in this manual at any time. This product could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes may be incorporated in new editions of the publication.

DOCUMENT REVISION HISTORY

Document Version Number	Revision Date	Description
24.02	February 24	Added Smart Management Fabric Functionality
23.10	October 23	Added verified AWS installation steps Added verified Azure installation steps Added Network Traffic Mirroring Removed Port tagging CLI Updated Authentication and authorization content.
23.04	Apr 23	Added Port Tagging changes to Nodes, Ports and Groups and Roles Updated screens and messages for Port Logging Added Port-tags to CLI Updated screenshots for Subscriptions Added command line tools

CONTENTS

Copyright ©	2
Document Revision History	3
Contents	5
About This User Guide	17
Lighthouse Overview	18
Lighthouse Architecture	19
The Lighthouse Virtual Machine Requirements	21
Lighthouse to Node interactions	23
Using Multiple Lighthouses	24
EULA and GPL	26
Installing Lighthouse	27
Installing Lighthouse VM on VMware	29
VMware vSphere 6.0 client on Windows	30
Requirements	30
Launch the vSphere Client and connect to a vSphere instance.	30
Import the Lighthouse VM Open Volume Format (.ovf) image	32
Launch Lighthouse	34
Access the Console of a Running But Headless Lighthouse Instance	35
VMware Workstation Player on Windows as Host	36
Import the Opendgear Lighthouse VM file into VMware Workstation Player	36
VMware Workstation Pro on Windows as Host	38
Import the Lighthouse VM File Into VMware Workstation Pro	38
Installing Lighthouse VM on Hyper-V on Windows	40

Local deployment on Hyper-V	41
Remote Hyper-V Deployment With Pre-authenticated User	41
VirtualBox Deployments	43
VirtualBox on Windows as host	43
VirtualBox on macOS as host	45
VirtualBox on Ubuntu as Host	47
VirtualBox on Fedora Workstation as host	49
Installing Lighthouse VM on Linux Hosts	51
Virtual Machine Manager (KVM) on Ubuntu as host	52
Boxes on Fedora Workstation as host	53
Boxes on RHEL and Compatible Distributions	54
Installing in the Cloud	55
Installing in Azure	56
Set a password on Lighthouse via SSH	58
Installing in Amazon Web Services	60
Limitations	62
Launch a Lighthouse Instance on AWS	63
Set a password for the root user on Lighthouse	64
Final Steps	65
Adding Disk Space to Lighthouse	66
Adding a New Disk to AWS	66
Adding a New Disk - qemu specific instructions	67
Adding a New Disk - Azure	68
Adding a New Disk - Hyper-V	68
Adding a New Disk - VirtualBox	69
Increase the lh_data logical volume	70
First Boot of the Lighthouse VM	71
Setting up Lighthouse	73
Loading Lighthouse	74

To load Lighthouse	74
Lighthouse IP addresses	75
Logging into Lighthouse	77
Setting the Lighthouse hostname	79
Adding external IP addresses manually	80
The Lighthouse SSL Certificate	82
Set the Lighthouse Internal Clock	83
Setting up Networking Requirements	85
Examine or Modify the Lighthouse Sessions	86
Examine or Change Lighthouse VPN network settings	87
Network Connections	89
Edit a network interface	90
Configure SNMP Manager Settings	91
Examine or modify SNMP Service	93
Cellular Health Dashboard	96
Lighthouse MIBs	97
Examples of Lighthouse MIB queries using SNMP:	99
Setting up Multiple Instances of Lighthouse	101
Setting up a multiple instance	103
Enabling Alternate REST API Ports	106
Configuring Subnets for a Multiple Instance Lighthouse	108
Configuring the Subnets	108
Disconnecting a dependent instance	112
Promoting a dependent instance	113
Upgrading a multiple instance Lighthouse	114
Upgrading Dependent Multiple Instances of Lighthouse	115
	116
Enable Smart Management Fabric (SMF)	116
	119
Upgrading Lighthouse	124

Prepare to Upgrade Lighthouse	125
Upgrading the system from within Lighthouse	127
Upgrading the Lighthouse system via the local terminal	129
Troubleshooting the Upgrade Process	131
Upgrade NetOps Modules	134
Configuration Backup	137
Configuration restore	138
Subscribing to Lighthouse	139
Adding a new subscription to Lighthouse	143
To add a subscription	143
Assigning subscriptions to nodes	145
View Subscriptions in the Lighthouse UI	145
To assign nodes to subscriptions	146
To assign a subscription	146
.....	147
To change a node's subscription	147
UPDATING A subscription to Lighthouse	149
To UPDATE a subscription	149
Shut Down or Restart Lighthouse	151
Finding the current Lighthouse instance version	152
Shut Down a Running Lighthouse Instance	155
Restarting a Running Lighthouse Instance	156
Returning a Lighthouse instance to factory settings	157
Managing Lighthouse Nodes	158
Monitor Nodes	159
Filtering pages displaying nodes	163
Filtering using the Free Text Search field	164
Filtering using Smart Groups	165
Filtering NODES using the Port Filter	167

Enrol Nodes	169
The Enrolled Nodes page	171
Assigning Subscriptions In an Enrollment Bundle	175
Creating an Enrollment bundle	176
Structure of an Enrollment bundle	180
Enrollment via Node Web UI	182
Enrollment via Lighthouse Web UI	183
Enrolling nodes via OM, ACM, CM, and IM Web UI	185
Enrollment via USB drive	188
Backing up Nodes	189
Work with Nodes	192
Connect to the web-management interface of a node	193
Connecting to a node's serial ports	195
Find the Serial Ports	195
Access via HTML5 Web Terminal	199
Access a serial port via SSH	200
Example Console Gateway session	203
Selecting nodes using shell-based tools	204
Node organization and filtering	206
Filter Nodes	207
Creating Smart Groups	208
Editing a Smart Group	211
Creating Port Filters	213
Editing an existing Port Filter	215
Creating Managed Device Filters	217
Editing an existing Managed Device Filter	220
Upgrade Nodes via the UI	222
Firmware Files	223
Upload a firmware file	224
Delete a firmware file	225

Create an upgrade task	227
Cancel an upgrade task	231
Copy a scheduled task	232
Delete an upgrade task	234
Retry an upgrade task	235
Node Upgrade Runtime Behaviour	237
Promoting a Secondary instance to Primary	238
Downgrading and Skipping Versions	239
Time Zones	240
Offline nodes	241
Node Connection interrupted	242
Unenrolling Nodes at Upgrade	243
Lighthouse Availability and Stability	244
Manage Ports	245
Filtering pages displaying ports	247
Filtering using the Free Text Search field	248
Filtering using the Smart Group Filtering drop-down menu	249
Filtering using the Port Filter drop-down menu	250
Filtering using the Port Tags	251
Create a new Port Tag	252
Edit A Port Tag	254
DELETE A Port Tag	255
Assign a Port Tag	257
Configuring Lighthouse	259
Create Templates	260
Creating new user and group templates	261
Modifying existing users and groups templates	264
Deleting users or groups from a template	266
Deleting users and groups templates	267
Create Authentication Templates	268

Creating new authentication templates	269
Modifying existing authentication templates	271
Deleting authentication templates	272
Create Smart Management Fabric (SMF) Templates	273
setting Up Smart Management Fabric (SMF) Templates	275
Validating Smart Management Fabric (SMF) TemplateS	280
Modifying existing Smart Management Fabric (SMF) templates	281
Deleting Smart Management Fabric (SMF) templates	282
Create Script Templates	283
Creating new script templates	284
Modifying existing script templates	286
Deleting script templates	287
Use Templates	288
Apply Templates	289
Manually Activate NetOps modules via Template	291
Configuration & Technical support reports	293
Lighthouse CLI, Serial Port and REST API logging	296
Configuring Lighthouse for Network traffic Mirroring	306
Configuring Network traffic mirroring for Multiple Instances	307
Troubleshooting Network traffic mirroring	308
Managing Lighthouse Users	309
Work with Groups	311
About Groups	312
Creating New Groups and Roles	315
Create a new group	316
Available Roles:	317
Available Operations Permissions:	317
Create a new Role	323

Work with Users	325
Creating new local users	331
Create New Local Users for Remote Authentication	333
Modify existing users	336
Expire user password	337
Setting Login Restrictions	338
Disabling a Lighthouse root user	340
Delete and Disable Users	341
SAML Config for SSO	342
Generic IdP Setup	344
Generic IdP SAML Attribute	347
Lighthouse Setup	348
Examples of Specific IdP Setups	350
Okta	350
Create an Application	350
Onelogin	353
Azure Active Directory	356
Configure AUTH0 for IdP	360
Create an Application (Enterprise applications)	360
Configure AUTH0 Metadata for IdP	363
Configure Lighthouses for AUTH0 for IdP	364
Configure AUTH0 for IdP	365
Limitations of SAML Configuration	366
IdP metadata certificate expiry	366
Making Changes to User Permissions	366
SAML SSO Usergroups	366
SAML SSO Users	367
Configuring AAA	368
LDAP Configuration	369
Radius Configuration	372

TACACS+ configuration	374
Setting password policy	376
Password fields in Lighthouse	378
Enabling Advanced Functionality	379
Introduction	380
About NetOps	381
NetOps Platform Security	382
Changing Docker IP Ranges	383
NetOps Module Management	385
Upgrade Modules from the UI	385
Upgrade Modules from the CLI	385
Update NetOps Modules Without Docker Access	387
Use a Pre-built Offline Installer (via GUI)	387
Use a Pre-built Offline Installer (via CLI)	388
Upgrade NetOps Modules	389
Activate a NetOps Module	392
Activate the NetOps Module on Lighthouse	392
Always Activate Mode on All Nodes (Automatic)	393
Activate NetOps on Selected Nodes (Automatic)	394
Activate the NetOps Module on Nodes (Manual)	395
Deactivate (remove) a NetOps Module	396
Automation Gateway	398
Differences Between IP Access and Automation Gateway	398
How to use Automation Gateway	400
PROCEDURE	400
Connect with REST/HTTP/HTTPS APIs	402
Automation Gateway Service Discovery	406
IP ACCESS	407
Connectivity	407

Enable IP Access in Lighthouse	411
Enable NetOps Automation	411
Activate the IP Access Module	411
Network Ports Used for IP Access	412
Generate a Certificate and Export Client Configuration	412
Connect the VPN Client	413
Password Authentication During VPN Connection	413
Advanced Options	415
Connecting to WAN Zone	415
Network Access Policies for Operations Manager	417
Understanding Access Policies	418
Setting up Network Access Policies	418
To set Access policies	419
Accessing Multiple VLANs or Ports	421
Group memberships	421
Firewall Zones	421
Multiple Layer 3 Network Connections	421
Troubleshooting IP Access	423
View the Docker logs	423
Using the Routing Table	425
SECURE PROVISIONING	427
Secure Provisioning Configuration Management	428
Stateless File Management	428
Stateful Device Management Gateway	429
How Secure Provisioning Works	430
Support for Secure Provisioning	432
Vendor Managed Devices Supported by Secure Pro- visioning	432
Local Network Services Provided by Nodes	434
Default Gateway	434
DNS Server	434

NTP Server	435
Syslog Server	435
Secure Provisioning Configuration	436
Device Resource Bundle	436
Node Inventory	437
Create Device ConFIguration	437
Activate the Secure Provisioning Module on Lighthouse	440
Install the Node	440
ConFIgure a Per-node Module Activation Policy	441
Option A. Automatically Activate All Nodes Upon Enrollment	441
Option B. Automatically Activate Select Nodes Upon Enrollment	441
Option C. Manually Activate Nodes After Enrollment	442
Enroll the Node Into Lighthouse	442
Connect Target Device	443
PROCEDURE	444
UI-based WorkFlow	445
Using the WorkFlow	445
Create Device Resource Bundle	445
DeFIne Resource Distribution	448
DeFIne a Static Node Inventory	448
DEFine a Dynamic Node Inventory	449
Push Resources	450
CLI based WorkFlow	451
Create CoNFIguration YAML	451
DeFIne a Static Inventory:	454
Define a Dynamic Inventory:	455
How UI Fields Correspond to the YAML File (Example)	457
Upload Configuration and Resources	460
Option A. Secure Copy Method	460
Option B. git Method	461
Additional Resource Files and Device Type Files	462

Configure Device Resources via ZTP	464
Device Resource Bundle Matching	464
Resource Distribution	464
Baseline vs Final Device Configuration	464
Run a Script on a Newly Provisioned Device	466
Monitor the ZTP Progress of a Managed Device	468
WAN Gateway Services	469
Advanced Options	470
Using Variables in Configuration File Templates	470
Post-provisioning Scripts	472
Ordered Provisioning	473
Troubleshooting Secure Provisioning	476
Troubleshooting Commands	477
Command line tools	479
node-info	481
Example node-info output	481
node-upgrade	482
An example node-upgrade run	484
Results and Error Messages in node-upgrade	485
cron	486
sysflash	488
Support for mounting the hard disks with ogconfig-cli	490
Support for multiple instance Lighthouse with ogcon-	
fig-cli	491
CLI support for configuring Network traffic mirroring	492
Network Traffic Mirroring	493
Glossary	496

ABOUT THIS USER GUIDE

This user guide describes how to use Lighthouse and is current as of 2024.02.

When using a minor release, there may or may not be a specific version of the user guide for that release.

The current Lighthouse user guide, and other guides can always be found [here](#).

Note: OPERATIONS MANAGER support may be partial for earlier releases.

Partial support may currently involve:

Mass node Enrollment using ZTP

Enrollment via USB drive

All template types are supported.

LIGHTHOUSE OVERVIEW

Lighthouse allows you to centrally access, manage, and monitor a network of Opengear console servers. With the Automation Edition, you can access the Smart Management Fabric (SMF) feature to monitor resources in your network. Lighthouse is a virtual machine that can be hosted on various platforms like VMware or Hyper-V (on customer hardware) or on supported cloud providers (AWS or Azure).

Console servers connect to a central Lighthouse instance over an OpenVPN tunnel, and are accessed, managed, and monitored via services transported over the VPN tunnel. The console server is referred to as the node.

LIGHTHOUSE ARCHITECTURE

Lighthouse is an API-driven platform with an HTML5 interface that provides secure access to remote networks regardless of how devices are connected or how a user interacts with the system.

In combination with select Opendgear Appliances, Lighthouse can push and manage Docker containers to each remote location to provide additional functionality and automation.


Users with the Lighthouse Automation Edition can enable Smart Management Fabric (SMF) to allow all devices connected to a supported Opendgear node to have direct routed IP access with each other. For example:

- A user with access to Lighthouse from a device that is attached to the management subnet can access any enrolled Opendgear node and the third-party network equipment attached to the enrolled Opendgear node via routed IP.
- An enterprise user connected to an IP network with a route to an enrolled Opendgear device can access any other enrolled Opendgear device (via IP).
- Devices attached to Opendgear nodes can use IP routed connectivity to other devices attached to other Opendgear nodes.
- Network automation and configuration tools deployed on centrally located servers can use IP routed connectivity to devices and systems attached to Opendgear nodes. For example vCenter is the configuration tool and it is used to provision eSXI server instances attached to Opendgear nodes.

Note: The Smart Management Fabric (SMF) represents an advanced functionality designed to offer heightened flexibility and accessibility to network and IT professionals throughout the network fabric.

However users must acknowledge the potential risk of overexposing the network, which could lead to bypassing Layer 2 or Layer 3 access control measures.

Nodes connect to a central Lighthouse instance over an OpenVPN tunnel, and are accessed, managed, and monitored via services transported over the VPN tunnel.

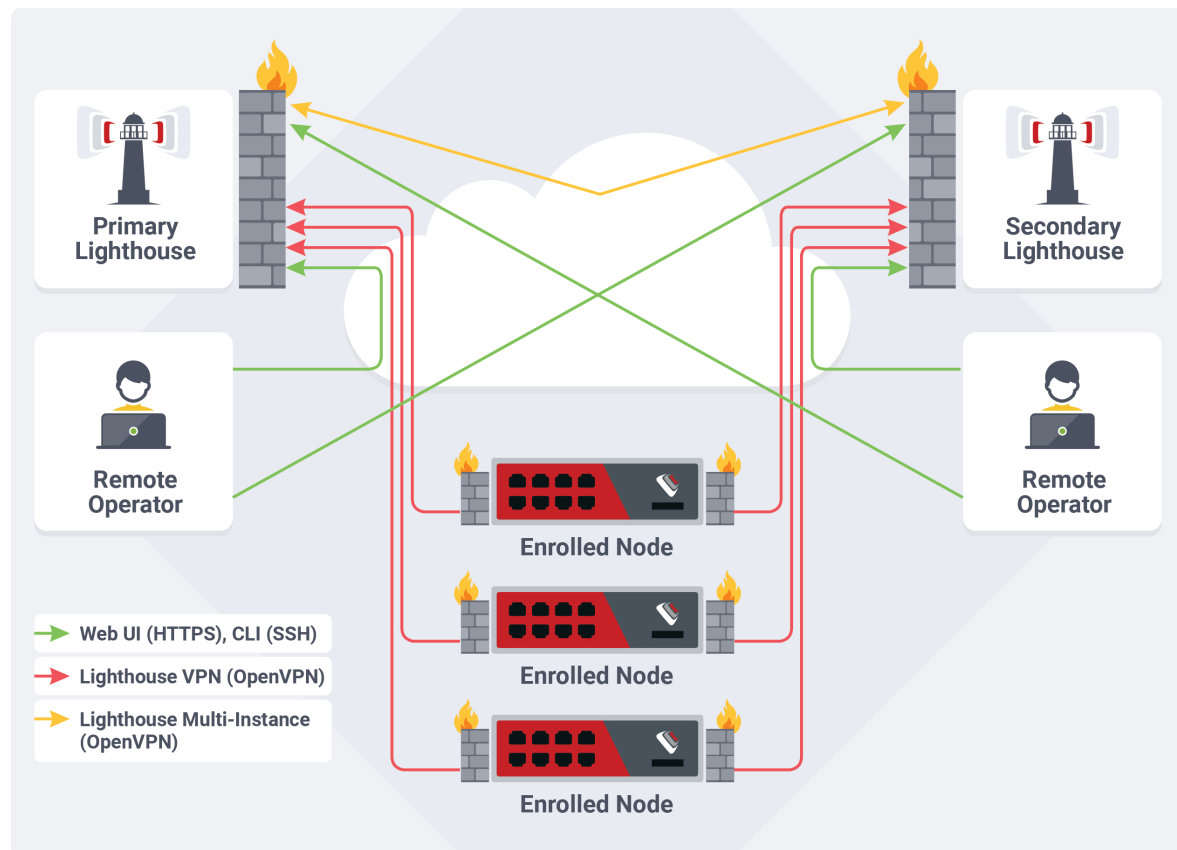

Note: This diagram depicts High Availability. If there is no dependent Lighthouse, the setup remains the same but without the dependent elements.

THE LIGHTHOUSE VIRTUAL MACHINE REQUIREMENTS

Lighthouse deploys as an application running in a Linux-based virtual machine (VM). To run a Lighthouse VM, the host computer must be able to run a VM manager and at least one full 64-bit Linux-based virtual machine.

The Lighthouse binary is available in Open, VMware and Hyper-V specific Virtual Machine formats. VM managers such as Boxes, KVM and VirtualBox can make use of the open format. Lighthouse binaries are also available for cloud hosting services including Amazon's AWS, and Microsoft Azure.

NetOps Modules are released independently of Lighthouse software or Operations Manager firmware. These releases are shipped to Amazon's ECR Public Gallery, where they can be fetched by Lighthouse then deployed to all activated nodes by Lighthouse. NetOps modules can also be downloaded off the Opengear FTP site, and uploaded manually on Lighthouse.

To host Lighthouse, the VM needs to be configured to support:

- A minimum 50GB SCSI disk. Start with more if you think your network will expand. Additional space may be required depending on your feature usage on Lighthouse and the scale of the network.
- 1 x network interface card, preferably paravirtualised (virtio, vmxnet3), Realtek rtl8139, or Intel e1000 are also supported, bridged.
- VGA console for initial setup.

To dimension CPU and RAM resources, follow these guidelines:

Note: CPU and RAM utilization increase with the number of enrolled nodes, network utilisation and storage.

For small deployments (Up to 500 nodes), allocate at a minimum:



- 2 x 64-bit CPU cores.
- 8GB RAM.

For medium deployments (between 500 and 1000 nodes), allocate at the minimum:

- 4 x 64-bit CPU cores.
- 16GB RAM.

For large deployments (more than 1000), allocate at the minimum:

- 4 x 64-bit CPU cores.
- 32GB RAM.

For large deployments (more than 1000) and to enable the Smart Management Fabric (SMF) feature, allocate at the minimum:

- 8 x 64-bit CPU cores.
- 32GB RAM.

Note: In general it is recommended that you add more memory than you assume you need.

For large deployments, please contact us for guidance on the deployment options, including low and zero-touch Enrollment.

LIGHTHOUSE TO NODE INTERACTIONS

When a node is enrolled to Lighthouse, a Virtual Private Network (VPN) tunnel is established between Lighthouse and the node. This provides secure encrypted IP networking, which is resilient to changes in the underlying network (such as node failover to cellular).

Lighthouse interacts with the node over the VPN tunnel, mostly via the node's REST API and SSH. Nodes notify Lighthouse of changes to their configuration and status.

The node web UI is accessible directly through Lighthouse, and is proxied via the VPN; this allows secure user access to the node even if it is behind a firewall with no direct HTTPS access.

USING MULTIPLE LIGHTHOUSES

Lighthouse offers a form of high availability with the Multiple Instance feature. The Multiple Instance feature allows you to set up dependent instances of Lighthouse. The dependent Lighthouses automatically receive updates from the primary Lighthouse instance, and maintains connections to all of its remote nodes.

The dependent Lighthouse will also replicate various values from the primary Lighthouse to ensure in the event of a failover, all information is up to date.

Dependent instances are read-only. They may be used to view Lighthouse information specific to that instance, and to connect to its nodes via `pmshell`. Configuration changes must be performed on the primary Lighthouse instance, which will then update the information displayed on the dependent instance.

The multiple instance feature has the following limitations:

- If external network addresses on the primary or secondary Lighthouses are updated after a dependent Lighthouse has been enrolled, it may break replication.
- Only Opendgear nodes with a version that supports multiple instance will connect to the dependent instance. Nodes that don't support multiple instances will behave normally on the primary lighthouse.
- Up to ten dependent instances can be enrolled
- Dependent Lighthouse instances are read-only. Ensure that you re-configure instance specific settings such as hostname, external endpoints, and time zone on a dependent instance before adding the dependent instance to the primary Lighthouse in a normal way through UI.
- Only dependent Lighthouse instances with zero nodes can be enrolled to the primary Lighthouse.



- Removing a dependent Lighthouse instance will initiate a factory reset of the removed Lighthouse.

Note: Dependent Lighthouse user interfaces are read-only.



EULA AND GPL

The current Opengear end-user license agreement and the GPL can be found at <http://opengear.com/eula>.

INSTALLING LIGHTHOUSE

To install Lighthouse you require:

- A virtual machine (VM) that can support a 50GB disk at the minimum and
- The correct image file.

Lighthouse Virtual Machines Availability

Lighthouse VM is available in several formats on our secure ftp sites, from where you can download and verify the checksums and install the appropriate files. Ensure you use the correct upgrade file for your upgrade.

- **lighthouse-24.02.0-ovf.zip** - An Open Volume Format file inside a PKZip archive. This is for use with virtual machine managers such as KVM and Virtual Box.
- **lighthouse-24.02.0-vmx.zip** - A VMware configuration file inside a PKZip archive. This is for use with virtual machine managers from VMware.
- **lighthouse-24.02.0.ova** - An Open Virtual Appliance file. This is for use with virtual machine managers such as VM and Virtual Box as well as for use with virtual machine managers from VMware.
- **lighthouse-24.02.0-hyperv.zip** - A Hyper-V configuration file with Powershell script inside a PKZip archive. This is for use in Microsoft Hyper-V deployment.
- **lighthouse-24.02.0.azure.zip** - A Microsoft Azure file, for deploying on Azure.
- **lighthouse-aws-bootstrap.sh**, and the **lighthouse-24.02.0.aws.raw.tar** image
- A shell script for deploying on AWS.
- **lighthouse-24.02.0.lh_upg** - An upgrade file.
- **lighthouse-24.02.0.aws.lh_upg** - Upgrade on AWS.
- **lighthouse-24.02.0.azure.zip** - Upgrade on Azure.



There are also SHASUMS files to verify the downloaded files.

Note: The latest format for the files is as follows:

lighthouse-<year>.<month>.<release/patchnumber>

INSTALLING LIGHTHOUSE VM ON VMWARE

This section describes how to install Lighthouse VMs on VMware hosts including:

- VMware vSphere 6.0 client on Windows
- VMware Workstation Player on Windows
- VMware Workstation Pro on Windows

VMWARE VSPHERE 6.0 CLIENT ON WINDOWS

This procedure was tested using the VMware Sphere Client 6.0 running on Windows 7 Enterprise SP 1.

REQUIREMENTS

Ensure the following preconditions are met before you start installation:

- VMware vSphere 6.0 is installed and running on available hardware.
- Access to a Windows computer on which the VMware vSphere 6.0 client is installed.
- The installed client application must be able to connect to and manage the VMware vSphere 6.0 instance.
- Finally, a copy of the Lighthouse binary in Open Volume Format is required, the .ovf file, either copied to the Windows computer running the VMware vSphere 6.0 client or available via a URL.

LAUNCH THE VSPHERE CLIENT AND CONNECT TO A VSPHERE INSTANCE.

1. Launch the VMware vSphere Client. The simplest way is to use the **Start Menu** shortcut added during installation.

Start > All Programs > VMware > VMware vSphere Client

The VMware vSphere Client opens a login window.



2. Select the IP address or name of the VMware vSphere instance where Lighthouse will be installed from the IP address/Name drop-down list.
3. Enter the User name and Password required to gain management privileges to the selected VMware vSphere instance.
4. Click **Login** or press **Return**.
5. The login window displays progress text in the bottom left corner:
Connecting
Loading inventory
Loading main form
Displaying main form

The vSphere main form window opens.




IMPORT THE LIGHTHOUSE VM OPEN VOLUME FORMAT (.OVF) IMAGE

To import the Lighthouse VM:

1. From the vSphere Client menu bar, choose **File > Deploy OVF Template**.
The **Deploy OVF Template** window displays, with the first stage, **Source**, pre-selected.
2. If the file **Opengear Lighthouse VM.ovf** is on a remote computer via a URL, enter the URL in the **Deploy from a file or URL** field. Otherwise, click **Browse**. An Open dialog displays.
 - a. Navigate to the directory containing the file **Opengear Lighthouse VM.ovf**.
 - b. Select **Opengear Lighthouse VM.ovf** and click **Open**.
3. The **Deploy OVF Template** window opens again, with the **Opengear Lighthouse VM.ovf** file listed in the **Deploy from a file or URL** combo-box. Click **Next**.
4. The **OVF Template Details** stage displays, showing basic information about the Lighthouse VM encapsulated by the **.ovf file**. Click **Next**.
5. The **Name and Location** screen displays with the **Name** field pre-populated and pre-selected. The default name is **Opengear Lighthouse VM**. To change this, enter a new name. Click **Next**.
6. The **Disk Format** screen displays which data-store the Lighthouse VM's virtual disk uses, how much free space the virtual disk has available and which provisioning scheme is being used. Click **Next**.
7. The **Network Mapping** screen shows which destination or inventory network the Lighthouse VM's virtual network is mapped to. Click **Next**.

8. The **Ready to Complete** screen displays, listing the basic properties of the about-to-be-deployed virtual machine. To be able to power-up the new virtual machine after deployment, select the **Power on after deployment** checkbox. Click **Finish**.
9. The **Deploying Opengear Lighthouse VM** progress dialog displays.

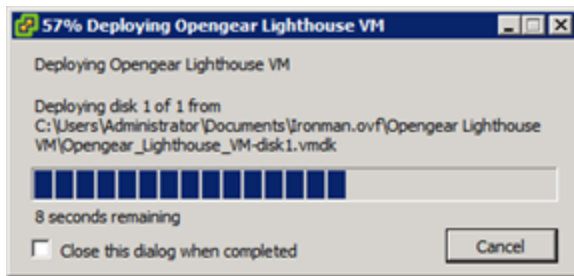

10. Once deployment has finished the **Deployment Completed Successfully** alert displays. Click **Close**.

The new virtual machine is now deployed and displays in the inventory list.



LAUNCH LIGHTHOUSE

The vSphere Client provides several ways of launching a Virtual Machine hosted on a vSphere instance. Begin by selecting the **Lighthouse VM** from the vSphere Client's inventory list. The selected VM can then be launched by doing one of the following:

- Select **Inventory > Virtual Machine > Power > Power On**.
- Press **Ctrl-B**.
- Click the **Power On** the virtual machine link in the **Basic Tasks** section of the **Getting Started** tab. This option requires the **Getting Started** tab be front-most. If it is not already the front-most tab, make it active by clicking it.
- Select **Inventory > Virtual Machine > Open Console** and then:
 - Click **Power On** in the console tool bar, or
 - Choose **VM > Power > Power On** from the console menu bar, or
 - Press **Ctrl-B**.

Note: Only the fourth option above results in the running virtual machine being accessible from within the vSphere Client. The first three boot the Lighthouse VM and run it as a headless system, that is, with no display on a monitor. However, you can access Lighthouse via the web UI or SSH.



ACCESS THE CONSOLE OF A RUNNING BUT HEADLESS LIGHTHOUSE INSTANCE

If direct interaction with a running but headless *Opendgear Lighthouse VM* is required, open a console window.

Select the running Opendgear Lighthouse VM in the vSphere Client's inventory list, then do one of the following:

- Select **Inventory > Virtual Machine > Open Console** or
- Right-click and select **Open Console** from the context menu that displays.

VMWARE WORKSTATION PLAYER ON WINDOWS AS HOST

Follow these steps when VMware Workstation Player is installed on the host Windows machine. VMware-ready virtual machine files are stored in **C:\Users\%USERNAME%\Virtual Machines**. This is the location selected by default by VMware Workstation Player. If another location is preferred, adjust this procedure as required.

Prepare the Lighthouse VM file for import into VMware Workstation Player:

1. Move the **lighthouse-24.02.0-vmx.zip** archive to **C:\Users\%USERNAME%\Virtual Machines**.
2. Right-click the archive and select **Extract All** from the contextual menu.
3. A **Select a Destination and Extract Files** dialog opens. By default, the location is the same folder as the archive is in: **C:\Users\%USERNAME%\Virtual Machines**. Leave this as the destination folder.
4. Uncheck the **Show Extracted Files When Complete** checkbox and then click **Extract**.
5. A folder called **lighthouse** is created inside **C:\Users\%USERNAME%\Virtual Machines**.

IMPORT THE OPENGEAR LIGHTHOUSE VM FILE INTO VMWARE WORKSTATION PLAYER

1. Launch VMware Workstation Player.
2. Click **Open a Virtual Machine**.
3. Navigate to **C:\Users\%USERNAME%\Virtual Machines\lighthouse**.



VMware Workstation Player points to **Libraries > Documents** and includes **C:\Users\%USERNAME%\My Documents**.

Assuming this is the case, double-click **Virtual Machines** and then double-click **Lighthouse**.

4. If only one file, **Lighthouse**, is visible, double-click on it to add the Lighthouse virtual machine to the VMware Workstation 12 Player virtual machines list. If more than one file displays, double-click **Lighthouse.vmx**.
5. The Lighthouse virtual machine is added to the VMware Workstation 12 Player virtual machines list.
6. With **Opengear Lighthouse VM** selected in the VMware Workstation 12 Player virtual machine list, click **Play Virtual Machine** to boot Lighthouse.

VMWARE WORKSTATION PRO ON WINDOWS AS HOST

This procedure assumes VMware Workstation Pro is already installed on the host Windows machine and that VMware-ready virtual machine files are stored in **C:\Users\%USERNAME%\Virtual Machines**. If another location is preferred, adjust the steps as needed.

IMPORT THE LIGHTHOUSE VM FILE INTO VMWARE WORKSTATION PRO

Step 1. Preparation:

This step prepares the Lighthouse VM File for Import Into VMware Workstation Pro.

1. Move the **lighthouse-24.02.0.zip** archive to **C:\Users\%USERNAME%\Virtual Machines**.
2. Right-click the **lighthouse-24.02.0-vmx.zip** archive and select **Extract All** from the contextual menu.
3. A **Select a Destination and Extract Files** dialog opens. The location is the same folder as the PKZip archive is in: **C:\Users\%USERNAME%\Virtual Machines**. Leave this as the destination folder.
4. Uncheck the **Show Extracted Files When Complete** checkbox and then click **Extract**.
5. A folder called **lighthouse** is created inside **C:\Users\%USERNAME%\Virtual Machines**.

Step 2. Import Lighthouse VM File:

1. Click **Open a Virtual Machine**.
2. Navigate to **C:\Users\%USERNAME%\Virtual Machines\lighthouse**.

3. VMware Workstation Pro points to **Libraries > Documents** and this library includes **C:\Users\%USERNAME%\My Documents**. Double-click **Virtual Machines** and then double-click **Lighthouse**.
4. If only one file, Lighthouse, displays, double-click the file to add the Lighthouse virtual machine to the VMware Workstation Pro virtual machines list. If more than one file displays, double-click **Lighthouse.vmx**.
5. The Lighthouse virtual machine is added to the VMware Workstation Pro virtual machines list.
6. With the **Opengear Lighthouse VM** selected in the **My Computer** listing and the subsequent **Opengear Lighthouse VM** tab open, click **Power** on this virtual machine to boot Lighthouse.

INSTALLING LIGHTHOUSE VM ON HYPER-V ON WINDOWS

This section describes how to install Lighthouse VMs on Hyper-V on Windows:

- Hyper-V running on Windows 10 or Windows Server 2016
- VirtualBox deployments



LOCAL DEPLOYMENT ON HYPER-V

This procedure assumes Hyper-V is already installed on a Windows 10/Windows Server 2016 host machine and the required Zip archive, **lighthouse-24.02.0-hyperv.zip** is in **C:\Users\%USERNAME%\Downloads**.

1. Unzip **lighthouse-24.02.0-hyperv.zip**.
2. Navigate to the extracted folder. Make sure **lighthouse.vhd** and **lighthouse_virtual_machine_registration.ps1** are in the folder.
3. Right-click and choose **Run with Powershell** to execute the Powershell script.
4. Leave the host name empty when prompted to deploy Lighthouse to local machine.
5. Launch **Hyper-V Manager**. Lighthouse should be registered as a new VM image under Virtual Machine.
6. Select **Lighthouse** from the list and click **Start** in the **Action Panel** to boot Opendgear Lighthouse.

REMOTE HYPER-V DEPLOYMENT WITH PRE-AUTHENTICATED USER

In this scenario, the user who performs Lighthouse deployment does not have local access to Hyper-V installed on Windows 2016. However, user has access to a Windows 10 which can manage the Hyper-V server remotely.

This procedure assumes Hyper-V is installed on Windows Server 2016 (or later) host machine and the required Zip archive **lighthouse-24.02.0-hyperv.zip** is in **C:\Users\%USERNAME%\Downloads**. Windows 10 is already configured to manage Hyper-V on Windows Server 2016.

Note: Windows 10 and Windows Server 2016 must have the same user (same password) created. The user who performs the deployment must have permission to both execute the Powershell script and deploy the image on Hyper-V.

1. Login to Windows 10 with the user mentioned above.
2. Unzip **lighthouse-24.02.0-hyperv.zip**.
3. Navigate to the extracted folder. Make sure **lighthouse.vhd** and **lighthouse_virtual_machine_registration.ps1** are in the folder.
4. Right-click and choose **Run** with Powershell to execute the Powershell script.
5. Enter the fully qualified domain name for Windows Server 2016 when prompted to deploy Lighthouse to the remotely-managed Windows Server 2016 machine.
6. Launch Hyper-V Manager. Lighthouse should be registered as a new VM image under Virtual Machine for Windows Server 2016.
7. Select Lighthouse from the list and click **Start** in the **Action Panel** to boot Opendgear Lighthouse.

VIRTUALBOX DEPLOYMENTS

Lighthouse can be installed on the following hosts:

- VirtualBox on Windows as host
- VirtualBox on macOS as host
- VirtualBox on Ubuntu as Host
- VirtualBox on Fedora Workstation as host

VIRTUALBOX ON WINDOWS AS HOST

Note: We recommend that VirtualBox users customize their instances and change their network cards to one other than e1000. We also suggest virtio for better performance.

This procedure assumes VirtualBox is already installed on the host machine and the required PKZip archive, **lighthouse-24.02.0-ovf.zip** is in

C:\Users\%USERNAME%\Downloads.

1. Unzip **lighthouse-ovf**. It may appear as **lighthouse-24.02.0-ovf.zip** depending on the Windows Explorer preference settings).
2. Right-click the **lighthouse-ovf** archive and select **Extract** all from the context menu.
3. The **Select a Destination** and **Extract Files** dialog opens. The destination is **C:\Users\%USERNAME%\Downloads\Lighthouse-ovf**.
4. Uncheck the **Show extracted files when complete** checkbox and edit the destination by removing **Lighthouse-ovf** from the path.
5. Click **Extract**.

6. A folder called **lighthouse-ovf** is created inside **C:\Users\%USERNAME%\Downloads**.
7. Launch VirtualBox.
8. The Oracle VM VirtualBox Manager window displays.
9. Choose **File > Import Appliance**.
10. The **Appliance to Import** dialog opens.
11. Click **Expert Mode**.
12. The **Appliance to import** dialog changes from **Guided Mode** to **Expert Mode**.
13. Click the icon of a folder with an upward pointing arrow superimposed. This icon is to the far right of the **Appliance to import field**.
14. The **Open File** dialog displays with **C:\Users\%USERNAME%\Documents** as the current folder.
15. Navigate to **C:\Users\%USERNAME%\Downloads\Lighthouse.ovf\Opengear Lighthouse VM**.
16. Select the file **Opengear Lighthouse VM** and click **Open**.
17. Double-click the text **vm** in the **Name** row and **Configuration** column to make it editable.
18. Type **Opengear Lighthouse VM** and press **Enter**.
19. Click **Import**.
20. A new virtual machine, called **Opengear Lighthouse VM** is added to the list of virtual machines available to **Virtual Box**.
21. Select **Opengear Lighthouse VM** from the list.
22. Select **Machine > Settings** or click the **Settings** icon in the **VirtualBox Manager** toolbar or press **Control+S**.
23. The **Opengear Lighthouse VM - Settings** dialog displays.

24. Click the **System** option in the list of options running down the left-hand side of the dialog.
25. The dialog shows the **System** options available as three tabs: **Motherboard**, **Processor**, and **Acceleration**. Depending on the underlying hardware platform, Acceleration may be greyed-out and unavailable. The Motherboard tab is preselected.
26. In the **Motherboard** tab, select the **Hardware Clock in UTC Time** checkbox.
27. Click **OK** or press **Return**
28. Select **Opengear Lighthouse VM** from the list and click **Start** in the Oracle VM VirtualBox Manager toolbar to boot Lighthouse. Double-clicking **Opengear Lighthouse VM** in the list also boots Lighthouse.

Note: Selecting the **Hardware Clock in UTC Time** checkbox is necessary because Lighthouse expects the hardware clock to be set to UTC, not local time. Unlike other Virtual Machine Managers, Virtual Box both exposes this option as a user-adjustable setting and does not set it to UTC by default.

VIRTUALBOX ON MACOS AS HOST

VirtualBox should already installed on the host macOS machine and the required PKZip archive, **lighthouse-24.02.0-ovf.zip** is in **~/Downloads**.

1. Unzip lighthouse-24.02.0-ovf.zip.

This creates a folder **Lighthouse-ovf** in **~/Downloads** that contains the following files and folders:

```
Lighthouse-ovf
├── Opengear Lighthouse VM
│   ├── Opengear Lighthouse VM.ovf
│   └── Opengear_Lighthouse_VM-disk1.vmdk
```

2. Launch Virtual Box. The Oracle **VM VirtualBox Manager** window displays.
3. Select **File > Import Appliance** or press **Command+I**.
4. The **Appliance to Import** dialog sheet slides down from the Oracle VM VirtualBox Manager toolbar.
5. Click **Expert Mode**.
The **Appliance to Import** dialog sheet changes from **Guided Mode** to **Expert Mode**.
6. Click the icon of a folder with an upward pointing arrow superimposed. This icon is to the far-right of the **Appliance to Import** field.
7. The **Open File** dialog sheet slides down from the **Oracle VM VirtualBox Manager** toolbar. This sheet opens with **~/Documents** as the current folder.
8. Navigate to **~/Downloads/Lighthouse.ovf/Opengear Lighthouse VM/**.
9. Select **Opengear Lighthouse VM** and click **Open**. (Depending on the **Finder Preferences** settings, the file may present as **Opengear Lighthouse VM.ovf**.)
10. Double-click the text **vm** in the **Name** row and **Configuration** column to make it editable.
11. Type **Opengear Lighthouse VM** and press **Return**.
12. Click **Import**.
A new virtual machine, called Opengear Lighthouse VM is added to the list of virtual machines.
13. Select **Opengear Lighthouse VM** from the list.
14. Choose **Machine > Settings**. Or click the **Settings** icon in the **VirtualBox Manager** toolbar. The **Opengear Lighthouse VM Settings** dialog displays.

15. Click the **System** option in the dialog's toolbar.
The dialog shows the System options available as three tabs: Motherboard, Processor, and Acceleration. (Depending on the underlying hardware platform, Acceleration may be greyed-out and unavailable). The Motherboard tab is preselected.
16. In the **Motherboard** tab, select the **Hardware Clock in UTC Time** checkbox.
17. Click **OK** or press **Return**.
18. **Select Opendgear Lighthouse VM** from the list and click **Start** in the **Oracle VM VirtualBox Manager** toolbar to boot Lighthouse. Double-clicking **Opendgear Lighthouse VM** in the list also boots Lighthouse.

Note: Selecting the Hardware Clock in UTC Time checkbox is necessary because Lighthouse expects the hardware clock to be set to UTC, not local time. Unlike other Virtual Machine Managers, Virtual Box both exposes this option as a user-adjustable setting and does not set it to UTC by default.

Note: By default, VirtualBox stores virtual machines in ~/VirtualBox VMs. If this is the first virtual machine setup by VirtualBox, it creates the VirtualBox VMs folder in the current user's home-directory and a folder — Opendgear Lighthouse VM — inside the VirtualBox VMs folder. The Opendgear Lighthouse VM folder contains the files and folders which make up Lighthouse when run under Virtual Box.

VIRTUALBOX ON UBUNTU AS HOST

Before beginning the procedure, make certain that VirtualBox and all required support files are installed on the host machine and the PKZip archive, **lighthouse-24.02.0-ovf.zip** is in ~/Downloads.



1. Unzip **lighthouse-24.02.0-ovf.zip**. This creates a folder, **Lighthouse-ovf** in **~/Downloads** that contains the following files and folders:

```
Lighthouse-ovf
├── Opengear Lighthouse VM
│   ├── Opengear Lighthouse VM.ovf
│   └── Opengear_Lighthouse_VM-disk1.vmdk
```

2. Launch **Virtual Box**.
3. The **Oracle VM VirtualBox Manager** window displays.
4. Choose **File > Import Appliance**.
5. The **Appliance** to import dialog opens.
6. Click **Expert Mode**.
7. The **Appliance to Import** dialog changes from **Guided Mode** to **Expert Mode**.
8. Click the icon of a folder with an upward pointing arrow superimposed. This icon is positioned to the right of the **Appliance to Import** field.
9. A file-navigation dialog, **Choose a Virtual Appliance to Import**, opens with **~/Documents** as the current folder.
10. Navigate to **~/Downloads/Lighthouse.ovf/Opengear Lighthouse VM/**.
11. Select **Opengear Lighthouse VM.ovf** and click **Open**.
12. Double-click the text **vm** in the **Name** row and **Configuration** column to make it editable.
13. Type **Opengear Lighthouse VM** and press **Return**.
14. Click **Import**.

A new virtual machine, called **Opengear Lighthouse VM** is added to the list of virtual machines available to Virtual Box.

15. Select **Opengear Lighthouse VM** from the list and click **Start** in the **Oracle VM VirtualBox Manager** toolbar to boot Lighthouse. Double-clicking **Opengear Lighthouse VM** in the list also boots Lighthouse.

Note: VirtualBox stores virtual machines in **~/VirtualBox VMs**. If this is the first virtual machine setup by VirtualBox it creates the **VirtualBox VMs** folder in the current user's home-directory and a folder **Opengear Lighthouse VM** inside the **VirtualBox VMs** folder. Inside **Opengear Lighthouse VM** are the files and folders which make up Lighthouse when run under Virtual Box.

VIRTUALBOX ON FEDORA WORKSTATION AS HOST

Before beginning, make certain that VirtualBox and all required support files are already installed on the host machine and the PKZip archive, **lighthouse-24.02.0-ovf.zip** is in **~/Downloads**.

1. Unzip **lighthouse-24.02.0-ovf.zip**. This creates a folder **Lighthouse.ovf** in **~/Downloads** that contains the following files and folders:

```
Lighthouse.ovf
├── Opengear Lighthouse VM
│   ├── Opengear Lighthouse VM.ovf
│   └── Opengear_Lighthouse_VM-disk1.vmdk
```

2. Launch Virtual Box.
The **Oracle VM VirtualBox Manager** window displays.
3. Choose **File > Import Appliance** or press **Control-I**.
The **Appliance to Import** dialog opens.
4. Click **Expert Mode**.
The **Appliance to Import** dialog changes from **Guided Mode** to **Expert Mode**.

5. Click the icon of a folder with an upward pointing arrow superimposed. This icon is to the far right of the **Appliance to Import** field.
The **Open File** dialog opens with **~/Documents** as the current folder.
6. Navigate to **~/Downloads/Lighthouse.ovf/Opengear Lighthouse VM/**.
7. Select **Opengear Lighthouse VM** and click **Open**.
8. Double-click the text **vm** in the **Name** row and **Configuration** column to make it editable.
9. Type **Opengear Lighthouse VM** and press **Return**.
10. Click **Import**.
A new virtual machine, called **Opengear Lighthouse VM** is added to the list of virtual machines available to Virtual Box.
11. Select **Opengear Lighthouse VM** from the list and click **Start** in the **Oracle VM VirtualBox Manager** toolbar to boot Lighthouse. Double-clicking **Opengear Lighthouse VM** in the list also boots **Lighthouse**.

Note: VirtualBox stores virtual machines in **~/VirtualBox VMs**. If this is the first virtual machine setup by VirtualBox, it creates the **VirtualBox VMs** folder in the current user's home-directory and a folder **Opengear Lighthouse VM** inside the **VirtualBox VMs** folder. Inside **Opengear Lighthouse VM** are the files and folders which make up Lighthouse when run under Virtual Box.

INSTALLING LIGHTHOUSE VM ON LINUX HOSTS

This section describes how to install Lighthouse VMs on Linux hosts:

- Ubuntu
- Fedora Workstation
- RHEL

VIRTUAL MACHINE MANAGER (KVM) ON UBUNTU AS HOST

Virtual Machine Manager and all required support files should be installed on the host machine and the .tar archive, **lighthouse-24.02.0-raw.hdd.tar** is in **~/Downloads**.

1. Expand **lighthouse-24.02.0-raw.hdd.tar**. This extracts **lighthouse-24.02.0-raw.hdd** in **~/Downloads**.
2. Launch **Virtual Machine Manager**.
3. Click **New** at the top left of the Virtual Machine Manager window (or choose **File > New Virtual Machine**). The **Source Selection** window opens.
4. Click **Select** a file. A **Select a Device or ISO File** dialog slides into view.
5. Navigate to **~/Downloads/**.
6. Select the file **lighthouse-24.02.0-raw.hdd** and click **Open** in the top right-corner of the dialog. A **Review** window opens providing basic information about the virtual machine or box, as Boxes calls them, to be created.
7. Click **Create** in the top right corner of the **Review** window.
8. A new virtual machine instance, **Opengear_Lighthouse_VM-disk1**, is created and presented in the **Boxes** window.
9. To rename the virtual machine instance, right-click on the machine instance and choose **Properties** from the contextual menu that displays. Click anywhere in the **Name** field to select and edit the name. Click the **Close** box to save the changes.

BOXES ON FEDORA WORKSTATION AS HOST

Boxes and all required support files should be installed on the host machine and **lighthouse-24.02.0-ovf.zip** is in **~/Downloads**.

1. Unzip **lighthouse-24.02.0-ovf.zip**. This creates a folder **Lighthouse.ovf** in **~/Downloads** that contains the following files and folders:

```
Lighthouse.ovf
├── Opengear Lighthouse VM
│   ├── Opengear Lighthouse VM.ovf
│   └── Opengear_Lighthouse_VM-disk1.vmdk
```

2. Launch **Boxes**.
3. Click **New** in the Boxes window title bar. The **Source Selection** window opens.
4. Click **Select a File**. A **Select a Device or ISO File** dialog opens.
5. Navigate to **~/Downloads/Lighthouse.ovf/Opengear Lighthouse VM/**.
6. Select the file **Opengear_Lighthouse_VM-disk1.vmdk** and click **Open** in the top right-hand corner of the dialog. A **Review** window opens providing basic information about the virtual machine (or 'box', as Boxes calls them) to be created.
7. Click **Create** in the top right corner of the **Review** window.
8. A new virtual machine instance, **Opengear_Lighthouse_VM-disk1** is created and presented in the **Boxes** window.
9. To rename the virtual machine instance, right-click on the machine instance and choose **Properties** from the contextual menu that displays. Click anywhere in the **Name** field to select and edit the name. Click **Close** to save the changes.

BOXES ON RHEL AND COMPATIBLE DISTRIBUTIONS

CentOS should be installed, complete with the Gnome desktop environment as the host operating system. CentOS includes the full complement of KVM-centric virtualization tools including the GUI-based virtualization management tools **Boxes** and **virt-manager** and the shell-based virtualization management tool **virsh**.

This procedure assumes **Boxes** is used to setup and manage the Lighthouse VM and that the required PKZip archive, **lighthouse-24.02.0-ovf.zip** is in **~/Downloads**.

To install Lighthouse on CentOS:

1. Unzip **lighthouse-24.02.0-ovf.zip**.

This creates a folder **Lighthouse.ovf** in **~/Downloads** that contains the following files and folders:

```
Lighthouse.ovf
├── Opengear Lighthouse VM
│   ├── Opengear Lighthouse VM.ovf
│   └── Opengear_Lighthouse_VM-disk1.vmdk
```

2. Launch Boxes
3. Click **New** in the **Boxes** title bar.
4. Navigate to **~/Downloads/Lighthouse.ovf/Opengear Lighthouse VM/**
5. Select **Opengear Lighthouse VM** and click **Open**. A new virtual machine, called Opengear LighthouseVM is added to the list of virtual machines available to Boxes.

INSTALLING IN THE CLOUD

This section describes how to install Lighthouse on supported cloud environments:

- Azure
- AWS.

INSTALLING IN AZURE

To use the Microsoft Azure environment:

1. Login to the Microsoft Azure portal at <https://portal.azure.com>
2. Under **Azure Services**, click the **Storage Accounts** icon.
3. Create a new storage account with at least 50GB storage space.
4. Navigate to the newly created storage account, click **Containers** under **Data Storage** and create a new blob container.
5. Download a Lighthouse VHD image, the latest Lighthouse image can be found in a zip file at the following URL: https://ftp.opengear.com/download/lighthouse_software/current/lighthouse/azure.
6. Copy the Lighthouse VHD image into the Azure storage container. (Using AzCopy is recommended, as the VHD image is large and the upload can take a long time to complete through the Microsoft Azure portal.)
 - a. If you haven't already, install AzCopy following instructions provided by [Microsoft](#). [Click here to read the instructions on Microsoft's website](#)
 - b. Generate a SAS token to use in your AzCopy commands
 - i. While viewing the newly created storage container, click Shared access signature under Settings.
 - ii. Under Permissions, enable Read, Write and Create.
 - iii. Set valid start and end date.
 - iv. Click Generate SAS and connection string at the bottom of the page.
 - v. Copy the Blob SAS token and Blob SAS URL, as you will not be able to view these again.

- c. Copy the Lighthouse VHD image into the Azure storage container using the following format, make sure to fill in the path to your local Lighthouse VHD image and your Blob SAS URL generated during the previous step: `./azcopy copy`

```
<path_to_local_image_file> "<blob_sas_url>"
```

A SAS token can also be created using Azure CLI. [Click here to read the instructions on Microsoft's website.](#)

7. Create an image:
 - a. In the Azure Portal, under **Azure Services**, click the **Images** icon.
 - b. Click **Create** to create a new image, make sure that the location is the same as your storage account, the OS type is set to **Linux** and **VM generation** is set to Gen 1.
 - c. Click **Browse** on the **Storage blob** field and select the Lighthouse VHD file you uploaded during a previous step.
 - d. Click **Create** to create the image.
8. Go to the newly created image and click **Create VM**. Ensure the selected image is correct.
9. Choose the desired virtual machine instance size.
10. Enter the details for the Microsoft Azure admin user with either password OR SSH key authentication.

Note: If SSH key authentication is selected, the user will be created without a password and will be unable to access the UI.

11. Select the inbound ports enabled for the Lighthouse instance (SSH, HTTPS).
12. Navigate to the next page of configuration (Disks) and select the desired storage option for the boot disk.
13. Go to the **Review** page and after validation passes, click **Create**.
14. Go to the **Virtual Machines** page, select the virtual machine and open the Serial Console. Lighthouse should now be deploying on Microsoft Azure.
15. To allow nodes to enroll in Lighthouse, you will need to add the following firewall rules on the **Networking** page under **Settings** on the virtual machine you deployed:
 - a. Add a rule to allow UDP connections from any source to port 1194 on the instance's internal network address (10.0.0.x).
 - b. Add a rule to allow UDP connections from any source to port 1195 on the instance's internal network address (10.0.0.x).
 - c. HTTPS and SSH should already be allowed from the initial setup. If not, add them.
 - d. Other ports may need to be opened, depending on feature usage. For example:
 - i. SNMP (UDP/161 or TCP/161) – SNMP Management
 - ii. OpenVPN (UDP/1195) – Lighthouse Multiple Instance VPN
 - iii. HTTPS (TCP/8443) – Alternate REST API port
16. Confirm that the Azure instance public IP address has been added to external endpoints in **Settings > System > Administration**.

SET A PASSWORD ON LIGHTHOUSE VIA SSH

If you are logged into Lighthouse via SSH keys, you will need to set a password to login via GUI. Use the `ogpasswd` utility to do this.



```
ogpasswd -u lh_admin -p MySecretPassword
```

Note: Your username must be the same as the Microsoft Azure admin user created in step 10

INSTALLING IN AMAZON WEB SERVICES

To use Lighthouse with Amazon Web Services (AWS), you will first need to create an Amazon Machine Image (AMI) containing Lighthouse in the AWS region that you want to deploy Lighthouse in. A temporary Linux “build-box” EC2 instance should be used to create a private Lighthouse AMI.

Note: This is a one-time procedure. The AMI can be used to create multiple instances of Lighthouse, and upgrades can be performed through the Lighthouse Web UI.

1. Create an account on AWS with an IAM user, a key pair and an access key.
 - The IAM user should have, at a minimum, permissions to create, attach, delete, and snapshot EBS volumes as well as create an Amazon Machine Image (AMI).
 - If you are using IAM Identity Center, you can use an IAM Identity Center user with the same permissions instead. Consult Amazon documentation for more information if required.
2. Create an AWS EC2 Linux instance, with the following settings:
 - Amazon Linux 2 or Amazon Linux 2023
 - `t2.small` instance type with default (8 GiB) root volume
 - 50GB `gp3` volume

Consult Amazon documentation for more information if required.
3. Create a Lighthouse AMI, using the `lighthouse-aws-bootstrap.sh` script (usage information can be displayed by using the `-h` option) on the EC2 instance created in the previous step. The steps are detailed below.

- Connect via SSH to your instance on AWS using the username `ec2-user` and the private key you created previously. All subsequent steps must be performed on the instance.

- Configure AWS using the following command:

```
aws configure
```

- Provide the access key and region details (other settings may be left unchanged). If you are using IAM Identity Center, you will need to instead configure using `aws configure sso`, and set the CLI Profile Name to be `default`.

- Download the `aws-bootstrap` script:

```
wget http://ftp.opengear.com/download/lighthouse_
software/current/lighthouse/aws/lighthouse-aws-
bootstrap.sh
```

- Run the `lighthouse-aws-bootstrap.sh` script as follows:

```
bash ./lighthouse-aws-bootstrap.sh -n Lighthouse -r
https://ftp.opengear.com/download/lighthouse_
software/current/lighthouse/aws/lighthouse-
24.02.0.aws.raw.tar
```

Note: `lighthouse-24.02.0.aws.raw.tar` is the sample file. You must download the latest file for your version of Lighthouse

- Wait while the Lighthouse AMI is created. This can take some time (up to 30 minutes).
- After the AMI has been created, terminate the Linux EC2 instance to avoid incurring additional costs.

Running the bootstrap script - Example

```
$ bash ./lighthouse-aws-bootstrap.sh -n Lighthouse -r \  
> http://ftp.opengear.com/download/lighthouse_  
software/current/lighthouse/aws/lighthouse-24.02.0.aws.raw.tar  
Downloading image...  
Image size is 54049899008 bytes (51 GiB)  
Creating volume...  
Attaching volume vol-09fb0b463f5a59eaf to EC2 instance...  
Cloning image onto volume...  
0+852971 records in  
0+852971 records out  
54049899008 bytes (54 GB, 50 GiB) copied, 845.072 s, 64.0 MB/s  
Creating snapshot of volume...  
Waiting for snapshot snap-0f83746856d985070 to complete...  
Creating AMI from snapshot snap-0f83746856d985070...  
Done!  
Cleaning up...
```

LIMITATIONS

AWS support is currently limited to:

- All standard Lighthouse operations
- Running on the AWS platform
- Providing aws-cli tools for interaction with AWS
- Loading the provided SSH key for the root user
- Running custom scripts on startup (see above)
- Providing a root password via userdata (see above)

At this time Lighthouse does not support:

- Using AWS's database services
- Using AWS's redis services
- Using any of AWS's scalability functionality

Note: If you want to deploy Lighthouse across different AWS regions an AMI will be needed in each region. [Amazon supports copying AMIs between regions and offers a walkthrough of the necessary steps to do this.](#)

LAUNCH A LIGHTHOUSE INSTANCE ON AWS

Once the Lighthouse AMI has been created, it will display in the Amazon Machine Images (AMIs) section of the EC2 Management Console.

To create a new Lighthouse EC2 instance, select the Lighthouse AMI then "Launch instance from AMI".

Instance Type

Lighthouse should run on a general purpose instance type, such as M5.

Note: If an instance type that supports "burstable" CPU such as T2 is used, please ensure that unlimited CPU is selected, to avoid operational problems caused by CPU throttling.

Key Pair

EC2 requires a key pair to be specified when launching instances.

Network Settings

A security group should be created. Lighthouse requires some ports to be open:



- SSH (TCP/22) – Secure Shell. Access should be limited to just your corporate network.
- HTTPS (TCP/443) – Lighthouse Web UI and REST API. This is used by both web browsers and nodes (eg, for call-home enrollment).
- OpenVPN (UDP/1194) – Lighthouse VPN. This is used to communicate with nodes once they are enrolled.
- Other ports may need to be opened, depending on feature usage. For example
 - SNMP (UDP/161) – SNMP Management
 - OpenVPN (UDP/1195) – Lighthouse Multiple Instance VPN
 - HTTPS (TCP/8443) – Alternate REST API port

Storage

By default, the root volume will be around 53 GiB. This may be sufficient, depending on your intended usage. It is easier to specify more storage now, but more can be added later.

Advanced Details

An initial root password must be set in the `UserData` section.

```
password=topSecretPassword123
```

If the user does not specify the root password in the Advanced Details section they can set the root password using the `ogpasswd` utility.

SET A PASSWORD FOR THE ROOT USER ON LIGHTHOUSE

If you are logged into Lighthouse via SSH keys, you will need to set root password to login via GUI. Use the "ogpasswd" utility to do this.

```
ogpasswd -u root -p MySecretPassword
```



FINAL STEPS

When done, the EC2 Linux instance can be shut down and removed or saved for creating future instances.

Note: The root password must be specified in the **Advanced Details**.

ADDING DISK SPACE TO LIGHTHOUSE

Additional physical volumes can be added to the volume group as required, and the logical volumes extended using `lvextend` and `resize2fs` to take advantage of the additional space.

Before you add disk space:

- Ensure you take a backup of Lighthouse
- In the case of a multiple instance Lighthouse installation, consider upgrading all instances, not merely the primary instance.

ADDING A NEW DISK TO AWS

Launch a Lighthouse instance as per our guidelines or your own deployment processes and note the instance ID.

To add a volume to an AWS Lighthouse without having to shut down the Lighthouse:

1. In the AWS web console, go to **Volumes** and create a new 50GB volume in the same availability zone as your LH instance.
2. Once the volume is created, select it and click the **Actions** button and select **Attach Volume**.
3. Enter the LH instance ID for the instance field and `/dev/xvdb` (or `/dev/xvdd`, `/dev/xvde` and so on) as the device and click **Attach**.

When you SSH into the LH you should be able to see the new volume as `/dev/xvdb` (or whatever device name you gave it).

ADDING A NEW DISK - QEMU SPECIFIC INSTRUCTIONS

Launch a qemu Lighthouse instance as per our guidelines or your own deployment.

To add a volume to the instance:

1. Shutdown the instance with the following command:

```
shutdown -h now
```

2. Create a new disk for the LH. You can use a different number for “count” which is in MiB.

```
dd if=/dev/zero of=/tmp/new_lh_disk.lh_hdd bs=1024k  
count=256  
qemu-img convert -p -f raw -O qcow2 /tmp/new_lh_disk.lh  
/tmp/new_lh_disk.qcow2
```

3. Restart your qemu instance but make sure to add the new `qcow2` disk to the command.

Here is an example of what you should add to your qemu command when launching the instance:

```
-drive if=scsi,file=/tmp/new_lh_disk.qcow2
```

Note: This is just an example. You should specify the disk in a similar way to how you specified the primary Lighthouse disk. and you should make sure that the new disk is specified last, otherwise your disk will appear out of order when you boot the Lighthouse.

4. Once the LH boots you should have a new `/dev/sdX` device and the 'unused_disks' command should report that disk when you log in.

ADDING A NEW DISK - AZURE

Launch the LVM Lighthouse instance as per our guidelines or your own deployment.

To add a volume to the instance, use the following link to attach a new disk to your Lighthouse VM. Stop before you reach the section, "Connect to the Linux VM to mount the new disk."

<https://docs.microsoft.com/en-us/azure/virtual-machines/linux/attach-disk-portal>

ADDING A NEW DISK - HYPER-V

1. Launch the LVM Lighthouse instance as per our guidelines or your own deployment. To add a volume to the instance:
2. Shutdown your Hyper-V Lighthouse instance.
3. Open your Hyper-V manager.
4. Navigate to the VM list and locate your Lighthouse VM.
5. Right click on the instance and click Settings.
6. Click on the SCSI controller.
7. Select Hard drive on the right and click Add.
8. Select Virtual hard disk and click New.
9. Follow the prompts and select the options that best suit your needs and environment.
10. Once you've created the disk, click Apply in the VM settings window.
11. Restart the Lighthouse.

ADDING A NEW DISK - VIRTUALBOX

Launch the LVM Lighthouse instance as per our guidelines from the `.ova` file or your own deployment. To add a volume to the instance:

1. Shutdown the Lighthouse instance.
2. In the VirtualBox UI, locate your Lighthouse instance and right-click it.
3. Select **Settings**.
4. Select **Storage** on the left.
5. Click the **Controller: SCSI** in the disk list.
6. You will see two small icons, both with a green '+' symbol. Hover your mouse over the one that says **Adds a hard disk** and click it.
7. Click the **Create** icon.
8. Follow the prompts to create a new disk image.
9. Select the new disk image and click the **Choose** button.
10. Click **Ok** to exit the VM settings window.
11. Restart Lighthouse.

INCREASE THE LH_DATA LOGICAL VOLUME

1. Add the new disk to the LH VM (platform dependent, see above).
2. Log into the shell on Lighthouse. you should see the new "unused" disk listed in the welcome message. This is the case for any non-system disks aren't currently being used by the LVM system.
3. Create a partition on the new disk:
`fdisk /dev/sdb (or /dev/xvdb, or /dev/(sd|xvd)X`
NOTE: Be sure specify the correct disk, it might be `/dev/xvdb` on AWS.
4. Type 'n' and ENTER to create a new partition.
5. Type 'p' and ENTER to create a primary partition.
6. Continue hitting ENTER to accept the defaults to use the whole disk.
7. Type 'w' and ENTER to write the changes and exit `fdisk`.
8. Add the new partition as a physical volume (assuming you are now using `/dev/sdb1`, note that `/dev/xvdb1` will now be mapped to `/dev/sdb1` so make sure you use `sdb1`).
`pvcreate /dev/sdb1`
9. Extend the volume group with the new physical volume.
`vgextend lhvg /dev/sdb1`
10. Assuming the new disk gives you at least 2GB of extra space, expand the `lh_data` logical volume.
`lvextend -L +2G /dev/mapper/lhvg-lh_data`
11. Update the file system of the `lh_data` disk to use the extra space.
`resize2fs /dev/mapper/lhvg-lh_data`
12. When you log into the shell, the disk should no longer be listed as "unused".

FIRST BOOT OF THE LIGHTHOUSE VM

Note: This section does not apply to Azure or AWS.

During boot, two screens open.

1. The first screen prompts to Select Lighthouse boot mode and displays four options:

- Graphics console boot
- Graphics console recovery mode
- Serial console boot
- Serial console recovery mode

Graphics console boot is preselected and should not be changed. After the first boot has completed a message displays:

```
Welcome to Lighthouse. This is software version:
2024.02.0
```

2. The final step in the initial setup displays:

```
To complete initial setup, please set a new root password.
Press ENTER to continue.
```

3. After pressing **Enter**, a prompt displays:

```
Enter new root password:
```

4. Enter a password and press Enter. Keep in mind that non-US-English keyboards are not supported in the graphics console.

Note: It is recommended that you set a temporary password at this point and change it to a very strong high-entropy password as soon as possible using the WebUI.

5. The confirm prompt displays:

```
Confirm given password
```

6. Re-enter the password and press **Enter**. Multiple configuration notices appear ending with a login prompt:

```
lighthouse login:
```

7. Enter root and press Enter. A password prompt displays:

```
Password:
```

8. Enter the newly-set password and press **Enter**. A standard bash shell prompt displays with the list of static, DHCP, and IPv6 addresses.

```
net1 192.168.0.1/24
net1:dhcp 192.168.1.186/24
net1 fe80::a00:27ff:fe39:daa3/64
root@lighthouse:~#
```



SETTING UP LIGHTHOUSE

This section describes how to set up Lighthouse to monitor and manage your network.

LOADING LIGHTHOUSE

This section describes the initial setup stages for a new Lighthouse VM, from login, to setting external addresses, to setting the clock.

TO LOAD LIGHTHOUSE

1. Open a new browser window or tab, then enter one of the following:

```
https://192.168.0.1/
```

```
https://[DHCP-supplied address]/
```

or an IPv6 address, for example:

```
https://[fe80::a00:27ff:fe39:daa3/64].
```

2. Press **Return**. The Lighthouse Login page loads. A warning message displays because of the default self- signed certificate. You can ignore this at first load, and later install your own valid certificate using **SETTINGS > SERVICES >HTTPS Certificate** to remove the warning message.

LIGHTHOUSE IP ADDRESSES

When the Lighthouse VM is booted and running, it can be reached at:

- The static address, **192.168.0.1**, or
- The address it is assigned by any DHCP server it finds. Type **ifconfig** command to see which IP address the VM has been allocated by DHCP.
- Static IP address on another subnet, requiring IP address, mask, gateway.

Only the first two options are available out-of-the-box. The static IP on another subnet has to be configured first.

If there is no DHCP, and Lighthouse is not reachable on the default address **192.168.0.1** then, the static IPv4 address can be changed from the console using the **ogsetnetwork.sh** command.

```
root@lighthouse:~# ogsetnetwork.sh --help
```

Usage:

```
ogsetnetwork.sh [Use options below to configure a static IP]
-a, --address Static IP address to set
-n, --netmask Netmask for IP address
-g, --gateway Network gateway address
-d, --dns1 Chosen DNS server #1
-D, --dns2 Chosen DNS #2
```

Example:

```
ogsetnetwork.sh -a 192.168.1.24 -n 255.255.255.0 -g 192.168.1.1
```


Tip: Type `ogset<tab>` and tab completion will give you the full command.

LOGGING INTO LIGHTHOUSE

To login to Lighthouse:

1. Enter a username in the **Username** field. The first time you log in, the username will be root.
2. Enter the password in the **Password** field. See ["First Boot of the Lighthouse VM" on page 71](#) for more information.
3. Click **Log In** or press **Enter**. The Lighthouse Dashboard loads.

When you log in, the standard Lighthouse menus, options and panes display:

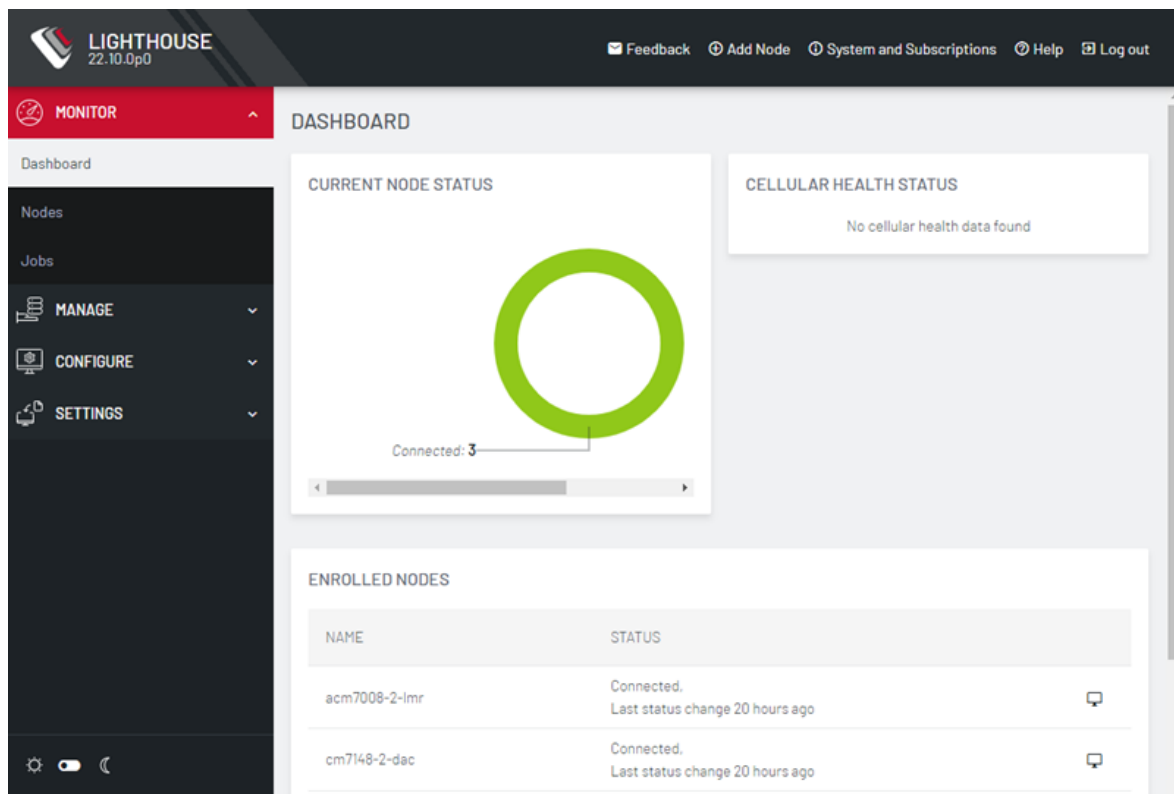

- The primary menu options - MONITOR, MANAGE, CONFIGURE, and SETTINGS

- A light/dark mode toggle on the bottom left of the interface. This control allows you to modify the appearance of the dashboard for low light situations.
- System menu options **Add Node**, **Help**, **System & Subscriptions**, and **Log Out** on the header.
- Various panes - some column headings have Arrow Icons next to them. Click to toggle between ascending and descending order.

Note: The elements that appear on the **Dashboard** page depend on the privileges granted to the currently logged in user. In this guide, screenshots represent what the root user sees.

For root users, the Dashboard displays the following panes; **Enrolled Nodes**, **Cellular Health Status**, and **Current Node Status**.

Click **Cellular Health** to go to **MANAGE > NODES > Node Web UI** page where you can view the **Cellular Health** column with information on each node.


Note: The Cellular Health only displays if Cellular Health reporting is enabled.

Click **Current Node Status** to go to the appropriate page, that is, **Connected**, **Disconnected**, or **Pending Node** pages.

SETTING THE LIGHTHOUSE HOSTNAME

To set the hostname for a running Lighthouse instance:

1. Select **SETTINGS > SYSTEM > Administration**.
2. Edit the **Hostname** field as desired. Hostnames must follow the naming conventions
 - ASCII alphanumeric characters plus - and .
 - Maximum 64 characters

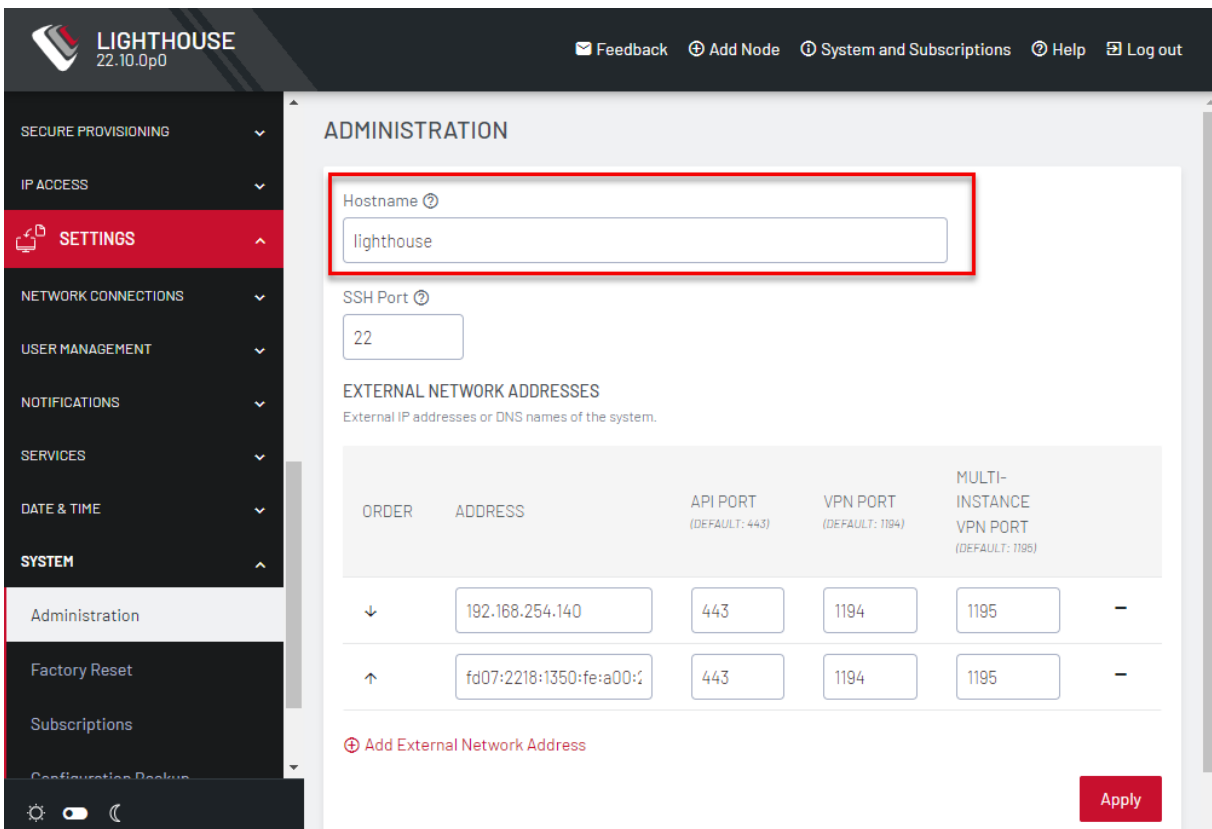

LIGHTHOUSE
22.10.0p0

Feedback Add Node System and Subscriptions Help Log out

SECURE PROVISIONING
IP ACCESS
SETTINGS
NETWORK CONNECTIONS
USER MANAGEMENT
NOTIFICATIONS
SERVICES
DATE & TIME
SYSTEM
Administration
Factory Reset
Subscriptions
Configuration Backup

ADMINISTRATION

Hostname ⓘ
lighthouse

SSH Port ⓘ
22

EXTERNAL NETWORK ADDRESSES
External IP addresses or DNS names of the system.

ORDER	ADDRESS	API PORT (DEFAULT: 443)	VPN PORT (DEFAULT: 1194)	MULTI- INSTANCE VPN PORT (DEFAULT: 1195)	
↓	192.168.254.140	443	1194	1195	—
↑	fd07:2218:1350:fe:a00::1	443	1194	1195	—

+ Add External Network Address

Apply

3. Click **Apply**.


ADDING EXTERNAL IP ADDRESSES MANUALLY

Adding a Lighthouse instance's external IP address or addresses manually to a Lighthouse instance's configuration is an optional step. In general, these should not be changed except by a network support engineer. For more information on the network ports used by Lighthouse, see [this link on the network architecture](#).

Note: IP addresses can be IPv4, IPv6 or DNS names.

To add a single external address:

1. Select **SETTINGS > SYSTEM > Administration**.

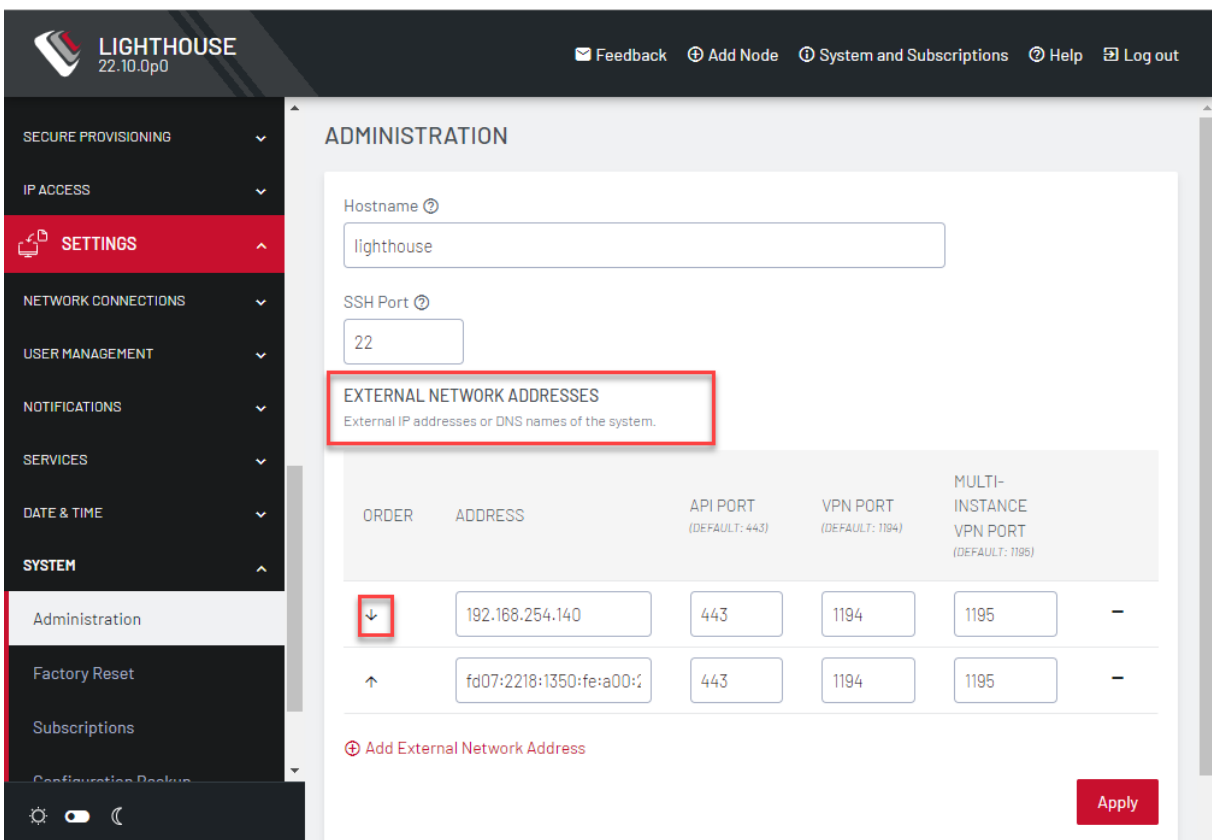

LIGHTHOUSE 22.10.0p0

Feedback Add Node System and Subscriptions Help Log out

SECURE PROVISIONING

IP ACCESS

SETTINGS

NETWORK CONNECTIONS

USER MANAGEMENT

NOTIFICATIONS

SERVICES

DATE & TIME

SYSTEM

Administration

Factory Reset

Subscriptions

Configuration Backup

ADMINISTRATION

Hostname ⓘ

lighthouse

SSH Port ⓘ

22

EXTERNAL NETWORK ADDRESSES

External IP addresses or DNS names of the system.

ORDER	ADDRESS	API PORT (DEFAULT: 443)	VPN PORT (DEFAULT: 1194)	MULTI- INSTANCE VPN PORT (DEFAULT: 1195)	
↓	192.168.254.140	443	1194	1195	-
↑	fd07:2218:1350:fe:a00::1	443	1194	1195	-

+ Add External Network Address

Apply

2. In the **Address** field of the **External Network Addresses** section, enter an IP address or DNS name.
3. Change the **API Port**, **VPN Port**, or **Multi-Instance VPN Port** if the ports used on the entered IP address are different from the default settings.
4. Click **Apply**.

To add further external addresses to a Lighthouse instance's configuration:

1. Click the **+** button. A second row displays in the **External Network Addresses** section.
2. In the **Address** field, enter an IP address.
3. Change the **API Port**, **VPN Port**, or **Multi-Instance VPN Port** if the ports used on the entered IP address are different from the default settings.
4. Click **Apply**.

To change the order in which manually added IP addresses are sent to remote nodes:

1. Click the **up** and **down** arrows in the **Order** column to change the order in which the IP addresses are listed.
2. Click **Apply**.

If external IP addresses are manually added to a Lighthouse configuration, these addresses are sent to a remote node during enrollment. If no external IP address is manually added, default external IP addresses are used.

The external IP addresses are sent to a remote node during Enrollment in the order configured on the **SETTINGS > System > Administration** page.

THE LIGHTHOUSE SSL CERTIFICATE

Lighthouse ships with a private SSL Certificate that encrypts communications between it and the browser. Most browsers will display a warning message when first trying to access Lighthouse.

Note: If you plan to use the Lighthouse **multiple instance** feature, the certificate will be used on all instances. In this case, we recommend using a wildcard certificate.

To examine this certificate or generate a new **Certificate Signing Request**:

1. Select **SETTINGS > SERVICES > HTTPS Certificate**. The details of the **Current SSL Certificate** appear.
2. Below this listing is a **Certificate Signing Request** form, which can be used to generate a new SSL certificate.

SET THE LIGHTHOUSE INTERNAL CLOCK

Lighthouse and Node system times need to be in sync. Enrollment can fail if there is a significant difference between the Lighthouse and the node. It is recommended that you use an NTP server to automatically manage date and time.

If using multiple instances, configure the time zone for the secondary instances before adding them as secondary instance. The only way to change the time zone after adding a secondary instance is to use the CLI.


To set the time zone:

1. Select **SETTINGS > DATE & TIME > Time Zone**.
2. Select the Lighthouse instance's time-zone from the **Time Zone** drop-down list.
3. Click **Apply**.

Set time automatically

It is highly recommended that you use an NTP Server to automatically manage date and time:

1. Select **SETTINGS > DATE & TIME > Automatic Settings**.

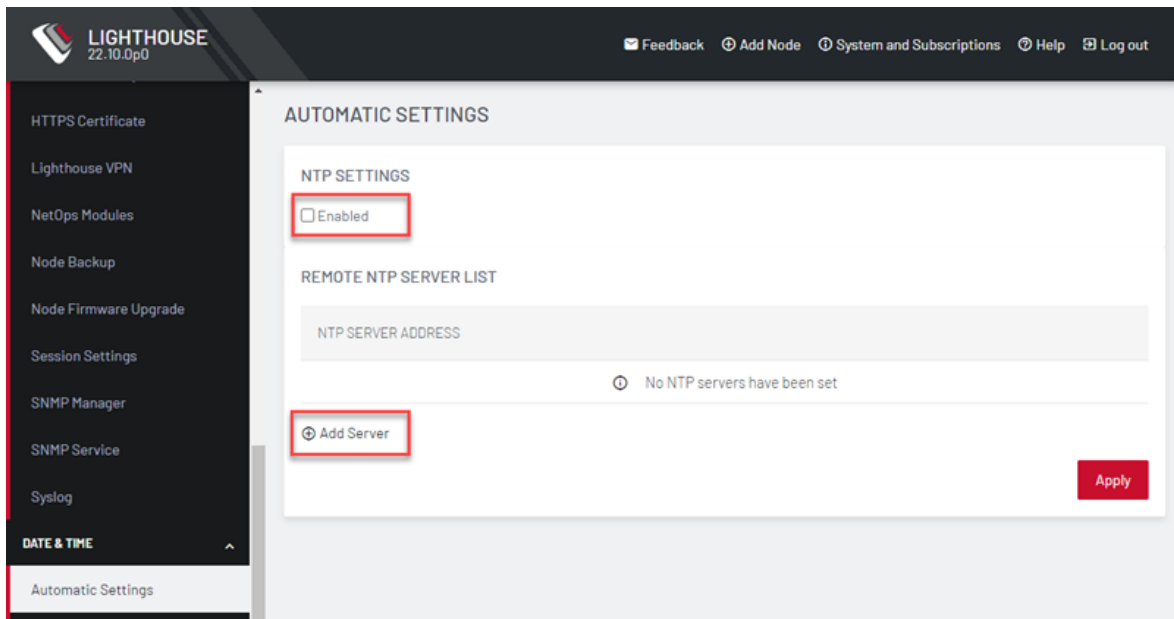

2. Click the **Enabled** checkbox.
3. Click on **+ Add Server**.
4. Enter a working NTP Server address in the **NTP Server Address** field.
5. Click **Apply**.

SETTING UP NETWORKING REQUIREMENTS

This section outlines the basic steps to setup networking requirements for Lighthouse including:

- Lighthouse Session Settings
- MTU of the Lighthouse VPN tunnel
- Network connection
- SNMP Manager Settings
- SNMP Service
- Cellular Health Settings
- Lighthouse MIBs

EXAMINE OR MODIFY THE LIGHTHOUSE SESSIONS

To modify Web and CLI session settings select **SETTINGS > SERVICES > Session Settings**.

- **Web Session Timeout:** This value can be set from 1 to 1440 minutes.
- **CLI Session Timeout:** This value can be set from 1 to 1440 minutes or set it to 0 to disable the timeout. Changes take effect the next time a user logs in via the CLI.
- **Enable additional Enrollment-only REST API port:** This port defaults to 8443. Enabling this API allows users who are using NAT for the Lighthouse to expose an external port publicly only for nodes that are attempting to enroll to the Lighthouse, and not for the other functionality available from the REST API. After this option is disabled, all endpoints should be accessible as per normal usage.

EXAMINE OR CHANGE LIGHTHOUSE VPN NETWORK SETTINGS

The VPN network ranges for Lighthouse VPN (LHVPN) and Smart Management Fabric (SMF) can be set up or modified as follows:

On the Lighthouse dashboard, navigate to **SETTINGS > SERVICES > Lighthouse VPN**.

Set/Modify the following fields:

- **ADDRESS SPACE:** The range to be used for the VPN. This field has the following validation: The Address Space must be in the IPv4 Private Address Space, subnet must have enough space for the existing Enrolled Nodes to Lighthouse, cannot overlap with an existing subnet across lighthouse and the base address for the network range.
- **CIDR SUBNET MASK:** The Classless Inter-Domain Routing notation for the subnet mask for the VPN network.
- **CALCULATED NODE CAPACITY:** An auto-calculated field with the total number of usable nodes. The node capacity for Smart Management Fabric (SMF) will be smaller as it requires Lighthouse to reserve address spaces to be used internally.

The **Maximum Transmission Unit (MTU)** setting can be configured for traffic through the Lighthouse VPN.

The MTU is the size, in bytes, of the largest packet supported by a network layer protocol, including both headers and data.

To modify the MTU of the Lighthouse VPN tunnel select **SETTINGS > SERVICES > Lighthouse VPN**.

Allowed values are between 1280 and 1500.

VPN Network Range

ADDRESS SPACE	CIDR SUBNET MASK	CALCULATED NODE CAPACITY
<input type="text" value="192.168.128.0"/>	<input type="text" value="19"/>	8190

Tunnel MTU ⓘ

Smart Management Fabric Network Range

ADDRESS SPACE	CIDR SUBNET MASK	CALCULATED NODE CAPACITY ⓘ
<input type="text" value="10.0.0.0"/>	<input type="text" value="19"/>	7808

Smart Management Fabric MTU ⓘ


Apply

Note: The Smart Management Fabric (SMF) MTU is based on a fixed offset off the LHVPN MTU.

NETWORK CONNECTIONS

To see the network connections available to Lighthouse:

1. Select **SETTINGS > NETWORK CONNECTIONS > Network Interfaces**.

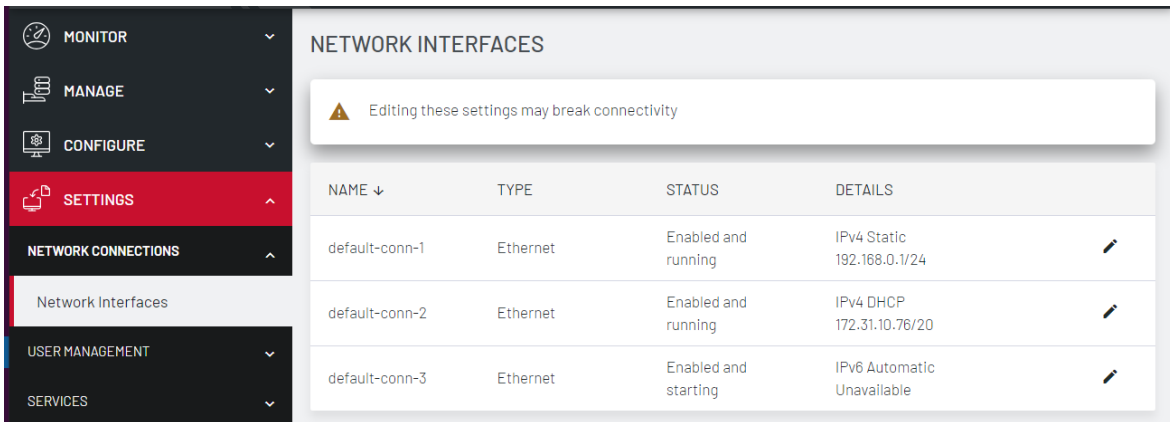


NAME ↓	TYPE	STATUS	DETAILS
default-conn-1	Ethernet	Enabled and running	IPv4 Static 192.168.0.1/24
default-conn-2	Ethernet	Enabled and running	IPv4 DHCP 172.31.10.76/20
default-conn-3	Ethernet	Enabled and starting	IPv6 Automatic Unavailable

2. The **Details** column displays connections of three types:
 - a. Static interfaces
 - b. DHCP IPv4 interfaces and by default,
 - c. An automatic IPv6 connection.
3. Click the Edit icon to view the status and change the connection details such as the following on the Static interfaces:
 - IPv4 Address
 - IPv4 network Mask
 - Gateway
 - Primary DNS Server
 - Secondary DNS Server

Note:Editing the network settings may break connectivity.

EDIT A NETWORK INTERFACE

1. Select **SETTINGS > NETWORK CONNECTIONS > Network Interfaces**.
2. Click the **Edit** icon to the right of the network interface to be modified.
3. Make the desired changes.
4. Click **Apply**.

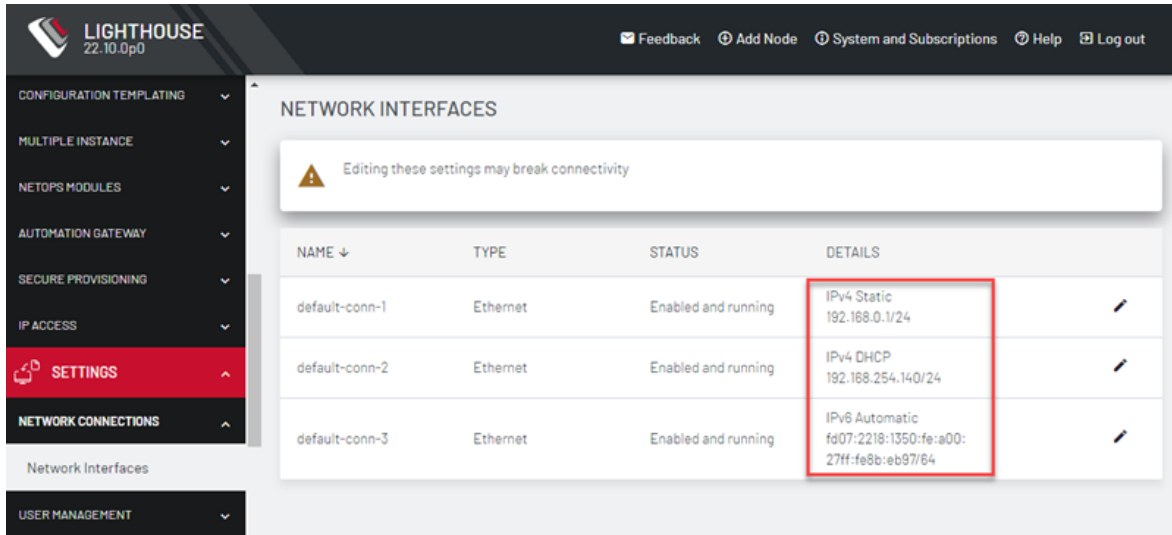




LIGHTHOUSE 22.10.0p0

Feedback Add Node System and Subscriptions Help Log out

CONFIGURATION TEMPLATING
MULTIPLE INSTANCE
NETOPS MODULES
AUTOMATION GATEWAY
SECURE PROVISIONING
IP ACCESS
SETTINGS
NETWORK CONNECTIONS
Network Interfaces
USER MANAGEMENT

NETWORK INTERFACES

⚠ Editing these settings may break connectivity

NAME ↓	TYPE	STATUS	DETAILS	
default-conn-1	Ethernet	Enabled and running	IPv4 Static 192.168.0.1/24	
default-conn-2	Ethernet	Enabled and running	IPv4 DHCP 192.168.254.140/24	
default-conn-3	Ethernet	Enabled and running	IPv6 Automatic fd07:2218:1350:fe:a00: 27ff:fe8b:eb97/64	

Note: Do not change the **Connection Type** of default network interfaces. If a default interface is not required, edit the interface and uncheck the **Enabled** checkbox.


Instead, disable the interface which will not be used by unchecking the **Enabled** checkbox. If **default-static** and **default-DHCP** are changed to the same configuration method (that is, if both are set to **Static assignment** or both are set to **DHCP**) neither interface works.

CONFIGURE SNMP MANAGER SETTINGS

Administrative users can configure the **Simple Network Management Protocol** (SNMP) Manager settings. The SNMP Manager allows SNMP TRAP/INFORM messages to be sent from Lighthouse to a configured server any time a node connection status is changed.

To enable the SNMP Manager:

1. Select **SETTINGS > SERVICES > SNMP Manager**.

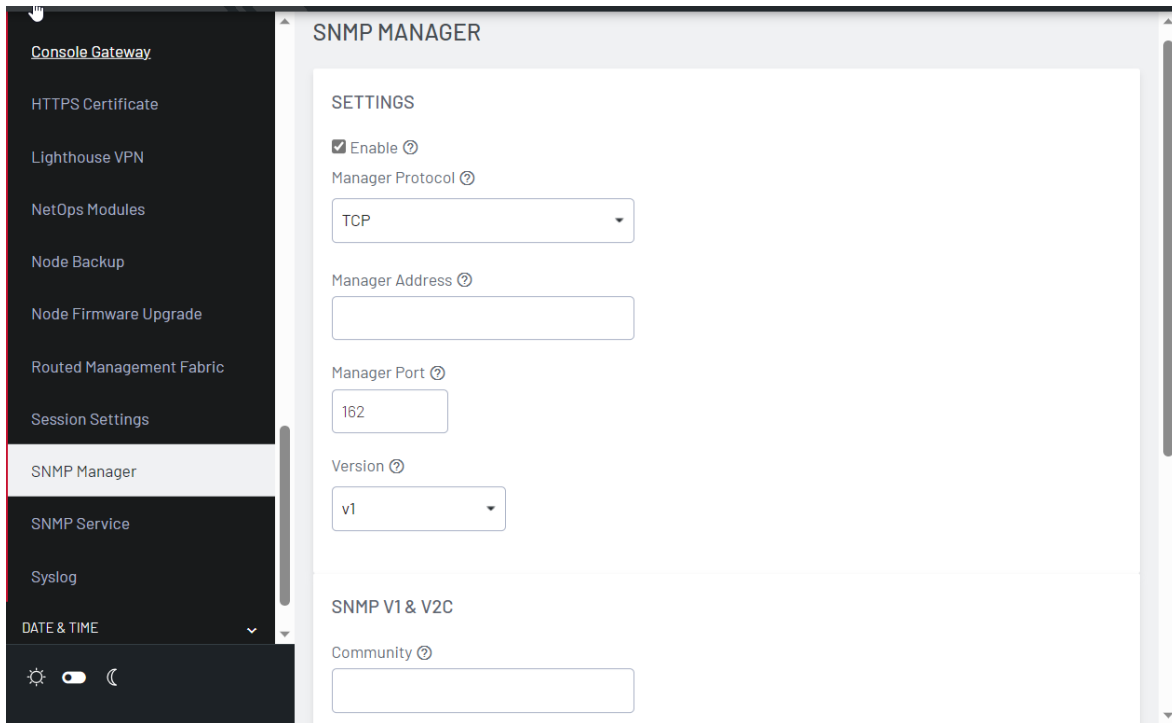

2. Under the **Settings** section, select the **Enable** checkbox.
3. In the **Manager Protocol**, select UDP, or UDP over IPv6, TCP, or TCP over IPv6.
4. Enter the **Manager Address** to receive SNMP messages.
5. Enter the **Manager Port**.
6. From the SNMP protocol **Version** select v1 or v2c or v3.

Depending on the selected SNMP **Version**, complete the following steps.

For **v1**, enter the **SNMP Community** to use for messages.

For **v2c**:

1. Select TRAP or INFORM as the **SNMP Message Type**.
2. Enter the **SNMP Community** to use for messages.

For **v3**:

1. Choose TRAP or INFORM as the **SNMP Message Type**.
2. Specify an optional **Engine ID** for sending an SNMP TRAP message. If left blank, the auto-generated Engine ID from the SNMP Service will be used. An Engine ID is not needed for an SNMP INFORM message.
3. Enter the SNMP v3 **Engine ID** and desired Configure SNMP Manager Settings.
4. Enter the **Username** to send the messages as, select the **Authentication Protocol**, either MD5 or SHA, and enter the SNMP user's **Authentication Password**.
5. Choose a **Privacy Protocol**, either DES or AES, and enter a **Privacy Password**.

For all three SNMP versions, trigger TRAP/INFORM notifications by checking either or both of the Node Connection Status and the Node Cellular Health Status checkboxes. Click Apply.


When a node connection status changes, a nodeStatusNotif notification is sent, populated with data about the node's connection status, address and name.

For information on Structure of notifications for Opengear nodes, refer to **OG-LIGHTHOUSE-MIB.mib**.

EXAMINE OR MODIFY SNMP SERVICE

Administrative users can configure SNMP settings under **SETTINGS > SERVICES > SNMP Service**.

Lighthouse supports both v1/v2 and v3 SNMP versions, which can be running at the same time. The SNMP service is not enabled by default. The SNMP service starts after it has been configured correctly. If the user does not provide an **Engine ID**, an auto-generated ID displays. Lighthouse Health statistics (load/uptime/memory usage, etc.) can be retrieved.

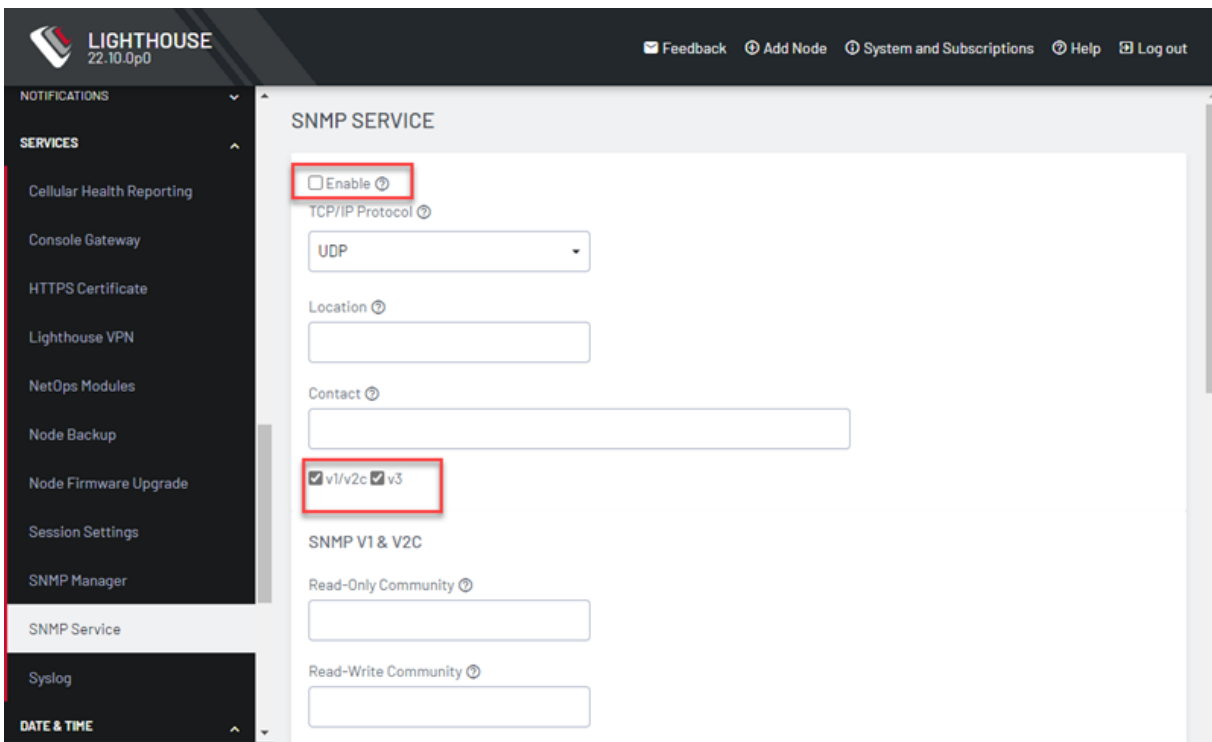

The screenshot shows the Lighthouse web interface for configuring the SNMP Service. The left sidebar lists various services, with 'SNMP Service' selected. The main panel displays the 'SNMP SERVICE' configuration. Key elements include:

- Enable** checkbox: Checked and highlighted with a red box.
- TCP/IP Protocol**: Set to 'UDP'.
- Location** and **Contact**: Empty text input fields.
- v1/v2c** and **v3** checkboxes: Both checked and highlighted with a red box.
- SNMP V1 & V2C** section: Contains 'Read-Only Community' and 'Read-Write Community' text input fields, both of which are empty.

To enable SNMP Service:

1. Select the **Enable** checkbox.
2. Choose from the **v1/v2c** and **v3** checkboxes.



3. Fill in the appropriate information for the SNMP versions.
4. Click **Apply**.

CELLULAR HEALTH SETTINGS

Administrative users can control the cellular health reporting settings under **SETTINGS > SERVICES > Cellular Health Reporting**.




When cell health checks are enabled, the network carrier, IMEI, IMSI and ICCID of the downstream SIM being utilized are part of the information that is displayed in Lighthouse for managed nodes

If a managed node has the modem disabled/off, an appropriate status is shown in Lighthouse for the node.

- Check the **Enable** box to enable Cellular Health monitoring.
- If required, adjust the signal quality ranges corresponding to **Good**, **Bad**, and **Moderate**. This will change the Cellular Health information displayed in various node lists and on the **Dashboard**.
- Adjust how frequently Lighthouse will check the signal quality.
- Finally, you can run a periodic **Cellular Connectivity Test** which will make sure the cellular can actually connect. This will use cellular data.

CELLULAR HEALTH DASHBOARD

The current health status of enrolled nodes can be viewed from the Cellular Health Dashboard: **MONITOR > Dashboard**. Click on a segment of interest to open the **Node Web UI** page which displays Node health information:

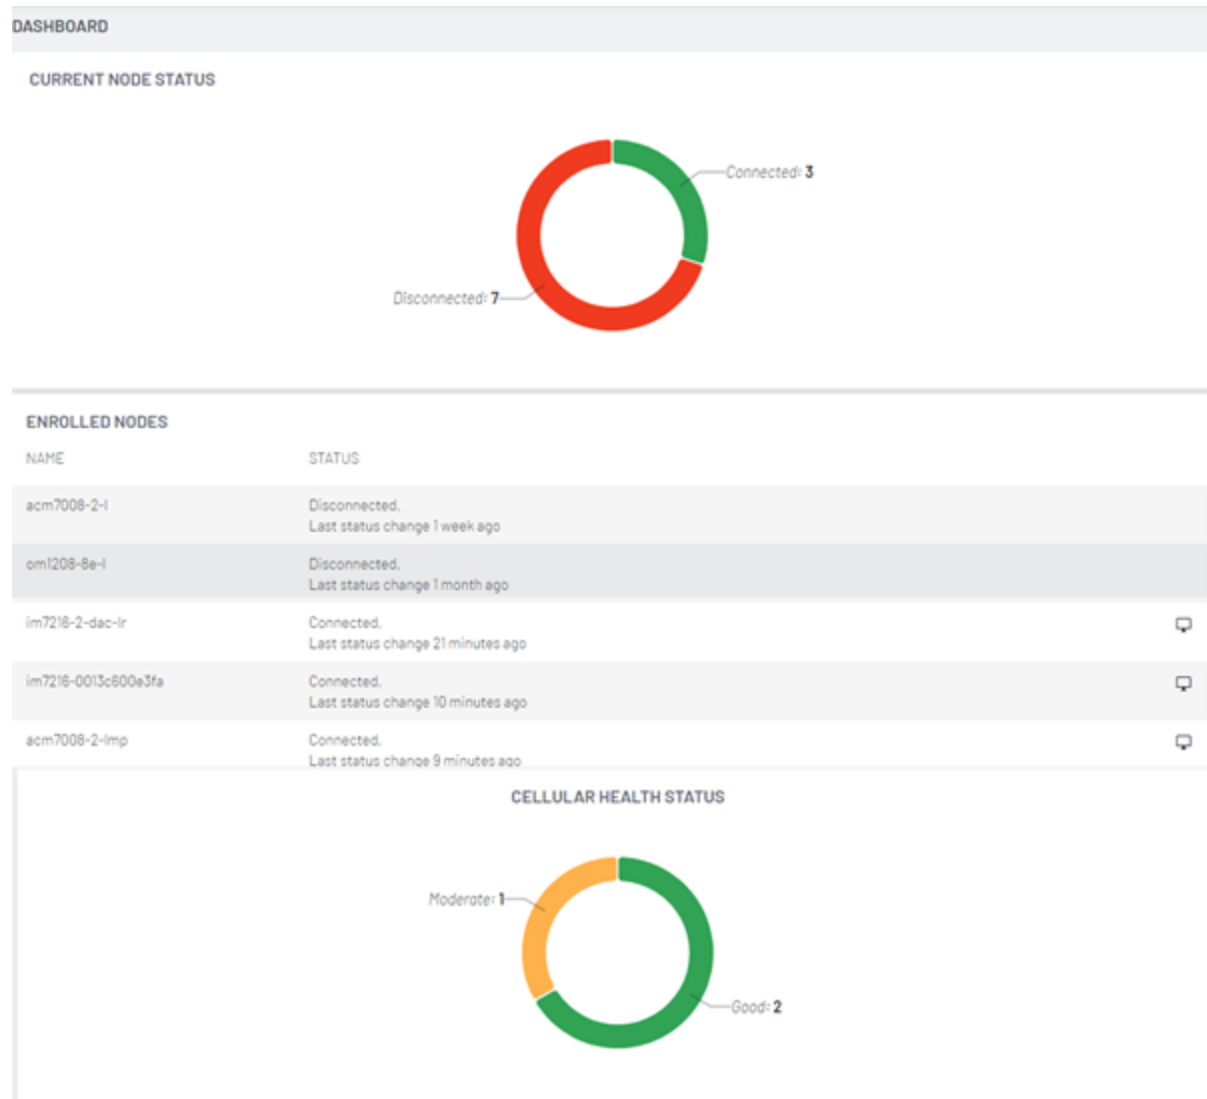

LIGHTHOUSE MIBS

Lighthouse **management information bases** (MIBs) can be found in **/usr/share/snmp/mibs/**.

Lighthouse can be configured to expose managed node information such as node name, node model number, node port label, license status, etc. via SNMP. The MIBs turn the SNMP data into text, that is more readable to human readers.

Some generic information about Lighthouse version and nodes count can be found at:

```
ogLhVersion
ogLhNodes
    ogLhNodesTotal
    ogLhNodesPending
    ogLhNodesConnected
    ogLhNodesDisconnected
    ogLhNodesTable|with detailed information about nodes.
```

Available information for an enrolled Opendgear node

ogLhNodesTable:



- ogLhNodeIndex
- ogLhNodeName
- ogLhNodeModel
- ogLhNodeProductType
- ogLhNodeVpnAddress
- ogLhNodeSerialNumber
- ogLhNodeUptime
- ogLhNodeConnStatus

ogLhNodePortsTable:

- ogLhPortIndex
- ogLhPortLabel
- ogLhPortID

ogLhNodeInterfacesTable:

- ogLhNodeInterfaceIndex
- ogLhNodeInterfaceName
- ogLhNodeInterfaceAddress

Available information for an enrolled third-party node

ogLhThirdPartyNodesTable:

- ogLhThirdPartyNodeIndex
- ogLhThirdPartyNodeSSHPort
- ogLhThirdPartyNodeName
- ogLhThirdPartyNodeModel
- ogLhThirdPartyNodeProductType
- ogLhThirdPartyNodeAddress
- ogLhThirdPartyNodeSerialNumber
- ogLhThirdPartyNodeUptime
- ogLhThirdPartyNodeConnStatus

ogLhThirdPartyNodePortsTable:

- ohLhThirdPartyPortIndex
- ogLhThirdPartyPortLabel
- ogLhThirdPartyPortConnectionMethod
- ogLhThirdPartyPortMode
- ogLhThirdPartyRemotePort
- ogLhThirdPartyPortLineID

To query licensing information:



```
ogLhLicenseStatus:
  ogLhLicInstalled
  ogLhLicSupported
  ogLhLicExpiry
  ogLhLicStatus
  ogLhLicFeatureName
```

To query enrolled node cellular health information:

```
ogLhNodeCellularHealth
```

SNMP commands such as `snmpwalk` or `snmpget` retrieve Lighthouse specific information.

Setup: SNMP is configured with version 1 and public is community string

Lighthouse public IP address is 192.168.1.1

All MIBs, including Lighthouse MIB are available in **/usr/share/snmp/mibs**

EXAMPLES OF LIGHTHOUSE MIB QUERIES USING SNMP:

Walk through the entire **ogLighthouseMib** using name:

```
snmpwalk -m ALL -v1 -c public 192.168.1.1 ogLighthouseMib
snmpwalk -m ALL -M /usr/share/snmp/mibs -v1 -c public 192.168.1.1
ogLighthouseMib
```

Walk through the entire **ogLighthouseMib** using the OID directly:

```
snmpwalk -m ALL -M /usr/share/snmp/mibs -v1 -c public 192.168.1.1
1.3.6.1.4.1.25049.18.1
```

Get the total nodes enrolled in Lighthouse:

```
snmpget -m ALL -v1 -c public 192.168.1.1 ogLhNodesTotal.0
snmpwalk -m ALL -v1 -c public 192.168.1.1 ogLhNodesTotal
```

Get serial number with enrolled node having VPN address 192.168.128.2:


```
snmpwalk -m ALL -v1 -c public 192.168.1.1  
ogLhNodeSerialNumber.192.168.128.2  
snmpget -m ALL -v1 -c public 192.168.1.1  
ogLhNodeSerialNumber.192.168.128.2
```

Get cellular health for all enrolled nodes:

```
snmpwalk -m ALL -c public -v 1 192.168.124.143 ogLhNodeCellularHealth  
OG-LIGHTHOUSE-MIB::ogLhNodeCellularHealth.192.168.128.2 = INTEGER:  
good(4)  
OG-LIGHTHOUSE-MIB::ogLhNodeCellularHealth.192.168.128.3 = INTEGER:  
good(4)  
OG-LIGHTHOUSE-MIB::ogLhNodeCellularHealth.192.168.128.4 = INTEGER:  
bad(2)  
OG-LIGHTHOUSE-MIB::ogLhNodeCellularHealth.192.168.128.5 = INTEGER:  
unknown(0)  
OG-LIGHTHOUSE-MIB::ogLhNodeCellularHealth.192.168.128.6 = INTEGER:  
bad(2)
```


SETTING UP MULTIPLE INSTANCES OF LIGHTHOUSE

This chapter discusses the licensing, setup, configuration, promoting and disconnecting of secondary instances, and upgrading of a multiple instance Lighthouse.

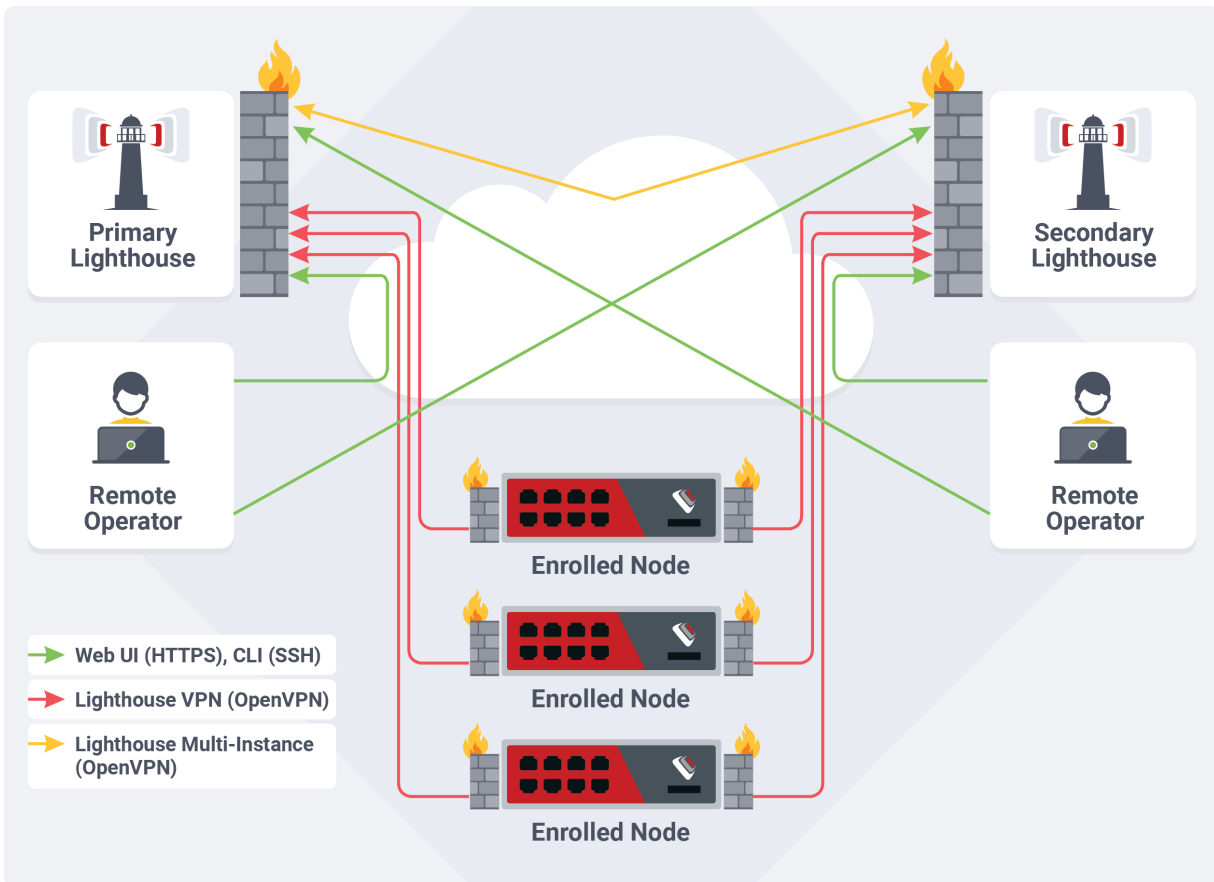

The multiple instance functionality allows you to set up secondary or dependent instances of Lighthouse that automatically receive updates from a primary Lighthouse instance and maintains connections to all its remote nodes.

Secondary instances are read-only. They may be used to view Lighthouse information specific to that instance using `ogconfig-cli`, and to connect via `pmsHELL`.



Configuration changes must be performed on the primary instance, which will then update the information displayed on the secondary instance. For more details, see Lighthouse Architecture in "[Lighthouse Overview](#)" on page 18

SETTING UP A MULTIPLE INSTANCE


Lighthouse supports up to 10 secondary instances for each primary Lighthouse instance. A secondary instance is also known as a dependent instance.

Before you attempt to set up a multiple instance:

- Start with what will be the primary instance and one or more Lighthouse instances to act as secondary. All instances must have the same version of Lighthouse.
- Configure the networking information for each instance (hostname, external endpoints, network addresses, REST API port).
- Configure the time settings of each instance.
- Ensure you have a subscription active on your primary Lighthouse.

To set up a multiple instance feature on the primary Lighthouse:

1. On the primary Lighthouse, click **Configure > MULTIPLE INSTANCE > Dependent Lighthouse Instances**.

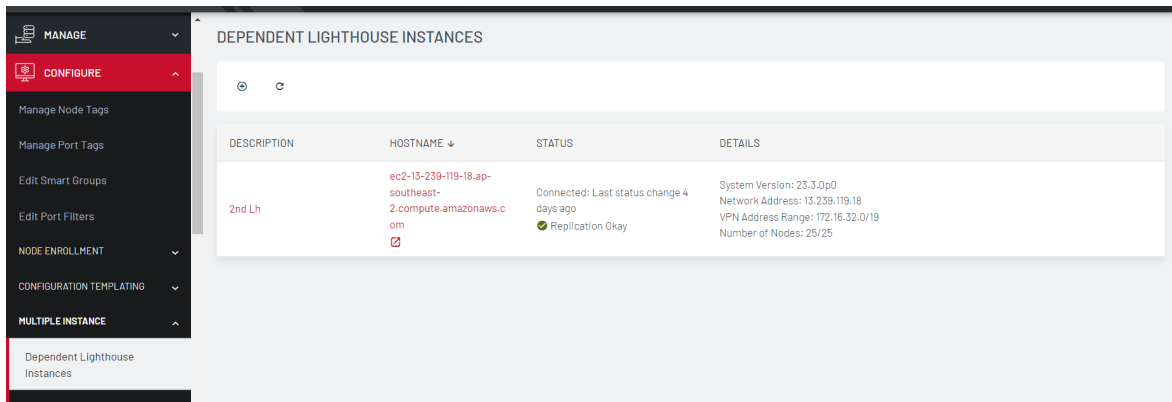

2. **Click Add.** Enter the following details of a Lighthouse instance to enroll it as a secondary instance:

Description


Network address

Network port

Username

Password

In the **VPN Network Range** enter a valid, unused network subnet to use as the dependent lhvpn address range. See ["Configuring Subnets for a Multiple Instance Lighthouse"](#) on page 108.

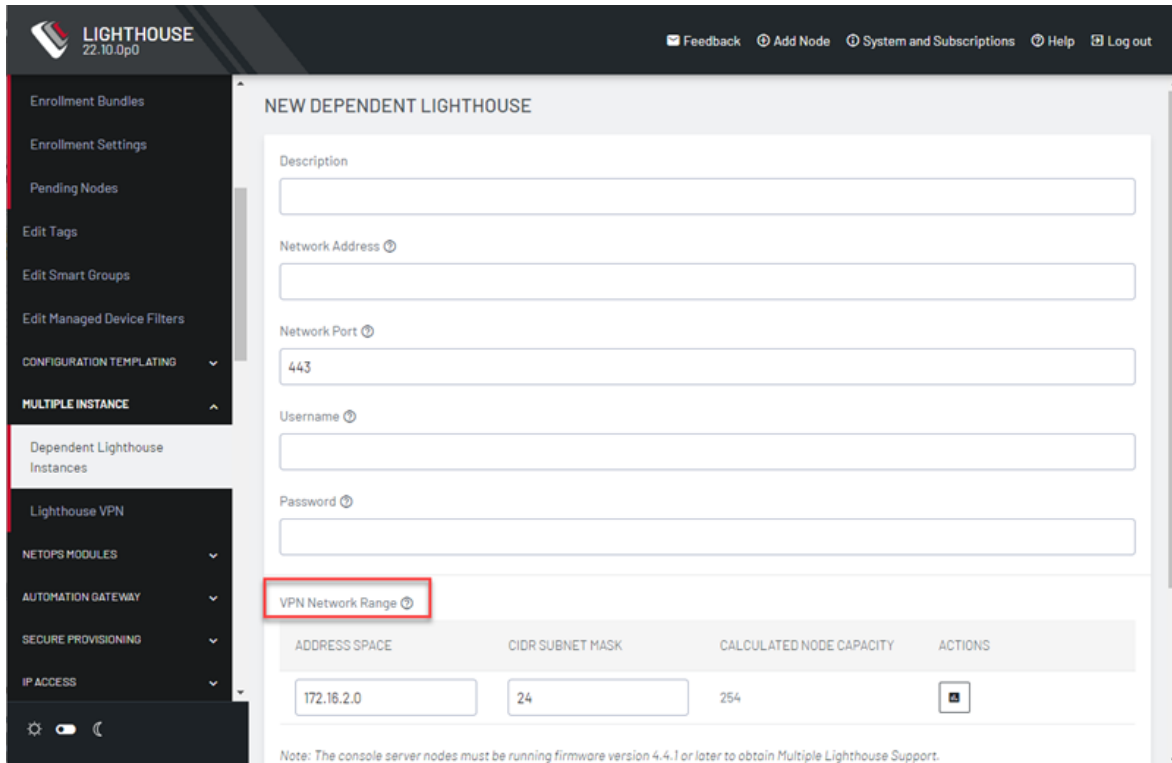

NEW DEPENDENT LIGHTHOUSE

Description

Network Address

Network Port

443

Username

Password

VPN Network Range

ADDRESS SPACE	CIDR SUBNET MASK	CALCULATED NODE CAPACITY	ACTIONS
172.16.2.0	24	254	

Note: The console server nodes must be running firmware version 4.4.1 or later to obtain Multiple Lighthouse Support.

Note: The secondary Lighthouse instance must be able to reach the primary instance on UDP Port 1195.


- If the dependent lighthouse is to be discoverable on the Smart Management Fabric (SMF), enter the **Address Space** and **CIDR Subnet Mask** details in the **Smart Management Fabric Range**.

MULTIPLE INSTANCE ^

Dependent Lighthouse Instances




Lighthouse VPN

NETOPS MODULES v

 **SETTINGS** ^

NETWORK CONNECTIONS v


USER MANAGEMENT v

SMART MANAGEMENT FABRIC NETWORK RANGE

ADDRESS SPACE	CIDR SUBNET MASK	CALCULATED NODE CAPACITY ⓘ
<input type="text" value="10.0.32.0"/>	<input type="text" value="18"/>	15616

Note: The console server nodes must be running firmware version 4.4.1 or later to obtain Multiple Lighthouse Support.

 Settings on the dependent Lighthouse will be overridden.

Cancel

Apply

- Click **Apply**.
- Dependent Lighthouse Enrollment displays status as it moves from **Pending** > **Registered** > **Enrolled**.
- When the VPN connection is established between primary and secondary Lighthouse, this page will display **Connected** with the time since the last status change and **Disconnected** when the connection is lost. Any errors in the Enrollment process will display in the status column.

ENABLING ALTERNATE REST API PORTS


If you are planning to use the alternate REST API ports, you will need to make sure this option is enabled on both the primary and dependent Lighthouse servers, prior to Enrollment of the dependent(s). Lighthouse will prevent the Enrollment of a dependent Lighthouse instance if there is a mismatch in these settings. If this occurs, the message "Lighthouse is using Alternate API port" will be displayed on the Dependent Lighthouse Instances page.

To fix the issue, either

- Enable the Alternate REST API port on both Lighthouse servers, or
- Disable the Alternate REST API port on both Lighthouse servers, then delete the failed Lighthouse Enrollment and try again.

The Alternate REST API Port is configured as follows:

1. Select **Settings > Services > Session Settings**. The page displays:

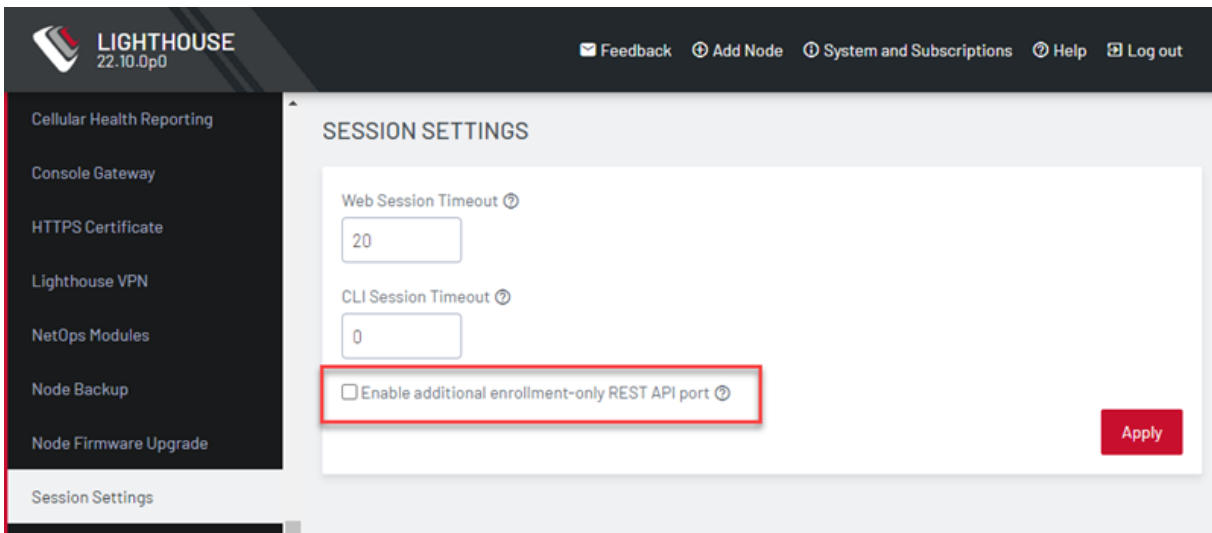

2. Select **Enable additional enrollment-only REST API port**.

Note: The alternate REST API Port for enrollment is 8443

CONFIGURING SUBNETS FOR A MULTIPLE INSTANCE LIGHTHOUSE

A Lighthouse with multiple instance support requires multiple separate subnets for Lighthouse VPN connections:


- Between each instance and its nodes
- Between the primary and dependent Lighthouses.

Note: Each subnet must not overlap any subnet in use by another Lighthouse instance.

CONFIGURING THE SUBNETS

To configure the subnet between the primary Lighthouse and its nodes:

1. Select **SETTINGS > SERVICES > Lighthouse VPN** on the primary Lighthouse.

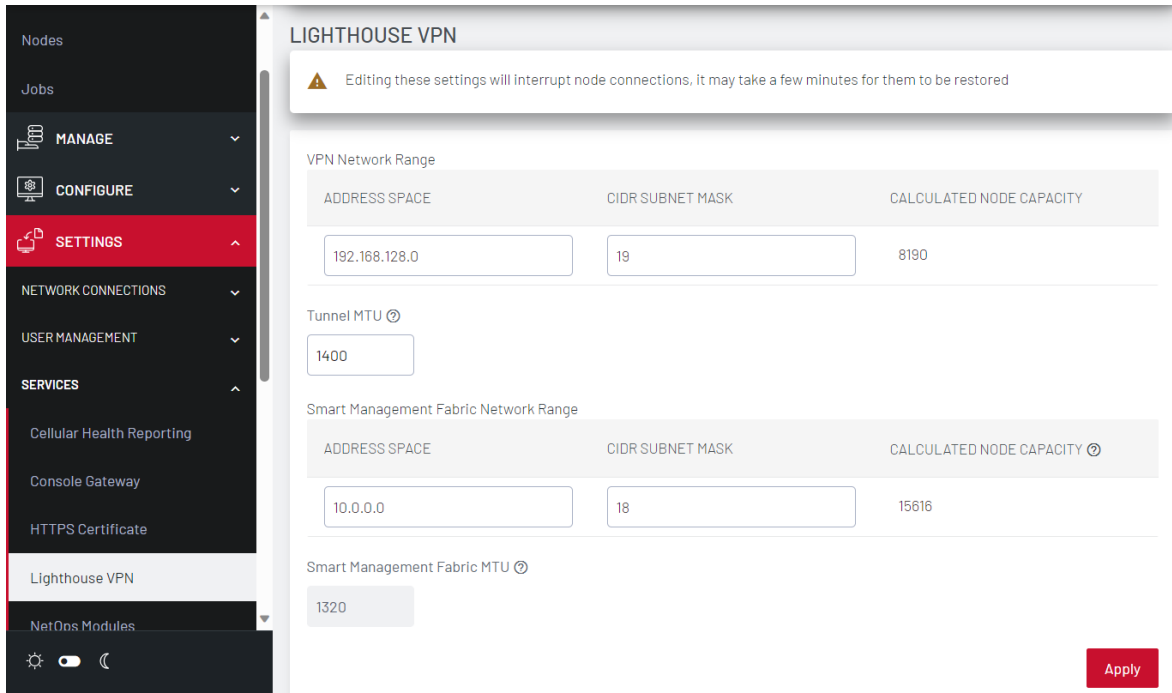

LIGHTHOUSE VPN

⚠ Editing these settings will interrupt node connections, it may take a few minutes for them to be restored

VPN Network Range

ADDRESS SPACE	CIDR SUBNET MASK	CALCULATED NODE CAPACITY
192.168.128.0	19	8190

Tunnel MTU ⓘ

1400

Smart Management Fabric Network Range

ADDRESS SPACE	CIDR SUBNET MASK	CALCULATED NODE CAPACITY ⓘ
10.0.0.0	18	15616

Smart Management Fabric MTU ⓘ

1320


Apply

2. Enter the **Address Space** and **CIDR Subnet Mask**. The **Calculated Node capacity** displays the addressable nodes based on the network.

If the dependent lighthouse is to be discoverable on the Smart Management Fabric (SMF), enter the **Address Space** details in the **Smart Management Fabric Range**.


Note: A dependent Lighthouse is read-only and cannot be modified. The **SETTINGS > SERVICES > Lighthouse VPN** page displays the subnet used by this Lighthouse instance, but it cannot be modified directly.

3. To configure the subnet between each dependent Lighthouse and its nodes select **CONFIGURE > MULTIPLE INSTANCE > Dependent Lighthouse Instances**.
4. The **Dependent Instances** page displays. Click on the name of the dependent Lighthouse to be modified.

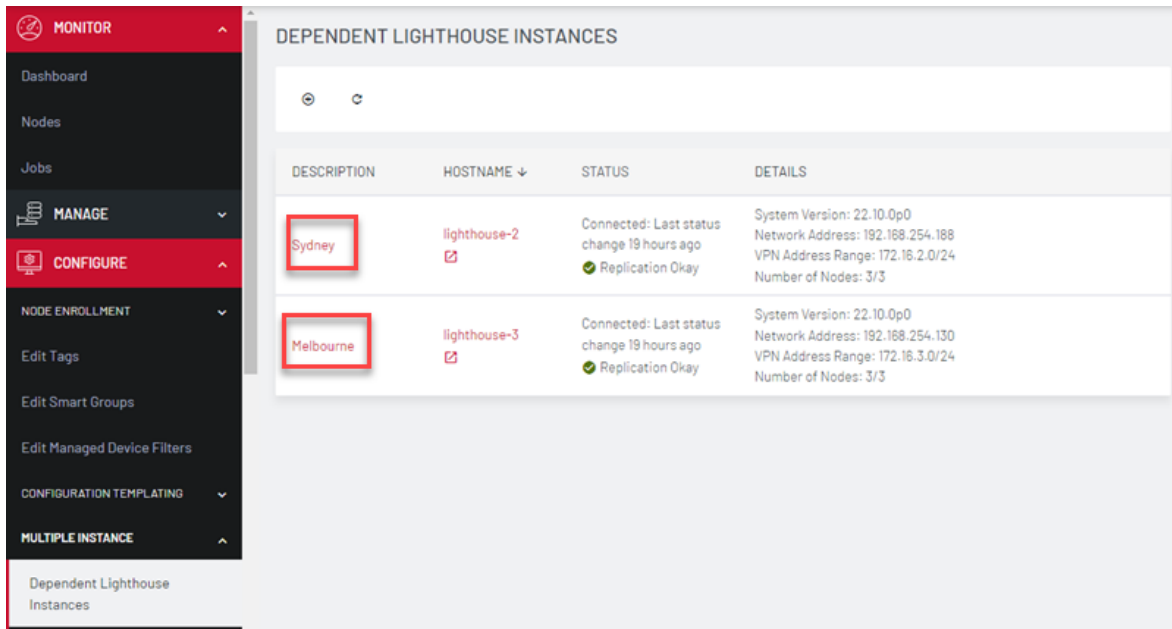

DESCRIPTION	HOSTNAME ↓	STATUS	DETAILS
Sydney	lighthouse-2	Connected: Last status change 19 hours ago Replication Okay	System Version: 22.10.0p0 Network Address: 192.168.254.188 VPN Address Range: 172.16.2.0/24 Number of Nodes: 3/3
Melbourne	lighthouse-3	Connected: Last status change 19 hours ago Replication Okay	System Version: 22.10.0p0 Network Address: 192.168.254.130 VPN Address Range: 172.16.3.0/24 Number of Nodes: 3/3

5. The **Edit Dependent Lighthouse** page displays.

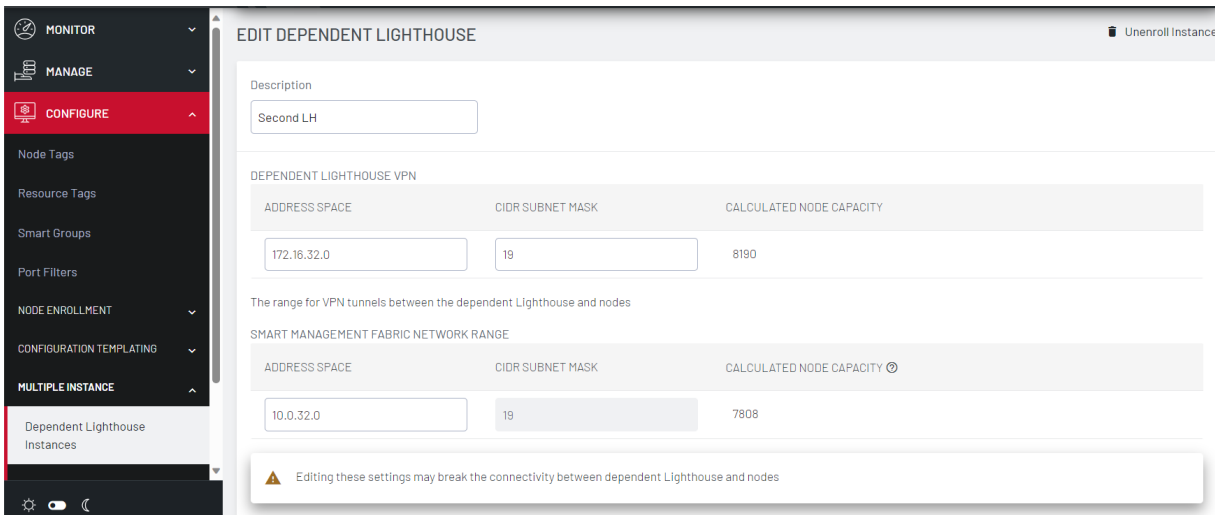

Other information that is specific to dependent Lighthouse should be configured before enrolling but can be modified on the primary Lighthouse via `ogconfig-cli`.

Instance specific information includes:

Hostname.

Time zone.

Networking.

External interfaces.

The instance specific information is available on both the primary and secondary Lighthouses but it is read-only on the secondary Lighthouse.

Configurations of all Lighthouse instances are stored in `lighthouse_configurations`.

These can be viewed via `ogconfig-cli`. The primary instance will have a value of `Primary` for its role, and dependent instances have the value `Secondary`.

The following is an example of the `ogconfig-cli` session:

```
6. root@lighthouse:~# ogconfig-cliogcfg> print lighthouse_con-
  figurations[0].rolelighthouse_configurations[0].role (string):
```



```
'Primary'ogcfg> print lighthouse_configurations[1].rolelight-  
house_configurations[0].role (string): 'Secondary'
```

Alternatively, the command `/usr/bin/is_secondary` will output `n` for a primary Lighthouse or `y` for a secondary.


7. You can modify the configuration of secondary lighthouses from the primary Lighthouse. For example, to update the hostname of the secondary Lighthouse, run the following commands on the primary Lighthouse:

```
ogconfig-cli  
set lighthouse_configurations[1].hostname new_name  
push
```

DISCONNECTING A DEPENDENT INSTANCE

To disconnect dependent Lighthouse instances from the primary Lighthouse:

1. Click **CONFIGURE > MULTIPLE INSTANCE > Dependent Lighthouse Instances**, and click the instance name.
2. The dependent Lighthouse displays. Click the **Unenrol Instance** icon in the top right of the page.

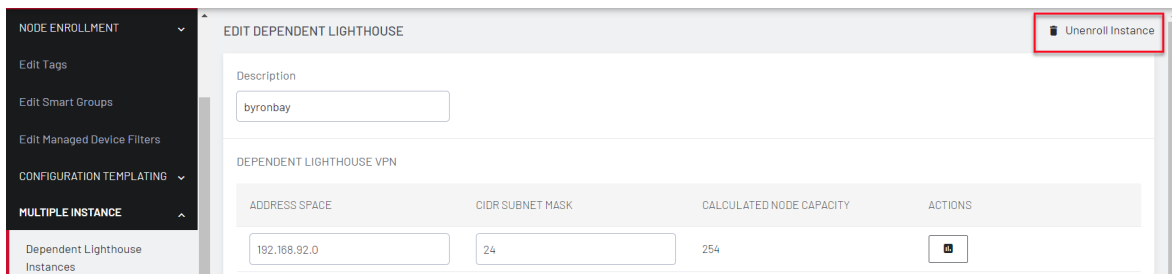

3. Click **Yes** in the message that asks you to confirm.
4. You must manually remove the connection to the dependent Lighthouse from each connected node. Click the **Delete link** in the Console Server.

PROMOTING A DEPENDENT INSTANCE

When a primary Lighthouse is no longer reachable, a dependent Lighthouse instance can be promoted to primary. The new primary can then be used to set up a dependent Lighthouse if required.

Note: This should only be performed if the primary Lighthouse has no chance of returning, the procedure is not reversible and will break all node connections with the previous primary instance. The previous primary instance must be factory reset before it can be used again.

To promote a dependent instance to primary, login as root on the secondary instance via console or ssh and run

```
promote-secondary-lighthouse
```

Remove all dead connections from node side using the node's web UI. The Promotion tool deletes connection between primary and dependent instance but does not touch node connections.

The new primary can then be used to enroll a dependent Lighthouse if required.

Note: If the previous primary becomes accessible again, it will not be able to connect to its enrolled nodes or the previous secondary Lighthouses.

- All scheduled firmware upgrades are cancelled in the event of a dependent Lighthouse promotion, and will need to be rescheduled.
- Firmware files are not replicated among the multiple instance cluster and must be re-uploaded to the new primary after promotion.

UPGRADING A MULTIPLE INSTANCE LIGHTHOUSE

Lighthouse must be upgraded in succession. For example, to upgrade to a version that is several releases newer than your current release, you will need to install all the major releases in between to install the newest one.

Before a multiple instance upgrade is attempted, compatibility and status checks are performed on primary/secondary instances to pre-empt possible failure points.

Secondary Lighthouse upgrades are performed in parallel (not in a queue) to speed up the overall process of rolling upgrades.

Where there are multiple instances of Lighthouse, when a system upgrade is being performed the status of dependent instances is flagged in the System Upgrade page.


When the primary Lighthouse is updated, any secondary Lighthouses will be updated in a rolling fashion after the primary has successfully booted. If any Lighthouse fails to successfully update along the way, the update will stop.

UPGRADING DEPENDENT MULTIPLE INSTANCES OF LIGHTHOUSE

To upgrade a Multiple Instance Lighthouse:

When the primary Lighthouse is upgraded any secondary Lighthouses will be upgraded in a rolling fashion after the primary has successfully booted. If any Lighthouse fails to successfully upgrade along the way, the upgrade will stop.

Click the **Dependent Lighthouses** link (red text) to view the upgrade process status for dependent Lighthouse nodes. Click **View Job Details** link to see details of the update progress and any problems.

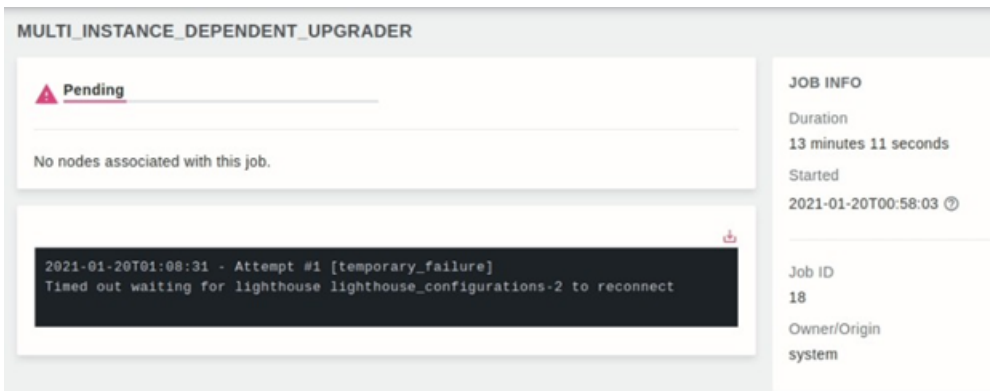

The screenshot shows a web interface for a 'MULTI_INSTANCE_DEPENDENT_UPGRADER'. It features a 'Pending' status with a red triangle icon and a progress bar. Below this, it states 'No nodes associated with this job.' A log window shows a failure message: '2021-01-20T01:08:31 - Attempt #1 [temporary_failure] Timed out waiting for lighthouse lighthouse_configurations-2 to reconnect'. To the right, a 'JOB INFO' sidebar displays: Duration (13 minutes 11 seconds), Started (2021-01-20T00:58:03), Job ID (18), and Owner/Origin (system).

During a system upgrade, notification/status elements are flagged in the following scenarios:

- When an upgrade is attempted, a pass/fail notification on the instance.
- When an upgrade is attempted on a secondary instance, a pass/fail notification on the associated primary instance.

Information about the upgrade progress and status is visible in the Lighthouse **Jobs** page.

ENABLE SMART MANAGEMENT FABRIC (SMF)

Smart Management Fabric (SMF) represents an advanced functionality designed to offer heightened flexibility and accessibility to network and IT professionals throughout the network fabric. It empowers them by facilitating effective orchestration and management through the management network.

As Smart Management Fabric (SMF) expands its reachability through the utilization of OSPF and the integration of OpenGear nodes and Lighthouse for establishing new paths, it is crucial to acknowledge the potential risk of overexposing the network, which could lead to bypassing Layer 2 or Layer 3 access control measures.


While the communication between the Lighthouse and OpenGear nodes, such as OM, is safeguarded through a VPN connection, and the OSPF configuration is carefully restricted and secured, there exists a potential risk when devices like routers and switches under customer autonomy are configured within the OSPF process without adequate diligence. To address and mitigate these risks, the following strategies are recommended:

- Conduct a meticulous examination of networks participating in OSPF advertisement, with a suggestion to implement passive interfaces.
- Execute comprehensive testing and verification to ensure that no routing occurs among networks not involved in Smart Management Fabric (SMF).
- Verify the activation of OSPF authentication to augment network security.

Smart Management Fabric (SMF) uses dynamic link state routing to allow IP connectivity to IT resources that are on connected IPv4 networks that are downstream from the lighthouse:

- via SSH, https (GUI), SPs/BMCs (iLO, iDRAC, etc.).
- via commonly used automation tools such as RDP, Ansible, Python, vCenter.

To implement Smart Management Fabric (SMF) an Automation Edition subscription is required, as well as a supported (23.10 firmware and up) Opengear console server such as Operations Manager.

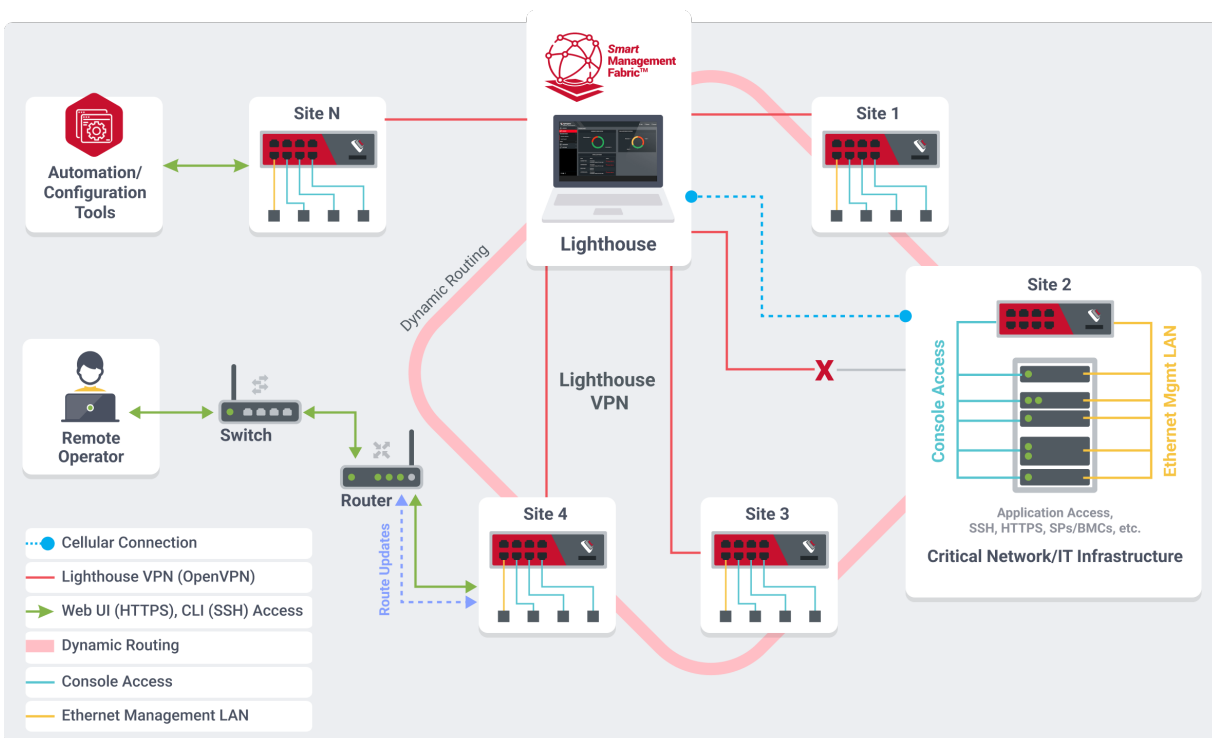


Note: Smart Management Fabric (SMF) is advanced functionality that utilizes dynamic routing protocols. It is crucial to acknowledge the potential risk of overexposing your network.

ENABLING SMART MANAGEMENT FABRIC

After deploying the Lighthouse, set up Smart Management Fabric (SMF) to create an internal network area between Lighthouse and the console servers:

1. Log in to the Lighthouse web UI as a Lighthouse Administrator or the root user.
2. From the menu, select **SETTINGS > Services > Smart Management Fabric**.

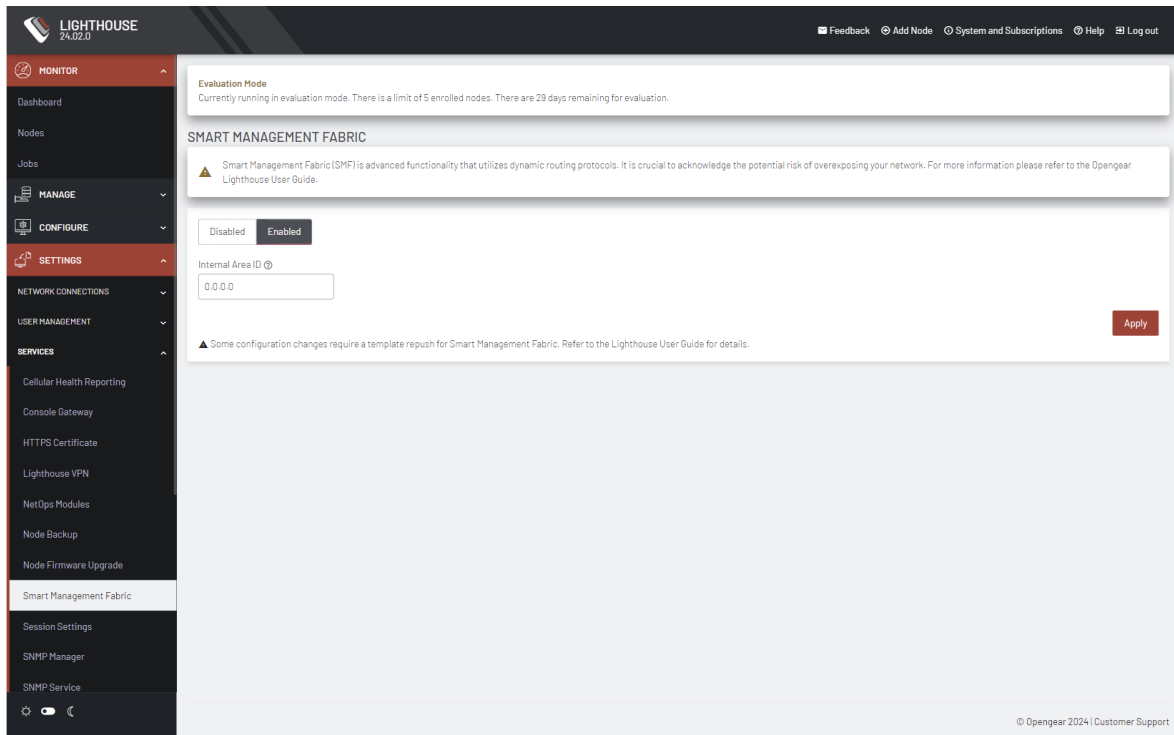

3. Select **Enabled**.
4. Enter the **Internal Area ID** for the backbone area for the internal network. The area is a logical collection of internal networks, routers, and links with the same area identification.

Click **Apply** to enable Smart Management Fabric (SMF) on the selected Lighthouse.

To ensure the Smart Management Fabric (SMF) stays up to date, these are the following scenarios that would require an additional push of configuration after the initial setup:


- Any changes made to Smart Management Fabric (SMF) VPN subnets for the Primary or Multi-Instance Lighthouses



- A new Multi-Instance Lighthouse is added that needed to be apart of the Smart Management Fabric (SMF) network
- Any changes to the Lighthouse VPN for the Primary or Multi-Instance Lighthouse
 - This also includes any subnet changes
 - Any changes to MTU for a specific node.

SMART MANAGEMENT FABRIC (SMF) - A SAMPLE DEPLOYMENT

In this sample, the devices on two separate networks, can connect via Lighthouse, when Smart Management Fabric (SMF) is enabled.

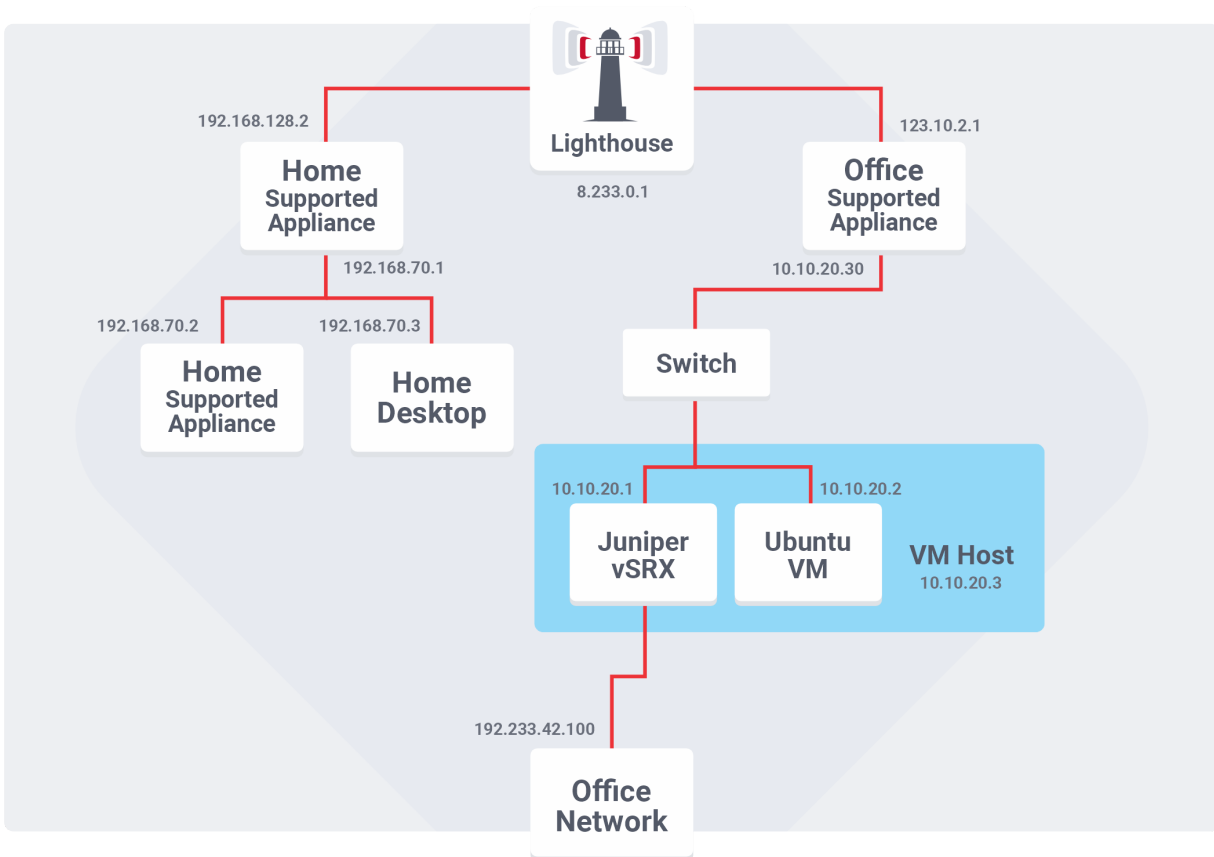

Using Smart Management Fabric (SMF)

To set up Lighthouse as the router for a deployment:

1. Configure the Address space, as described "[Configuring Subnets for a Multiple Instance Lighthouse](#)" on page 108.
2. Enable Smart Management Fabric and provide the internal area id, as described " " on page 116.

3. Configure the Smart Management Fabric templates for the nodes, as described ["Create Smart Management Fabric \(SMF\) Templates" on page 273.](#)

RE-ENABLE SMART MANAGEMENT FABRIC (SMF) TEMPLATES

To ensure that Smart Management Fabric (SMF) connectivity stays up to date, the following scenarios require an additional push of the Smart Management Fabric (SMF) configuration templates after the initial setup:

- Any changes made to Smart Management Fabric (SMF) VPN subnets for the Primary or Multi-instance Lighthouses.
- A new Multi-instance Lighthouse is added that needed to be apart of the Smart Management Fabric (SMF) network.
- Any changes to the Lighthouse VPN for the Primary or Multi-instance Lighthouse
 - This also includes any subnet changes.
- Any changes to MTU for a specific node.

For more information on Smart Management Fabric (SMF) templates, see ["Create Smart Management Fabric \(SMF\) Templates" on page 273](#).

SMART MANAGEMENT FABRIC AND NETOPS INTERACTIONS

The Smart Management Fabric (SMF) feature can be used with the following NetOps features with some caveats:

- IP Access. ["IP ACCESS" on page 407](#)
- Secure Provisioning. See ["Secure Provisioning Configuration" on page 436](#)

Note: Automation Gateway is not compatible with Smart Management Fabric (SMF).

IP ACCESS

The IP Access Subnet Address is not unique and is present on every IP Access enabled node. This will cause routing issues for the Smart Management Fabric if there are multiple IP Access enabled nodes.

SECURE PROVISIONING

The default Smart Management Fabric subnet range conflicts with the Secure Provisioning subnet range, however either change the Smart Management Fabric subnet range before enabling secure provisioning, or change the Secure Provisioning Subnet range before it is deployed.

SECURE PROVISIONING CONFIGURATION.

The Secure Provisioning Subnet is not unique by default so if the default is used on more than one Smart Management Fabric node then it will effectively not be able to route to those Secure Provisioning connected devices.

Customize the Secure Provisioning Subnet by setting a static IPv4 address on the Node's LAN interface before deploying Secure Provisioning. Secure Provisioning will then inherit the subnet range from a static IPv4 address on the node's LAN interface address.

.

UPGRADING LIGHTHOUSE

Lighthouse can be upgraded using a `.lh_upg` image file. Note the following conditions:

- AWS requires `.aws.lh_upg` and Microsoft Azure requires `.azure.lh_upg`. All other platforms use the standard `.lh_upg` file.
- Incremental upgrades to Lighthouse using `lh_upg` files are only supported from 20.Q3.x and not earlier releases.

Note: Upgrades do not overwrite existing configurations or user files, however it is recommended that you perform a Configuration Backup before you upgrade a Lighthouse.

After the upgrade is complete, the Lighthouse instance reboots. It is unavailable during the reboot process.

About the Upgrade Process

Lighthouse performs the following high-level steps to upgrade to the new version

1. Validates the upgrade image, and takes a backup of the current root filesystem and snapshot of data volume
2. Reboots into the new root filesystem (from the upgrade image)
3. Performs data migrations and system re-configurations
4. Commits the changes on success, or reverts on failure
5. For Multiple Instance only, after a successful Primary upgrade: After a 10 minute delay, secondary instances are automatically upgraded in sequence.

Lighthouse uses LVM snapshots to manage storage during upgrade and data migration. If a failure occurs, the snapshot is used to revert the system to its previous state.

PREPARE TO UPGRADE LIGHTHOUSE

While upgrading Lighthouse is a simple process, the following tasks are best practices to ensure a successful upgrade.

- Read the release notes, in particular any known issues or special requirements for the new version
- Provide a sufficiently large maintenance window to start and complete the upgrade. Larger networks and more complex configurations will take more time. You can run `q-stat` to check the job queue status.
- Download the correct upgrade image.
The current release can be found here: [Opengear FTP](#)
Archived releases are available here: [Archives Opengear FTP](#)
- Verify the image integrity by checking against SHASUMS. For example, on Linux

```
$ sha1sum lighthouse-24.02.0.lh_upg
0f52c30a212566030a1742b6e3d5bf9316d89abd lighthouse-
24.02.0.lh_upg
```
- Before starting the upgrade, generate a Technical Support Report. This can assist Opengear support with diagnosing upgrade issues.
- Use the `df` command to display disk usage by filesystem.

```
root@lighthouse:~# df /mnt/data/
```
- Ensure that you have enough disk space in `/mnt/data`. If you have less than 20% disk space available, clean up unnecessary files, or add disk space (see ["Adding Disk Space to Lighthouse" on page 66](#)). If disk space is added to the primary instance, add additional space all secondary instances also.
- Take a Configuration Backup on the Primary Lighthouse. This can be used to restore the system in the event of failure during upgrade.


- Do not make any configuration changes during the upgrade process (includes secondary upgrades).
- Consider taking a Virtual Machine backup. If the Lighthouse storage has been increased (by adding additional physical volumes to LVM) then these must be included in the backup, and all storage volumes must be in sync.
- You can also consider running some technical checks before starting the upgrade to check job queues, memory, temporary filesystem (tmpfs), database integrity, and multiple instance status.

UPGRADING THE SYSTEM FROM WITHIN LIGHTHOUSE

Lighthouse must be upgraded in succession. For example, to upgrade to a version that is several releases newer than your current release, you will need to install all the major releases in between to install the newest one. If you are running a Multiple Instance Lighthouse cluster, the upgrade must be performed through the Primary Lighthouse instance. After the upgrade is complete, the Lighthouse instance reboots automatically. Lighthouse is unavailable during the reboot process.

To upgrade a Lighthouse instance's system using the Lighthouse UI:

1. Select **SETTINGS > SYSTEM > System Upgrade**.
2. Select the **Upgrade Method**, either **Fetch image from HTTP/HTTPS Server** or **Upload Image**.

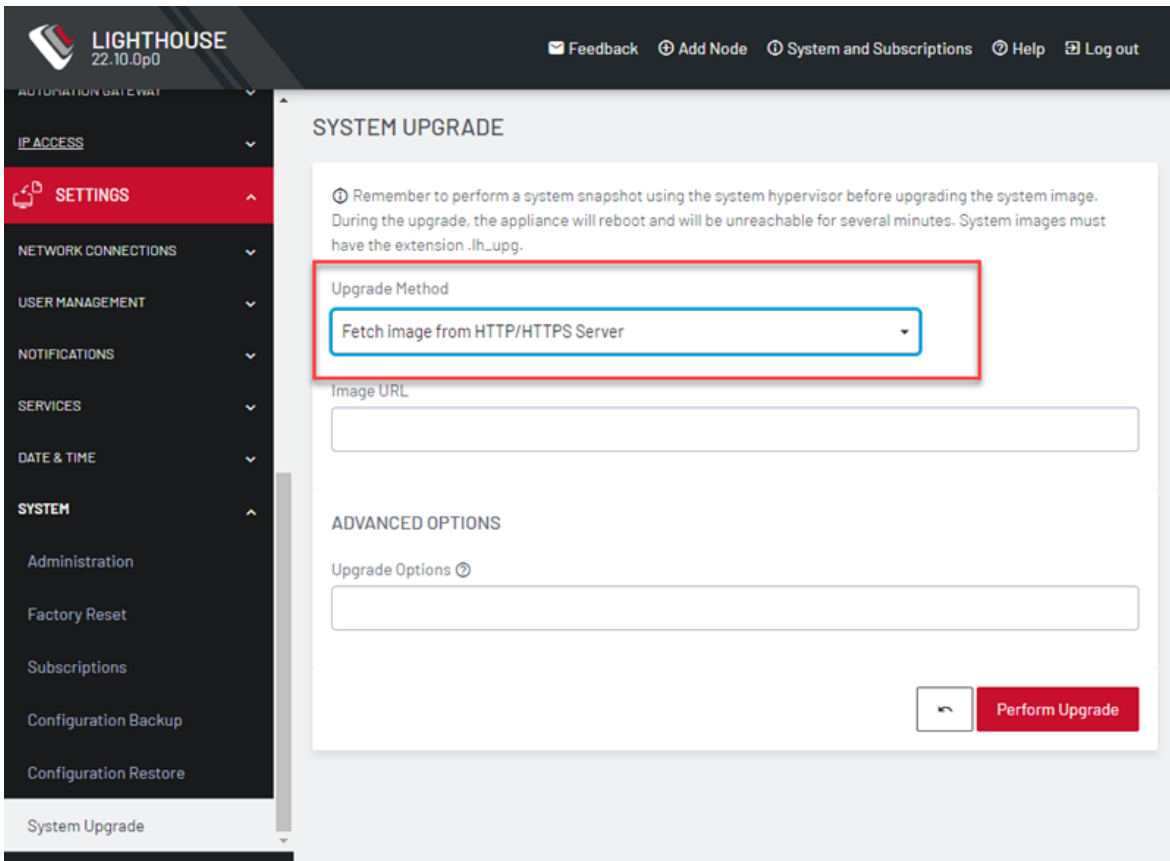

LIGHTHOUSE
22.10.0p0

Feedback Add Node System and Subscriptions Help Log out

SYSTEM UPGRADE

Remember to perform a system snapshot using the system hypervisor before upgrading the system image. During the upgrade, the appliance will reboot and will be unreachable for several minutes. System images must have the extension .lh_upg.

Upgrade Method

Fetch image from HTTP/HTTPS Server

Image URL

ADVANCED OPTIONS

Upgrade Options ⓘ

Perform Upgrade

3. If upgrading via **Fetch image from HTTP/HTTPS Server**:

- a. Enter the URL for the system image in the Image URL text-entry field.
- b. Click Perform Upgrade.

4. Or if upgrading via **Upload Image**:

- a. Click the **Choose file** button.
- b. Navigate to the directory containing the appropriate upgrade image file.
- c. Select the upgrade image file and press **Return**.
- d. Click **Perform Upgrade**.

The **Advanced Options** section, which expands to present an **Upgrade Options** text-entry field, should only be used if a system upgrade is being performed as part of an Opengear Support call.

Once the upgrade has started, the **System Upgrade** page displays feedback as to the state of the process.

A system upgrade attempt returns the error **System version was not higher than the current version** if the selected image file is not a more recent version than the installed version.

UPGRADING THE LIGHTHOUSE SYSTEM VIA THE LOCAL TERMINAL

Lighthouse includes a shell-based tool — `sysflash` — that allows a user with administrative privileges to upgrade the instance's system from the local terminal.

Note: Before using `sysflash`, we recommend that you check available disk space when manually uploading `.lh` upgrade files. We also suggest you use `/mnt/nvram` as the path.

To upgrade Lighthouse instance's system using the Lighthouse local terminal:

1. Select **MANAGE > LIGHTHOUSE > local terminal**.
2. At the `[hostname] login:` prompt, enter an administrator username and press Return.
3. At the `Password:` prompt, enter the administrator's password and press Return.
4. To use `sysflash` with a `.lh_upg` file available via an HTTP or HTTPS server:
At the local terminal bash shell prompt, enter a URL. It must be URL-encoded:

```
sysflash http[s]://%3A%2F%2Fdomain.tld%2Fpath%2Fto%2Ffirmware-upgrade-image.lh_upg
```
5. Press Return.

To use `sysflash` with a `.lh_upg` file available via the local file system:

1. At the local terminal bash shell prompt enter:

```
sysflash /path/to/system-upgrade-image.lh_upg.
```
2. Press Return.

Note: `sysflash` includes several flags that allow for variations in the standard system upgrade process. These flags should not be used unless directed to do so by Opendgear Support.

List the flags by running either of the following at a local terminal bash shell prompt:

```
sysflash -h or
```

```
sysflash --help
```

For more information on `sysflash` see the ["Command line tools" on page 479](#)

TROUBLESHOOTING THE UPGRADE PROCESS

There are two main reason why an upgrade fails:

- Migration failures

Lighthouse will return to the pre-upgrade state. An example of such a failure is malformed data in the database, which does not conform to more stringent schema checks in the new version.

- System level failures

This would include environmental issues such as power loss during the upgrade. If such an issue prevented Lighthouse from rolling back to the previous state, Lighthouse may be left in an unusable state.

Recovering from a failed upgrade

If Lighthouse is in an unusable state (either as a result of upgrade problems, or any other catastrophic failure), you can

- Promote a dependent Lighthouse

This requires multiple instances of Lighthouse. If the primary Lighthouse instance is unreachable, one of the existing dependent instances can be promoted to become the new primary Lighthouse instance.

The old primary Lighthouse instance should be replaced with a fresh installation of Lighthouse. This can then be enrolled as a dependent to the newly promoted primary Lighthouse.

- Restore a Configuration Backup

Deploy a Lighthouse instance with the version you are upgrading from. Restore the configuration backup taken before the failed upgrade.

- Manually retry via the CLI if a dependent upgrade fails.

Determine the reason for the upgrade failure and resolve the issue before retrying the upgrade. Assistance from Opendgear technical support may be required.

TROUBLESHOOTING A FAILED DEPENDENT LIGHTHOUSE UPGRADE

To retry the dependent upgrade, first list the dependent and identify the IDs of the secondary lighthouses that need to be retried by running the `retry_dependent_upgrades list` command.

`retry_dependent_upgrades list` command will list all the dependent lighthouses and their current status, as in the example below:

```
root@lighthouse:~# retry_dependent_upgrades list
ID  UUID                               Hostname  Firmware  Version  Fw  Status  Lighthouse  Status
2   lighthouse_configurations-2        lighthouse-2  22.11.2  not updated
UpgradeFailed
3   lighthouse_configurations-3        lighthouse-3  24.02.0  updated
Enrolled
4   lighthouse_configurations-4        lighthouse-4  22.11.2  not updated
UpgradeFailed
```

In the example above, the Lighthouses with IDs 2 and 4 have failed to upgrade (note that the “Enrolled” status is the desired status). To retrigger an upgrade for those lighthouses run the following command. Ensure that the lighthouse IDs are comma separated:

```
retry_dependent_upgrades trigger -l 2,4
```

The method above is the recommended way but there is a shortcut to retrigger all failed dependent upgrades by running the command below:


```
retry_dependent_upgrades trigger --failed
```

Note: Only one dependent will upgrade at a time.

You should be able to view the dependent upgrade progress in the primary Lighthouse UI as you would for a normal upgrade.

CONTACT SUPPORT

In the unlikely event that Lighthouse does not automatically recover, or your troubleshooting efforts fail, contact Opendgear support for advice. Provide the following:

- If your instance is usable, download a Technical Support Report (from the Help menu) and share it with our team.
- Share the configuration backup taken before the upgrade process.

UPGRADE NETOPS MODULES


NetOps Modules are released independently of Lighthouse software or Operations Manager firmware.

NetOps releases are uploaded to Opengear's file server, where they can be fetched by Lighthouse then deployed to all activated nodes by Lighthouse.


Node upgrades may be carried out through either the Lighthouse UI or the CLI.

PROCEDURE for Lighthouse UI

1. Log in to the Lighthouse web UI as a Lighthouse Administrator or the root user.
2. From the menu, select **SETTINGS > Services > NetOps Modules**. Select either Online or Offline.

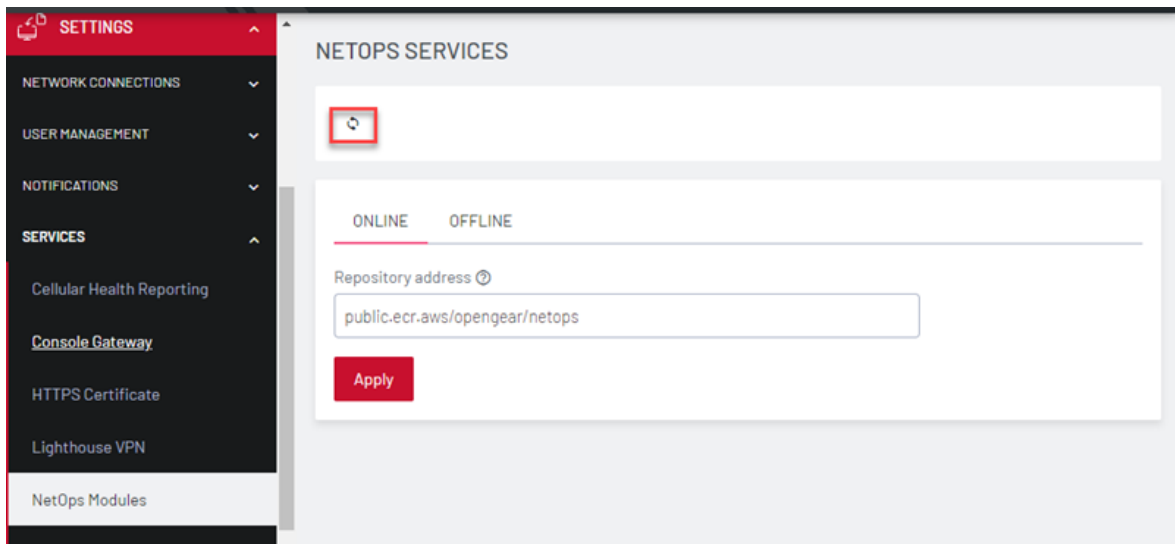

- Click the  **Synchronize** icon. A message displays with the status.

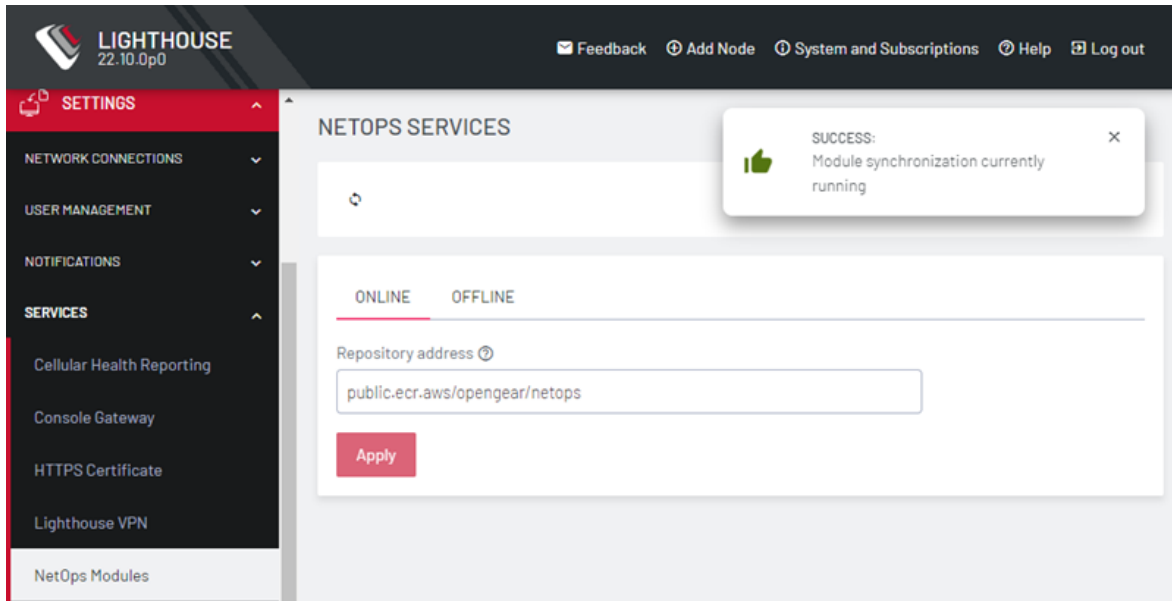

- From the menu, select **CONFIGURE NODES > NetOps Modules > Manage Modules**.
- Click the **Redeploy** icon.

PROCEDURE for Lighthouse CLI

Replace **root** and **default** with a Lighthouse Administrator or root credentials, then run the following:

```
USERNAME=root
PASSWORD=default
/etc/scripts/netops_sync_handler
token=$(curl -k -L -d '{
  "username":"'$USERNAME'",
  "password":"'$PASSWORD'"
}'
  "https://127.0.0.1/api/v3.0/sessions/" | python -c 'import sys, json;
  print json.load(sys.stdin)["session"]')
```




```
curl -k -L -H "Content-Type: application/json" -H "Authorization:
Token $token"
"https://127.0.0.1/api/v3.0/netops/modules/dop/redeploy"
```

CONFIGURATION BACKUP

Before performing a factory reset or system upgrade, you may want to backup the current Lighthouse configuration. To do so:

1. Select **SETTINGS > SYSTEM > Configuration Backup**.

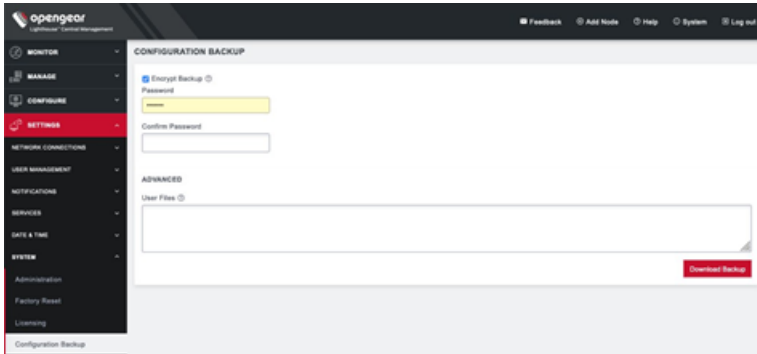


2. If desired, check **Encrypt backup**. Enter and confirm a password.
3. Under the **Advanced** section, specify the paths to any **User Files** you also wish to include in the backup.
4. Click **Download Backup** and save this file. The filename consists of a timestamp and `lh_bak` extension, for example: `lighthouse-20190710100325.lh_bak`

CONFIGURATION RESTORE

To restore the configuration and user files you backed up using **Configuration Restore**:

1. Select **SETTINGS > SYSTEM > Configuration Restore**.

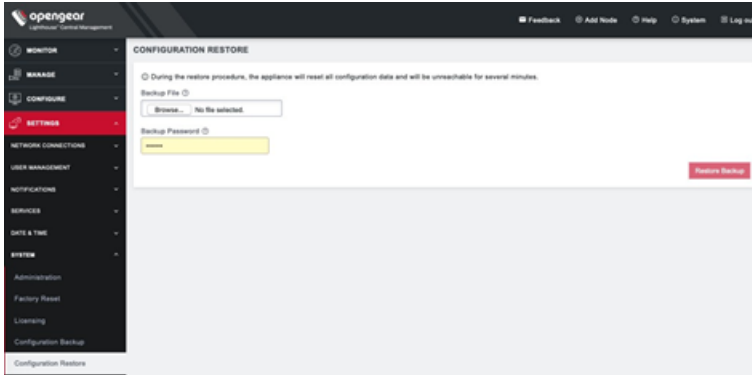


2. Locate the file you downloaded when you performed the Configuration Backup.
3. If you chose **Encrypt backup** when creating the backup, enter the **Backup Password**.
4. Click **Restore Backup**.
5. A **Configuration Restore Confirmation** dialog opens, click **Yes**.
6. Lighthouse will restore the backup and any included user files and restart.

CONSIDERATIONS IF USING MULTIPLE INSTANCES

- Before Lighthouse 23.04.1: Existing dependent Lighthouse instances will not be synced with the primary, and will need to be deleted and re-enrolled again.
- Lighthouse 23.04.1 and later: The newly restored primary should re-establish contact with the existing dependent instances. The databases may be out of sync at first, but will be re-synced automatically.

SUBSCRIBING TO LIGHTHOUSE

Lighthouse has a flexible, simplified subscription model that allows you to add extended functionality if required. The **Systems and Subscriptions** option on the main menu provides information on your subscriptions including the type of subscriptions, the validity and the number of days before expiry.

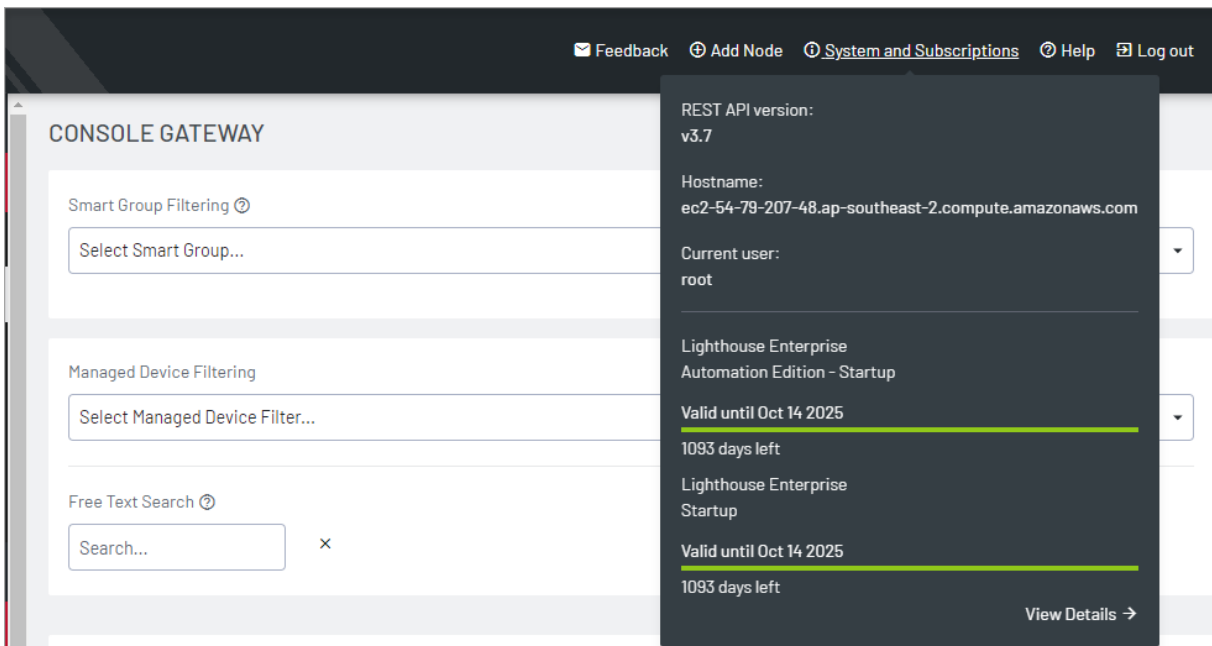


Click **View Details**. The **Subscriptions** page displays.

[Feedback](#) [Add Node](#) [System and Subscriptions](#) [Help](#) [Log out](#)

SUBSCRIPTIONS

[SUBSCRIPTIONS](#) [SUBSCRIPTION ASSIGNMENT](#)

LIGHTHOUSE ENTERPRISE - START UP



Node assignments


9/10 available

Valid until Oct 14 2025

1093 days left

[Update Subscription](#)

LIGHTHOUSE ENTERPRISE: AUTOMATION EDITION - START UP



Node assignments

9/10 available

Valid until Oct 14 2025

1093 days left

[Update Subscription](#)

[Show Details](#)

You can also click **Show Details** for more information about activation.


LIGHTHOUSE ENTERPRISE: AUTOMATION EDITION - GIGA



Node assignments
1000/1000 available

Valid until 2 Aug 2025

900 days left

 Update Subscription

Hide Details ^

USING AUTOMATION EDITION FEATURES

To use these features you will first need to activate modules on compatible nodes.

There are 2 ways you can activate modules on nodes:

Enrollment Bundles will allow you to activate specific modules on all nodes that are enrolled with the bundle.

Configuration Templating will allow you to push Automation Edition module configuration to your applicable enrolled nodes.

The subscriptions available are:

- The Enterprise Edition Subscription provides base functionality to enroll, monitor, and manage nodes.
- The Enterprise Automation Edition provides base functionality plus the advanced feature sets:
 - Smart Management Fabric (SMF).



- Automation Gateway.
- Secure Provisioning.

You can apply the extra functionality to selected nodes only, giving you the flexibility to use different subscriptions for different nodes.

Subscription licensing is clearly displayed on the UI. Users can see the active subscriptions, the node count supported, assigned nodes, and time left on the subscription.

For more information on subscription tiers, see ["Assigning Subscriptions In an Enrollment Bundle" on page 175](#).


ADDING A NEW SUBSCRIPTION TO LIGHTHOUSE

Lighthouse has a flexible, simplified subscription model that allows you to add extended functionality if required.

Note: Contact sales@opengear.com with a request for the type of subscription, including the number of nodes you wish to apply the subscription to. You will receive an encrypted .zip file named ***subscription.zip***.


TO ADD A SUBSCRIPTION

1. Select **Systems and Subscriptions**. A summary displays, click **View Details**. The **Subscriptions** page displays.

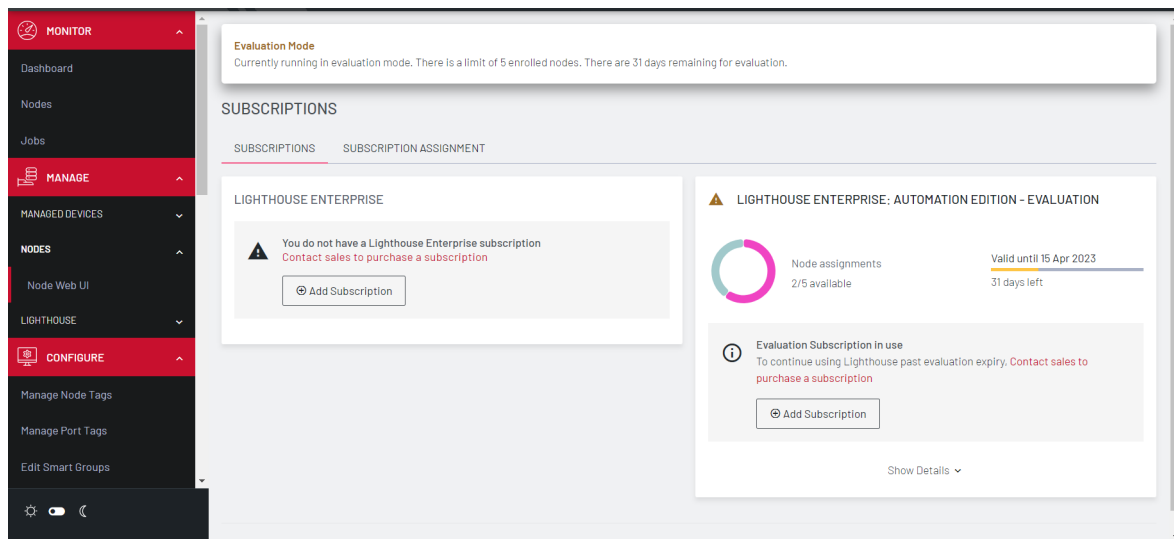


2. Click **Add Subscription**.

- The **New Subscription** dialog displays. Click **Choose file** and select the required zip file and click **Apply**.

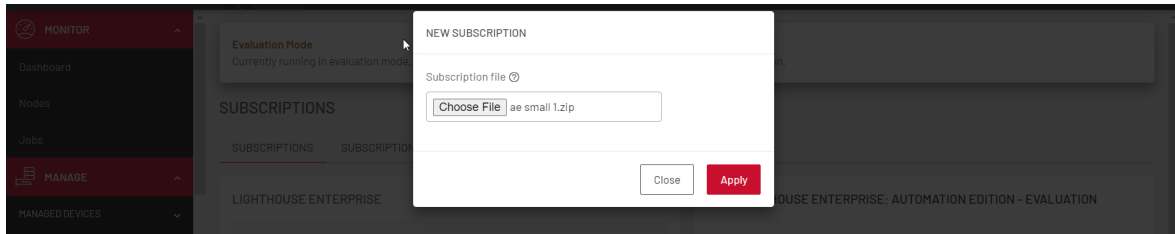

- The success message displays, and the subscription displays.

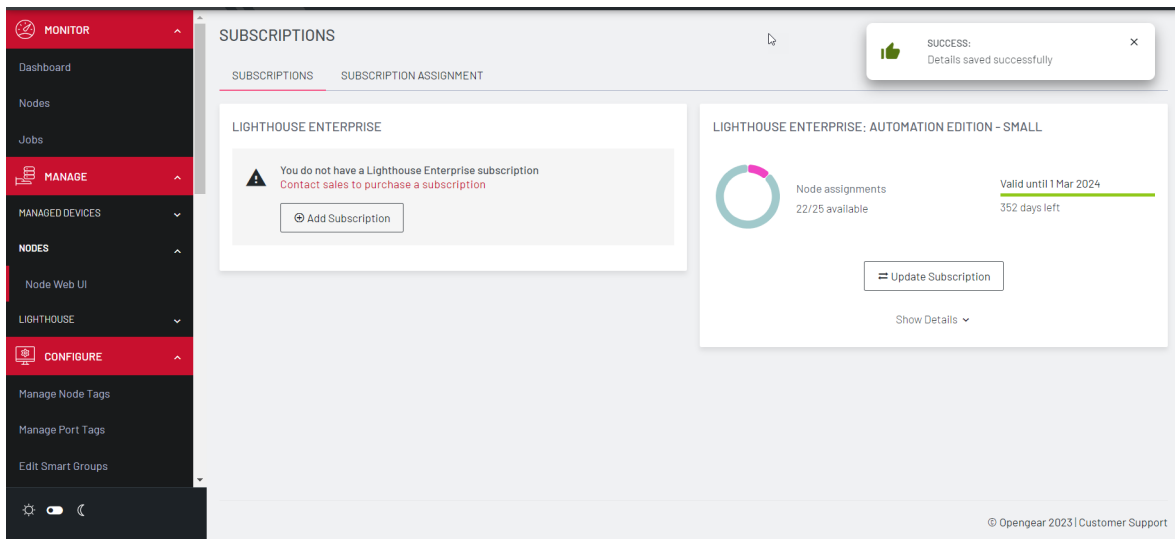

ASSIGNING SUBSCRIPTIONS TO NODES


Lighthouse has a flexible, simplified subscription model that allows users to mix and match functionality where required. Users can reassign nodes to different subscriptions in order to optimize Automation Edition features on their network. For example, if the user:

- Previously had two license tiers, but only paid to renew one license tier
- Purchased an Automation Edition license for the first time, and wants the extra functionality on some of their nodes
- Wants to swap which nodes have access to the extra functionality available in an Automation Edition license

VIEW SUBSCRIPTIONS IN THE LIGHTHOUSE UI

To see subscriptions:

1. Select **SETTINGS > Systems > Subscriptions**.
2. The Subscriptions page displays. Select **Subscription Assignment**.

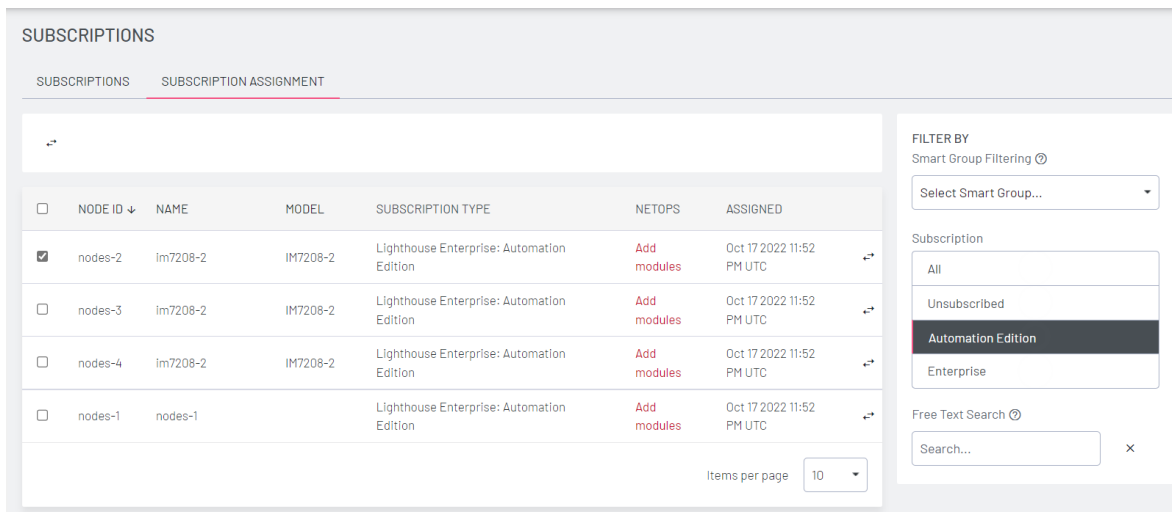

The screenshot shows the 'SUBSCRIPTIONS' page with the 'SUBSCRIPTION ASSIGNMENT' tab selected. The page displays a table of nodes and their assigned subscriptions. On the right, there are filters for 'Smart Group Filtering' and 'Subscription'.

<input type="checkbox"/>	NODE ID ↓	NAME	MODEL	SUBSCRIPTION TYPE	NETOPS	ASSIGNED	
<input checked="" type="checkbox"/>	nodes-2	lm7208-2	IM7208-2	Lighthouse Enterprise: Automation Edition	Add modules	Oct 17 2022 11:52 PM UTC	↔
<input type="checkbox"/>	nodes-3	lm7208-2	IM7208-2	Lighthouse Enterprise: Automation Edition	Add modules	Oct 17 2022 11:52 PM UTC	↔
<input type="checkbox"/>	nodes-4	lm7208-2	IM7208-2	Lighthouse Enterprise: Automation Edition	Add modules	Oct 17 2022 11:52 PM UTC	↔
<input type="checkbox"/>	nodes-1	nodes-1		Lighthouse Enterprise: Automation Edition	Add modules	Oct 17 2022 11:52 PM UTC	↔

Items per page: 10

FILTER BY
Smart Group Filtering ⓘ
Select Smart Group... ▼

Subscription
All
Unsubscribed
Automation Edition
Enterprise

Free Text Search ⓘ
Search... x

The Subscriptions page displays details of the subscriptions and allows you to search using smart group filters, subscription, or free text searches.

The page also allows you to update, replace or add new subscriptions.


TO ASSIGN NODES TO SUBSCRIPTIONS


Select **SETTINGS > System > Subscriptions > Subscription Assignments**.


The **Subscriptions Assignments** page displays details of the nodes including:

- Node Id
- Node name
- Subscription Type
- Current NetOps module deployment to assigned nodes
- Date of Assignment

TO ASSIGN A SUBSCRIPTION

1. Select **SETTINGS > System > Subscriptions > Subscription Assignment**
2. Display the required nodes using the Filter pane, either by using the **Filters**, **Subscription**, or **Free text** options.
3. To assign a subscription to a node click the  **Assign** button. The **Assign Subscription** dialog displays.

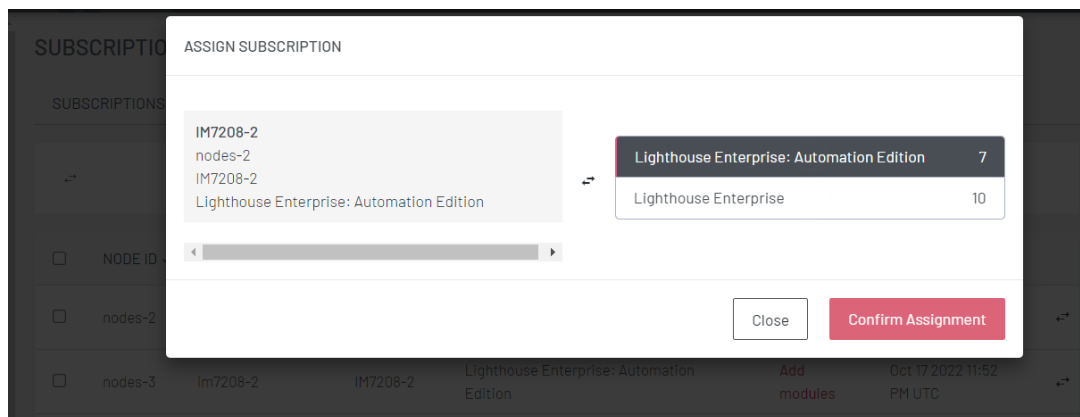


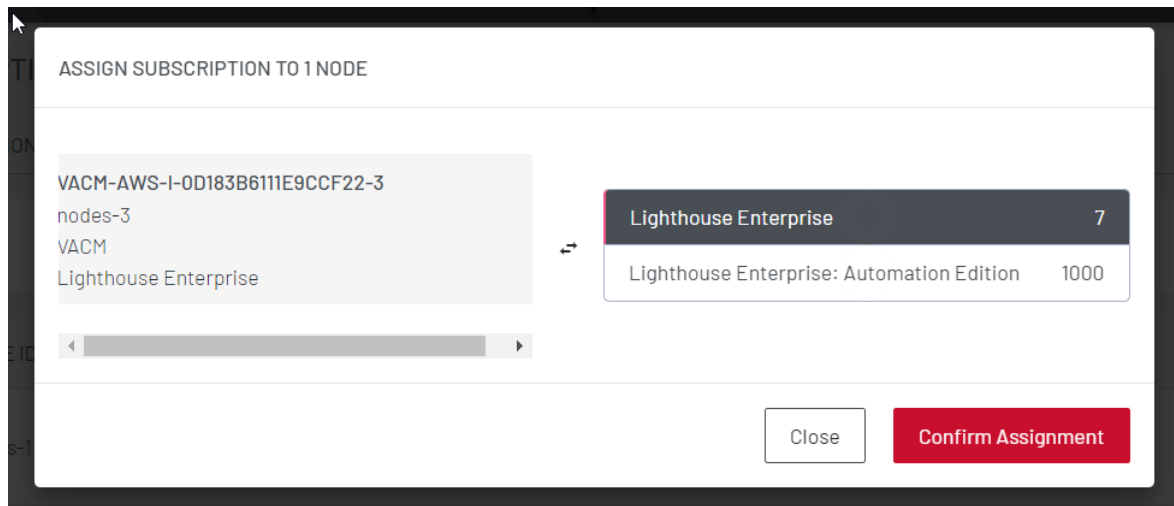
4. Select the required subscription from the leftmost panel using the  **Assign**

button.

5. Click **Confirm Assignment**

TO CHANGE A NODE'S SUBSCRIPTION

1. Select **SETTINGS > Systems > Subscriptions > Subscription Assignment**
2. Display the required nodes using the Filter pane, either by using the **Labels** or **Free text** options.
3. To change subscription on a node click the  **Assign** button on the row. The **Assign Subscription** dialog displays.
4. Select the required subscription from the right panel.
5. Click **Confirm Assignment** to change the node's subscription. A message box displays indicating the effect of changing the subscription.



Note: Another way of removing a node from a subscription is to unenrol the node. The subscription will then become available to be assigned to another node.

Note: If a node that is assigned to the Automation edition and has Smart Management Fabric (SMF) configured is then assigned to an enterprise edition, the disable Smart Management Fabric (SMF) template will automatically be pushed to that node and it will no longer be apart of the Smart Management Fabric (SMF) network.


UPDATING A SUBSCRIPTION TO LIGHTHOUSE

Lighthouse has a flexible, simplified subscription model that allows you to add extended functionality if required.


Note: Contact sales@opengear.com with a request for the type of subscription, including the number of nodes you wish to apply the subscription to. You will receive an encrypted .zip file named **subscription.zip**.

TO UPDATE A SUBSCRIPTION


1. Select **Systems and Subscriptions**. The **Subscriptions** page displays.

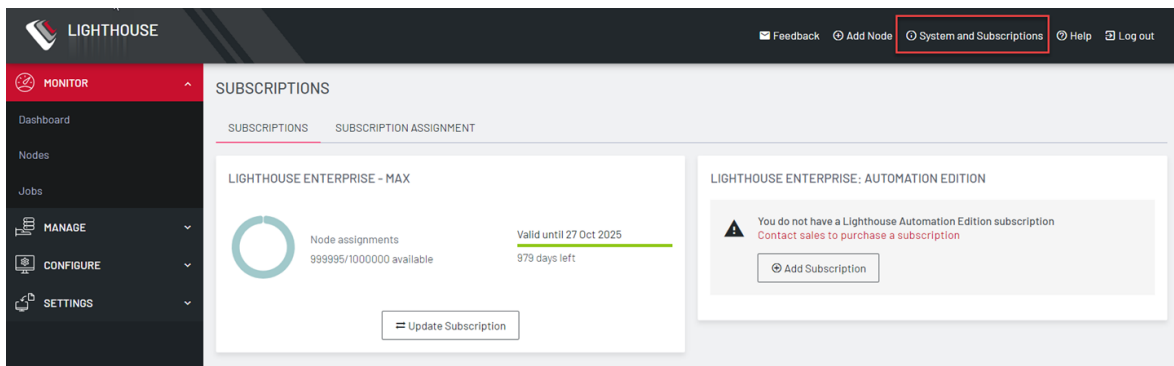


2. Click **Update Subscription**.
3. The **Add Subscription** dialog displays. Drag or Upload zip file and click **Add Subscription**.

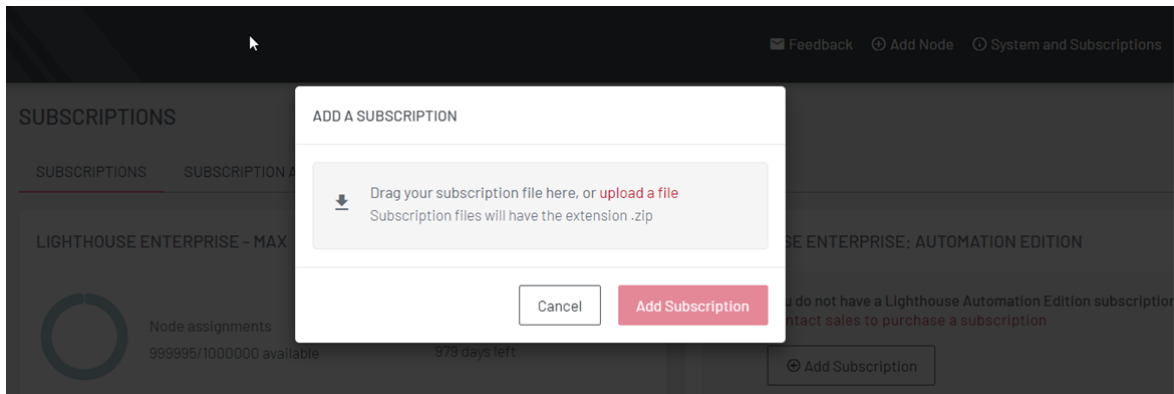

- The Add a subscription dialog provides details about the changes in the updated Subscription. Click Add Subscription.

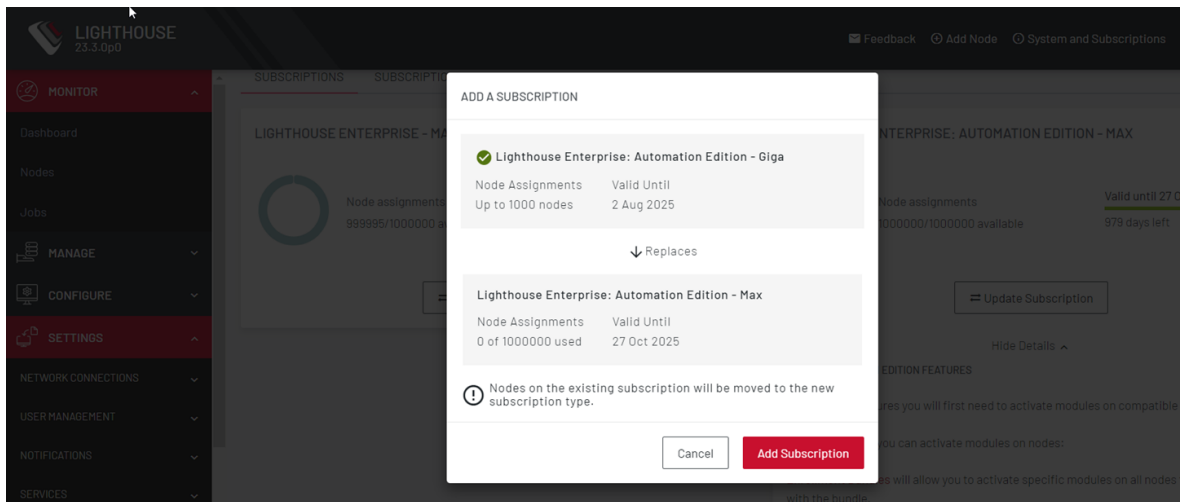

A message box displays. Note the contents and click Done.

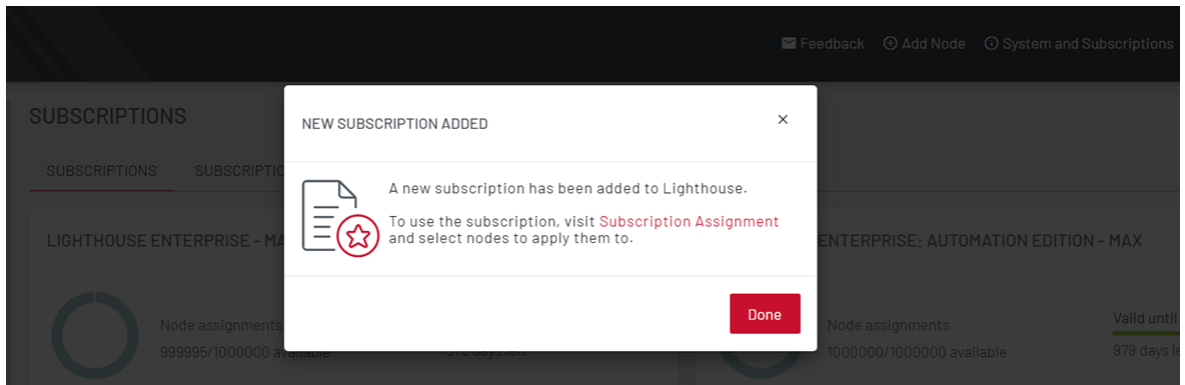

SHUT DOWN OR RESTART LIGHTHOUSE

The following sections describe the process to shut down or restart Lighthouse.


This includes finding instance version, returning to factory setting, and shutting down or restarting a running version of Lighthouse.

FINDING THE CURRENT LIGHTHOUSE INSTANCE VERSION

There are two ways to find the current Lighthouse version.

Using Lighthouse

1. Click **System & Subscriptions** on the Lighthouse banner.
2. The Details menu displays, listing the Lighthouse instance's:
 - Current version
 - REST API version
 - Hostname
 - Current user.



Via the local Lighthouse shell

1. Click **MANAGE > LIGHTHOUSE > Local Terminal**
2. At the `[hostname] login:` prompt, enter an administrator username and press **Return**.
3. At the `Password:` prompt, enter the administrator's password and press **b**.
4. At the bash shell prompt, enter `cat /etc/version` and press **Return**.

The current Lighthouse instance's version is returned to STD OUT. For example:

```
root@lighthouse:~# cat /etc/version 2022.Q1.0
```

Note: The procedure above uses the Web UI to reach the Lighthouse Local Terminal. This is not the only way to reach the Lighthouse shell and `cat /etc/version` works in any circumstance where an administrator has access to the Lighthouse shell. For example, many of the Virtual Machine Manager applications that can run a Lighthouse instance offer virtual console access. If this is available and an administrator logs in to the Lighthouse shell via this console, the command string works as expected.

Via other information sources

Two other command strings can be useful when specifics about a particular Lighthouse instance are needed.

Both these commands can be run by an administrator with access to a running Lighthouse instance's bash shell.

First is `cat /etc/sw*`. This command concatenates the following four files to STDOUT:

```
/etc/sw_product
/etc/sw_variant
/etc/sw_vendor
/etc/sw_version
```

For example:

```
# cat /etc/sw*
lighthouse
release
opengear
2022.Q1.0
```



Second is `cat /etc/issue`. `/etc/issue` is a standard *nix text file which contains system information for presenting before the system's login prompt. On a Lighthouse instance, `/etc/issue` contains the vendor and Lighthouse product version.

```
# cat /etc/issue
Opendgear Lighthouse 2022.Q1.0 \n \l
```

SHUT DOWN A RUNNING LIGHTHOUSE INSTANCE

To shut down a running Lighthouse instance:

1. Select **MANAGE > LIGHTHOUSE > Local Terminal**



2. At the Local Terminal login prompt enter a username with administrative privileges (for example, root).
3. At the Password: prompt, enter that account's password. A Last login date and time for that account are returned to STD OUT and a shell prompt for the logged in user displays.
4. Enter the command shutdown now and press Return. The Lighthouse virtual machine shuts down.

RESTARTING A RUNNING LIGHTHOUSE INSTANCE

To restart a running Lighthouse instance, follow the first three steps of the "[Shut Down or Restart Lighthouse](#)" on page 151 instance procedure above. At the shell prompt, enter one of these commands and press Return:

```
reboot
```

or

```
shutdown -r now
```

The Lighthouse virtual machine shuts down and reboots.

RETURNING A LIGHTHOUSE INSTANCE TO FACTORY SETTINGS

At some stage, you may need to return to the factory settings. You can do this either through the UI or by running a shell script if you have root access.

Note: During this process, the current Lighthouse configuration will be overwritten and user files will be deleted. If you wish, you can create a backup of the configuration and any desired user files.

To return a Lighthouse to its factory settings using the Lighthouse UI:

1. Login to the Lighthouse as root. Other users, even those with full administrative privileges, do not have the permissions required to reset the Lighthouse VM to its factory settings.
2. Select **SETTINGS > SYSTEM > Factory Reset**.



3. Select the **Proceed with the factory** reset checkbox.
4. Click **Reset**.

MANAGING LIGHTHOUSE NODES

After Lighthouse has been installed and configured, enrol a small set of nodes, then create a set of tags and smart groups that allow nodes access to be filtered to the correct subset of users.


Once these nodes are installed, test access to the Node's Web UI and serial ports.

MONITOR NODES

Lighthouse allows you to view all nodes including connected, not connected, enrolled, and pending, as well as nodes using cellular.


MONITOR > Nodes displays the cellular health and number of ports. Click the icon on the right of connected nodes to access the Web UI of the node.

1. Select **MONITOR > Nodes**.

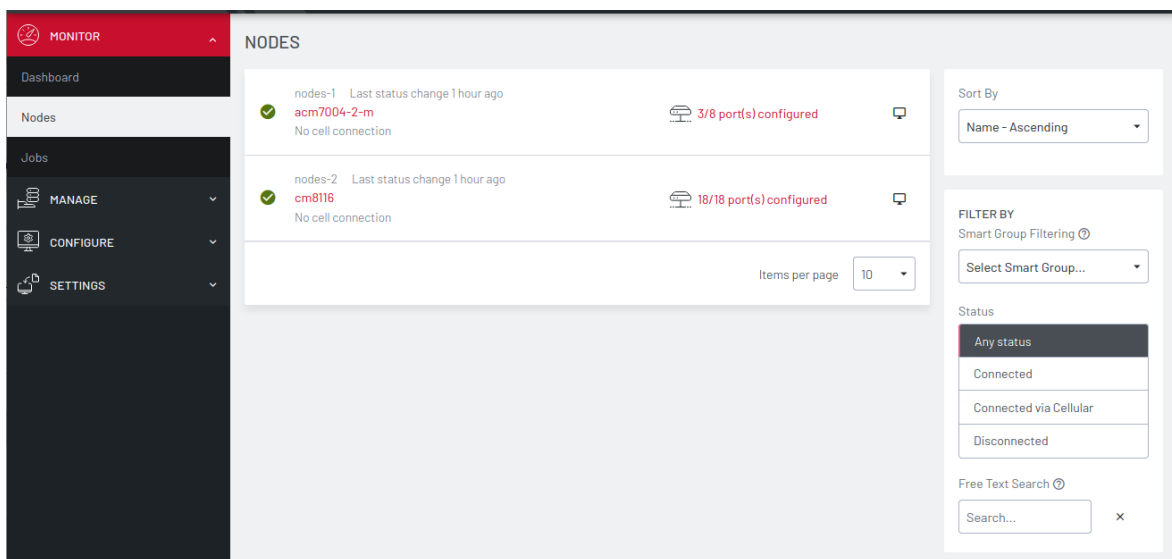

2. Use the **SORT BY** menu to sort the display of nodes, by *Status Change*, *Name* or *Connected Devices*, in ascending or descending order, or newest or oldest.
3. Use the **FILTER BY** menu to display the nodes by a selected *Smart Group*.
4. Use the **Status** menu to display the nodes by *Any status*, *Connected*, *Connected via Cellular*, *Disconnected* or *Pending*.
5. Use the **Free Text Search** to search using a text string. You can also search by Port tags.
6. The **Monitor Nodes** page displays the result of the search on the page.

Click on any connected node to view the node details, list of configured ports and unconfigured ports.

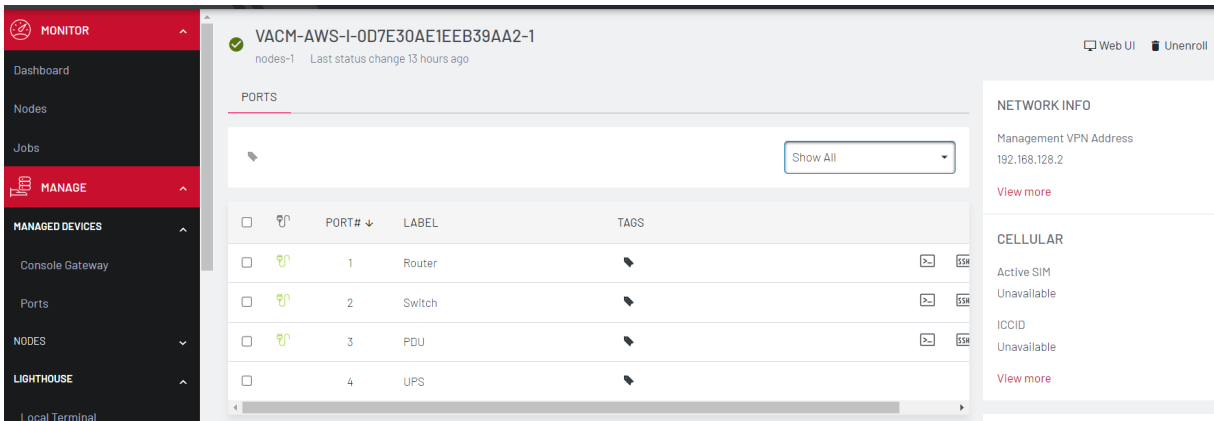

MONITOR

Dashboard

Nodes

Jobs

MANAGE

MANAGED DEVICES

Console Gateway

Ports

NODES

LIGHTHOUSE

Local Terminal

VACM-AWS-I-0D7E30AE1EEB39AA2-1
nodes-1 Last status change 13 hours ago

Web UI Unenroll

PORTS

Show All

<input type="checkbox"/>		PORT#	LABEL	TAGS
<input type="checkbox"/>		1	Router	
<input type="checkbox"/>		2	Switch	
<input type="checkbox"/>		3	PDU	
<input type="checkbox"/>		4	UPS	

NETWORK INFO

Management VPN Address
192.168.128.2

[View more](#)

CELLULAR

Active SIM
Unavailable

ICCID
Unavailable


[View more](#)

From this detail page, you can access the web UI of the node, as well as the web terminal and SSH of each connected device.

MONITOR PORTS

Lighthouse allows users with the appropriate permissions to view ports on a node to get a quick snapshot of the health of the nodes. For example, to trace a fault on a node, a network engineer will want to investigate the latest logs for a port.


1. Select **MONITOR > Nodes**. A list of nodes displays, each node displays the total number of **ports/configured ports**.
2. Click on the required node. The Node page displays node information including sortable lists of **Configured Ports** and **Unconfigured Ports**, **Network Info**, **Cellular details**, **Node tags** and **Node details**.

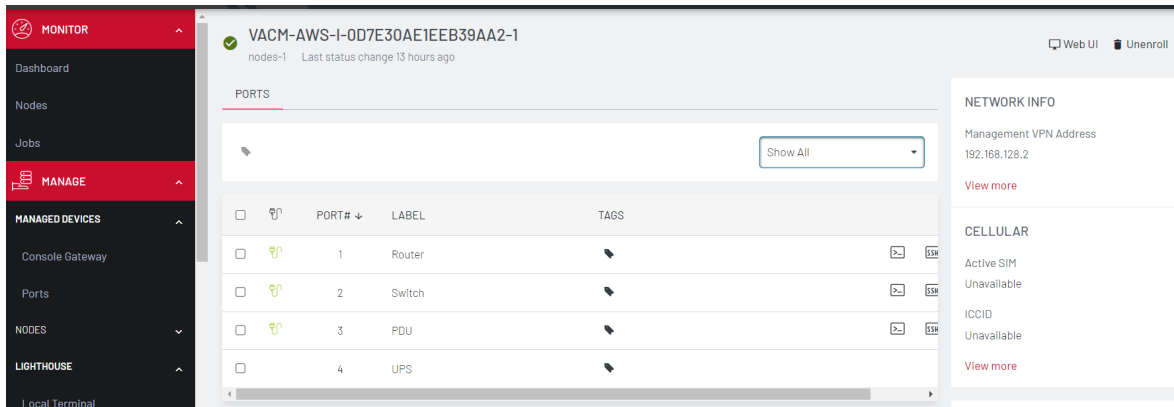

PORT #	LABEL	TAGS
1	Router	
2	Switch	
3	PDU	
4	UPS	

3. The drop down allows you to select to *Show All*, *Configured Ports*, or *Unconfigured Ports* on the node.
4. If the node has been configured to display logs, and you have the correct permissions you can select **Port Logs**.

5. The **Port Logs** page displays.

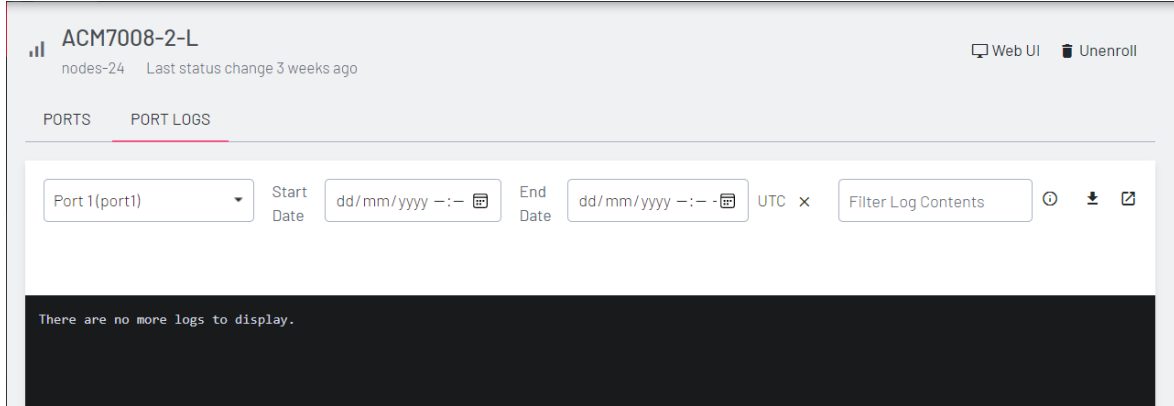


Select the **Port** from the list, and specify the date range (**Start Date** and **End Date**) to view the logs that display in the log window below. You can also access the web terminal and SSH of each connected device.

6. Alternatively, you can search for a log with a particular text, using the **Filter Log Contents** Logs matching the search parameter display in the log window.
7. You can also download the displayed logs, or open a new window to view the logs in more detail.

FILTERING PAGES DISPLAYING NODES

If you want to quickly find a particular node or set of nodes, you can drill down to specific nodes by using BASIC and ADVANCED filters. The filters can be used independently from each other or in combination to create customized displays based on ports, devices and permissions.

Select **MANAGE > MANAGED DEVICES > Console Gateway** to display all the nodes with all the devices/ports.

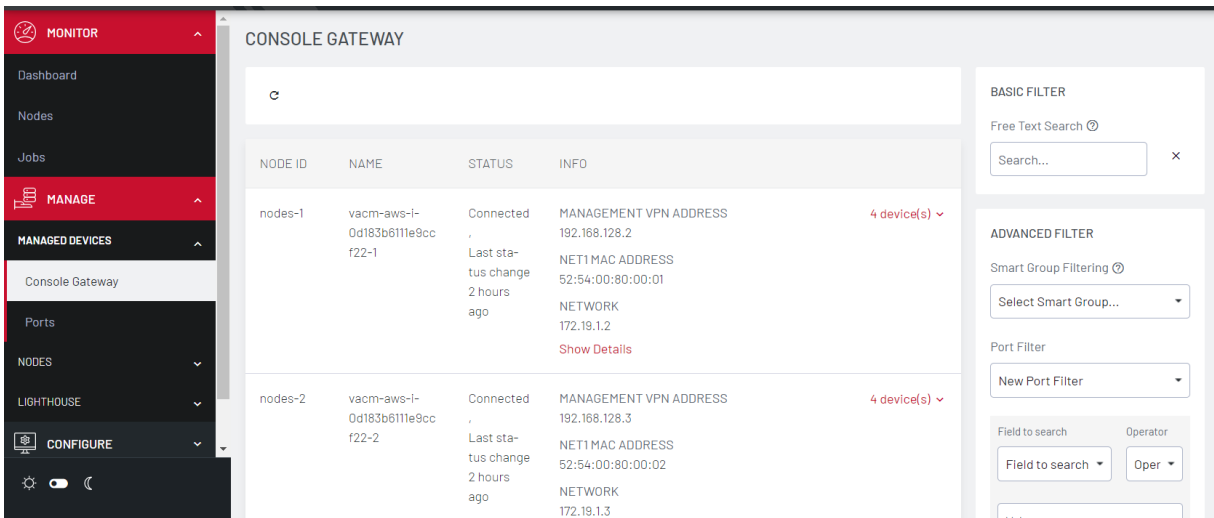

NODE ID	NAME	STATUS	INFO
nodes-1	vacm-aws-l-0d183b6111e9ccf22-1	Connected Last status change 2 hours ago	MANAGEMENT VPN ADDRESS 192.168.128.2 NET1 MAC ADDRESS 52:54:00:80:00:01 NETWORK 172.19.1.2 4 device(s) Show Details
nodes-2	vacm-aws-l-0d183b6111e9ccf22-2	Connected Last status change 2 hours ago	MANAGEMENT VPN ADDRESS 192.168.128.3 NET1 MAC ADDRESS 52:54:00:80:00:02 NETWORK 172.19.1.3 4 device(s)

FILTERING USING THE FREE TEXT SEARCH FIELD

The **Free Text Search** input field allows near real-time filtering of nodes and managed devices using the following criteria:

- Node name
- Firmware version
- Management VPN address
- MAC address
- Serial number
- Port label
- Port tag

Enter your search term in the **Free Text Search** field and press **Enter**.


The **Free Text Search** field treats multiple search terms separated by the space character as being combined with the logical AND operator, returning results only if all terms are present in the item.

For example, the search phrase `production switch` returns only nodes that contain both `production` AND `switch` anywhere in searchable fields.

To search for a multi-word term, enclose the search term in double quote characters. For example, `"production switch"` will return results only if the entire search term is matched in the item.

FILTERING USING SMART GROUPS

Use **MANAGE > MANAGED DEVICES > Console Gateway** to customize the node display.

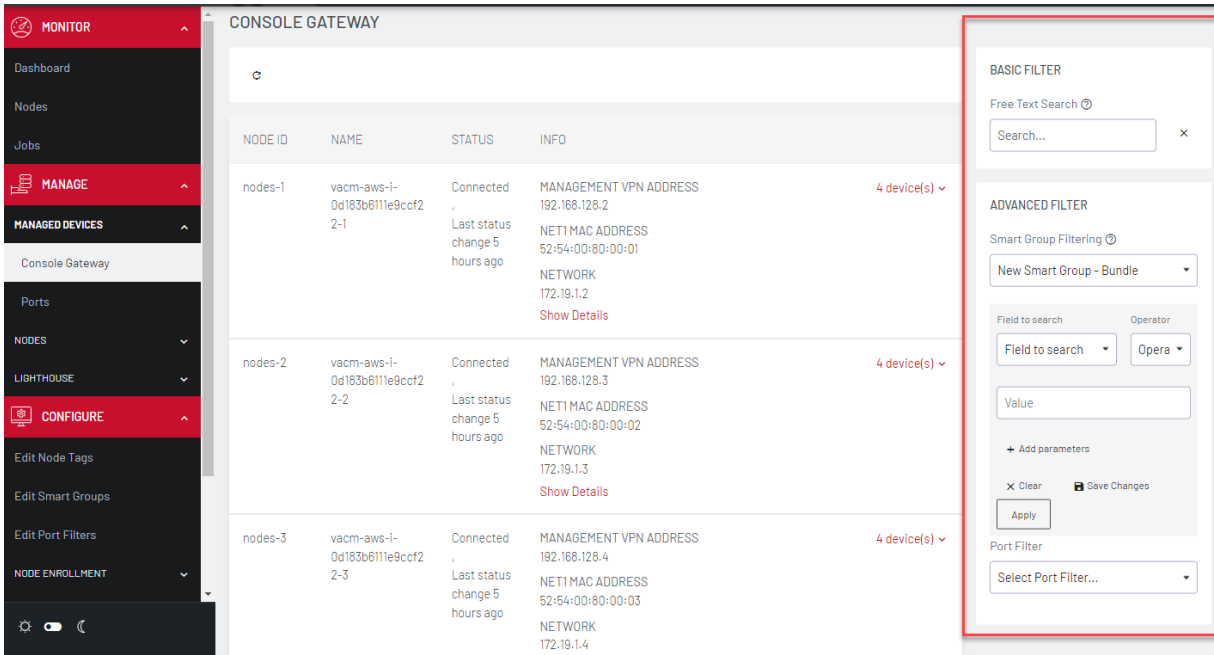

The screenshot shows the Lighthouse web interface. On the left is a sidebar with navigation menus: MONITOR, MANAGE, MANAGED DEVICES, and CONFIGURE. The main content area is titled 'CONSOLE GATEWAY' and displays a table of nodes. On the right, a 'BASIC FILTER' and 'ADVANCED FILTER' panel is visible, which is highlighted with a red border. The 'ADVANCED FILTER' panel includes a 'Smart Group Filtering' dropdown set to 'New Smart Group - Bundle', a 'Field to search' dropdown, an 'Operator' dropdown set to 'Opera', a 'Value' text input, and an 'Apply' button. Below these are 'Clear' and 'Save Changes' buttons. At the bottom of the panel is a 'Port Filter' dropdown set to 'Select Port Filter...'. The table in the background shows three nodes, each with a '4 device(s)' link.

NODE ID	NAME	STATUS	INFO
nodes-1	vacm-aws-i-0d183b6111e9ccf2-2-1	Connected Last status change 5 hours ago	MANAGEMENT VPN ADDRESS 192.168.128.2 NET1 MAC ADDRESS 52:54:00:80:00:01 NETWORK 172.19.1.2 Show Details
nodes-2	vacm-aws-i-0d183b6111e9ccf2-2-2	Connected Last status change 5 hours ago	MANAGEMENT VPN ADDRESS 192.168.128.3 NET1 MAC ADDRESS 52:54:00:80:00:02 NETWORK 172.19.1.3 Show Details
nodes-3	vacm-aws-i-0d183b6111e9ccf2-2-3	Connected Last status change 5 hours ago	MANAGEMENT VPN ADDRESS 192.168.128.4 NET1 MAC ADDRESS 52:54:00:80:00:03 NETWORK 172.19.1.4

On the ADVANCED FILTER pane, on the **Smart Group Filtering** pane, use the **Select Smart Group** dropdown list. Select a group from the list and the page displays the nodes that belong to the selected smart group.

Use **Fields to search** to narrow the search:

To add more filtering options:

1. Click **Field to search**.
2. Select a field and enter a *Value* in the text box.
3. Select an **Operator** from the drop-down box.
4. Enter the search criteria.
5. Click **Apply**.

The list of nodes that meet the specified criteria display.




6. Click the **+ Add Parameters** button to add more AND/OR parameters. Repeat from step 1.

FILTERING NODES USING THE PORT FILTER

Use **MANAGE > MANAGED DEVICES > Console Gateway** to customize the node display.

On the ADVANCED FILTER pane, on the Port Filter pane, use the **Select Port Filter** dropdown list. Select a filter from the list and the page displays the nodes that belong to the selected Port Filter.

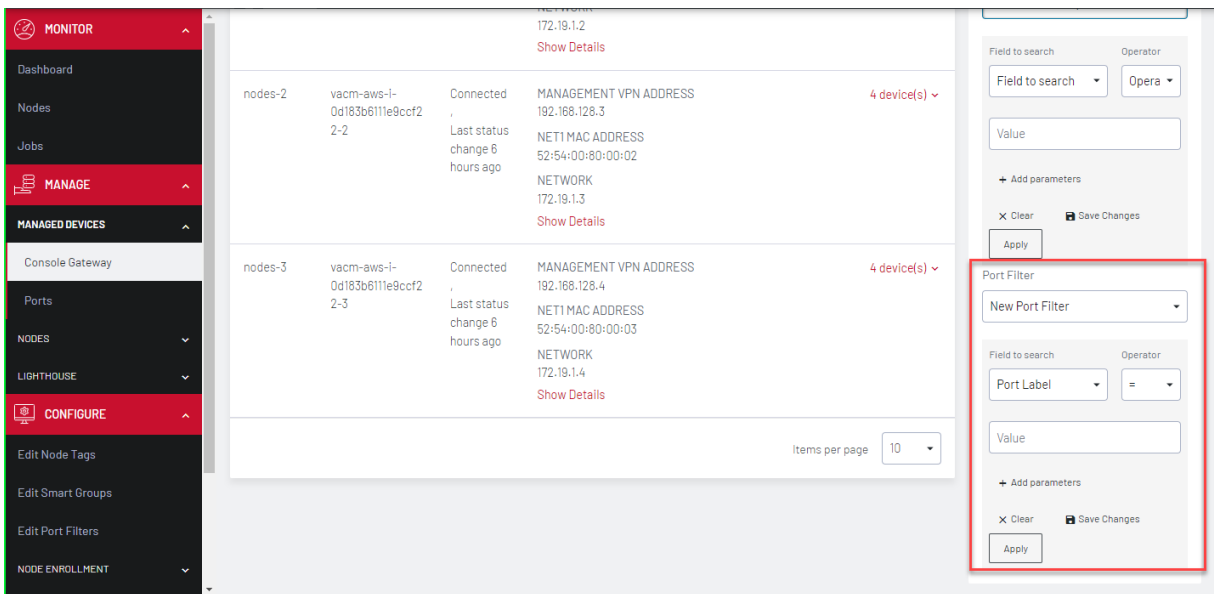

The screenshot shows the Lighthouse web interface. On the left is a sidebar with 'MONITOR' and 'MANAGE' sections. The 'MANAGE' section is expanded, showing 'MANAGED DEVICES' and 'Console Gateway'. The main area displays a table of nodes with columns for ID, Name, Status, and Details. The 'Port Filter' pane is open on the right, showing a dropdown for 'New Port Filter' and a search field for 'Port Label'.

To narrow the search:

1. Click **Field**.
2. Select a field option such as *Port Label* or *Port Tag* and enter a *Value* in the text box.
3. For *Port Label* you can select an **Operator** from the drop-down box on the right. A range of operators are available allowing you to define any filters from very wide to very narrow ranges.
4. If you wish to narrow the search, select **+Add Parameters**. Select the *AND* or *OR* button to specify the requisite boolean value.



5. Select the next **Field to Search** option such as *Port Tag* and enter a value in the text box.
6. You can repeat from step 4 to add more parameters.
7. Click **Apply Filter**.
8. Click **Save Changes**. You can also select to **Clear**.

ENROL NODES

Enrolling nodes is the process of connecting nodes to Lighthouse to make them available for access, monitoring, and management.

Enrollment can be performed via:

- the Lighthouse Web UI
- the Node Web UI
- ZTP
- USB key.

Credentials must be provided to authenticate either the Lighthouse during Enrollment via the Lighthouse WebUI, or the node during the other Enrollment scenarios.

Lighthouse uses OpenVPN tunnels secured with certificate authentication to connect the Lighthouse instance and remote nodes. For the connections to work properly, the clocks/times between the Lighthouse instance and each remote node server need to be synchronized. During the enrollment process when a new remote node is being added, if that node is not using NTP (Network Time Protocol) to synchronize its time, the node will check the HTTP Date header sent by Lighthouse in the enrollment request.

The remote node will then set its own local system clock to match the time shown in that HTTP Date header from Lighthouse. This ensures the new remote node has its time matched to the Lighthouse before the VPN tunnel is established, preventing potential time sync issues between the tunnel endpoints.

If a remote node is relying on an NTP server to set its own time, it still checks the HTTP Date header sent by Lighthouse to affect the time synchronization but does not set its local time to that of the Lighthouse instance.



When enrolling via Lighthouse, an administration username and password for the node must be provided. When enrolling via the node, an Enrollment token must be provided. A default Enrollment token can be set on the CONFIGURE > NODE Enrollment > Enrollment Settings page, and individual tokens set per Enrollment bundle.


Enrollment is a two-step process:

1. After enrollment begins, nodes receive their Enrollment package, and establish a VPN connection to Lighthouse.
2. The node is now in the Pending state and needs to be Approved before the node is available for access, management, or monitoring.

Note: This second step can be skipped by selecting the Auto-approve node checkbox when configuring an Enrollment bundle.

THE ENROLLED NODES PAGE

The Enrolled Nodes page lists all the enrolled nodes on a Lighthouse instance.

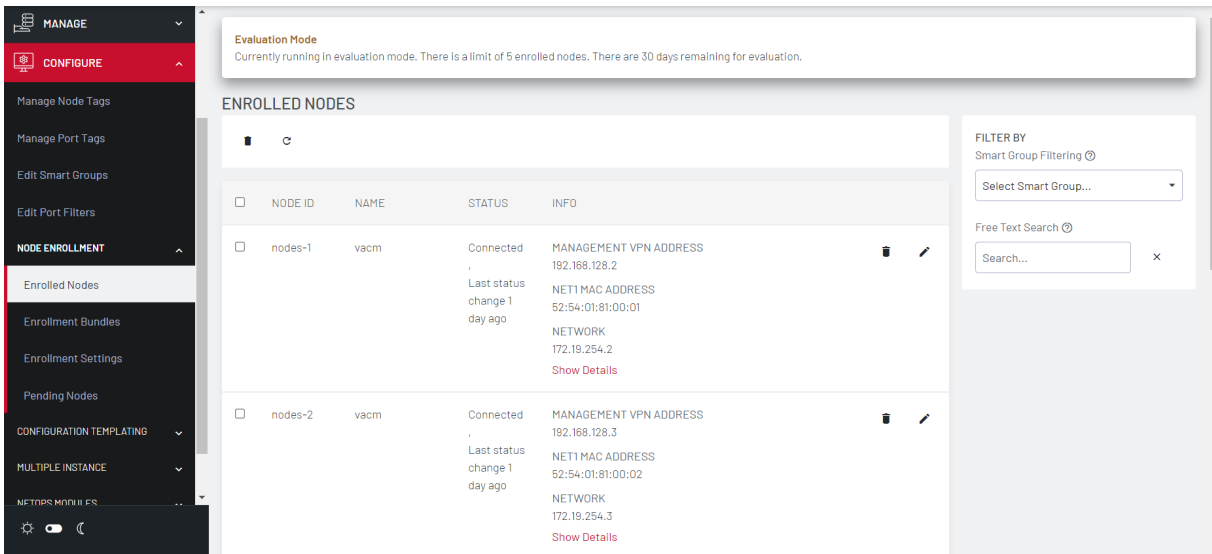

ENROLLED NODES

NODE ID	NAME	STATUS	INFO
nodes-1	vacm	Connected Last status change 1 day ago	MANAGEMENT VPN ADDRESS 192.168.128.2 NET1 MAC ADDRESS 52:54:01:81:00:01 NETWORK 172.19.254.2 Show Details
nodes-2	vacm	Connected Last status change 1 day ago	MANAGEMENT VPN ADDRESS 192.168.128.3 NET1 MAC ADDRESS 52:54:01:81:00:02 NETWORK 172.19.254.3 Show Details

To display the enrolled nodes:

1. Select **CONFIGURE > NODE Enrollment > Enrolled Nodes**
2. The enrolled nodes display in the chronological order in which they were enrolled to Lighthouse. For each node, the following details display:
 - Model
 - Firmware version
 - Serial number
 - Status.
3. Click **Items per page** to select the number of nodes per page. Choose a default value of 10, 20, 50, 80, or 100 nodes per page, or enter a custom value between 1 and 100.

This setting applies to the current user session only and will be lost when the current user logs out.

Note: **Items per page** also displays on the **Pending Nodes**, **Console Gateway**, and **Node Web UI** pages.

4. **Status** is the current connection status of the node and displays either of two things:
 - **Connected:** *Last status change x [time unit] ago*: The time since Lighthouse connected to the console server.
 - **Disconnected:** *last status change x [time unit] ago*: The time since Lighthouse disconnected from the console server.
 - **Configuration Retrieval Status** displays if any configuration retrieval sections failed when performing a configuration sync with this node, such as Groups, Users, Node Description, Authorization, or Serial Ports.
 - **Configuration Template Run Status** displays the result of the most recent configuration template push on this node, listing which templates finished applying, or failed to apply to the node. This information is displayed until the next template push has completed on this node.

Note: The **Configuration Retrieval Status** and **Configuration Template Run Status** are not displayed if there is no relevant data to display and are only displayed for users with **Lighthouse Administrator** or **Node Administrator** permissions.

- Results of the **Configuration Retrieval Status** and **Configuration Template Run Status** indicate:

- **Success:** all templates were successfully executed on the node.
- **Partial Failure:** some templates failed to execute on the node, or some config sections failed to synchronize.
- **Failure:** all templates failed to execute on the node, or all config sections failed to synchronize.

You can select a summary of each status to see more detailed information as follows:

- Retrieval failed for: section_name, section_name, section_name.
 - Template(s) failed to apply: template_name, template_name, template_name.
 - Template(s) successfully applied: template_name, template_name, template_name.
5. If **SETTINGS > SERVICES > Cellular Health Reporting** is Enabled, the **Cellular Health** column displays the node's current cellular status. If this state is **Good|Moderate|Bad**, click the color indicator or the text to view more detailed health information as follows:



Cellular IP Address	Status	Conditions	Signal Quality	RSSI	Connection Type	Sim Issues	Connectivity Test
10.92.141.156 2001:8004:1140:a75:1c6f:9d83:9a44:dab8	Up	Fallover Disabled	81	-63	lte	No	Connectivity Test Disabled

- Cellular IP Address (IPv4 and IPv6)
- Cellular interface status (Up|Down)
- Conditions
- Signal Quality
- RSSI
- Connection Type



- SIM Issues
- Connectivity Test (Passed|Failed|Connectivity Test Disabled)

6. The INFO column displays more details about each node. Click **Show Details** to see more information about the node, or **Hide Details** to display fewer details.

ENROLLMENT BUNDLES

An Enrollment bundle is a downloadable file that stores provisioning information, allowing for bulk Enrollment and manipulation of remote nodes.

Applying an Enrollment bundle during Enrollment allows tags to be associated with nodes when they're first enrolled, rather than manually assigning tags after the nodes are enrolled.

This is useful for larger roll outs where there are many nodes deployed with a similar configuration and responsibilities. If relevant Smart Groups and tags have been set up, newly enrolled nodes are immediately visible for the relevant users to configure and use.

Associating templates with an Enrollment bundle allows to run a set of templates on a node, after it has been enrolled. Any template defined on the Lighthouse can be added to an Enrollment bundle, and each bundle supports any number of templates.

ASSIGNING SUBSCRIPTIONS IN AN ENROLLMENT BUNDLE


When a user has subscribed to Enterprise Edition, Enterprise Automation Edition, or both then assigning a subscription type to the bundle will be necessary. Based on the feature set for the node to utilize, this will mean they might need to create two bundles:

- An Enterprise tier subscription bundle to enrol nodes, and perform other basic functions (set up AAA, run scripts, create groups/users, set up logging, etc)
- An Automation Edition tier subscription allows all basic functions of the enterprise plus the advanced feature sets, Smart Management Fabric (SMF), Automation Gateway, and Secure Provisioning for assigned nodes.

CREATING AN ENROLLMENT BUNDLE

To create an Enrollment bundle in a Lighthouse instance:

1. Select **CONFIGURE > NODE Enrollment > Enrollment Bundles**

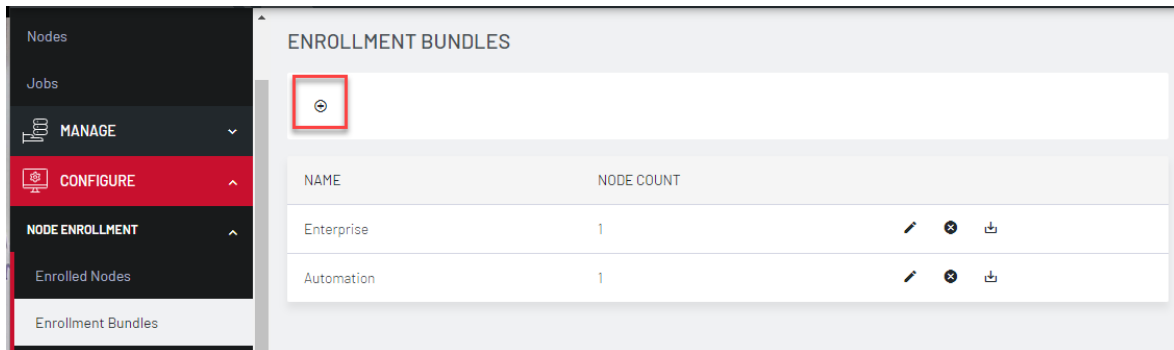

- Click the + button. **The Enrollment Bundle Details** page displays.

ENROLLMENT BUNDLES

ENROLLMENT BUNDLE DETAILS

Name ?

Token ?

☐ Auto-approve node ?

Subscription Selection ?

Lighthouse Enterprise

Lighthouse Enterprise Automation Edition

ENROLLMENT BUNDLE NODE TAGS

Select tag

Select value

+ Add Tag

Create new tag value


TEMPLATES

ORDER	TEMPLATE TYPE	TEMPLATE NAME	ACTIONS
-------	---------------	---------------	---------

- Enter a **Name** and **Authentication Token** for the bundle in the respective fields.
- Select the number of **Tags** and **Values** to apply to any nodes that enroll using this Enrollment bundle.
- (Optional) Select the **Auto-approve** node checkbox.
When this is checked, a device configured using this Enrollment bundle is not placed in pending mode during the Enrollment process. Instead, it is automatically approved for Enrollment after it has been identified.
- Select the desired **Subscription Bundle Label** - Lighthouse Enterprise Edition or Lighthouse Automation Edition. This is the desired subscription type to assign

to newly enrolled nodes using this bundle (optional when more than one subscription is active on the Lighthouse).

7. You can also use this bundle to automatically activate NetOps modules for any supported nodes. Scroll down to the **NETOPS MODULES** section and press the + button to open the **MODULE DETAILS** dialog.

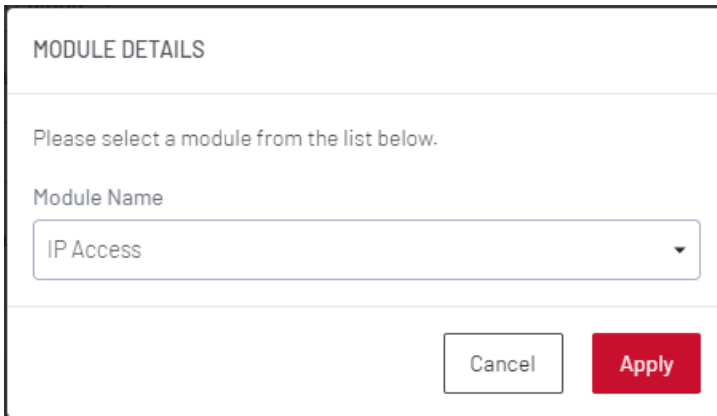

8. Select the desired **Module Name** from the drop-down list. Click **Apply**.

With the Enrollment bundle named, use the **Enrollment BUNDLE NODE TAGS** to populate it with the desired name-value pairs:

1. Select a field name from the left-most drop-down menu.
2. Select or enter a value from the right-most drop-down menu.
3. Click the + button to add a new pair of drop-down menus.
4. Select another field name and select or enter another value.
5. Repeat until all desired name-value pairs are displayed.
6. Click **Apply**.

With the Enrollment bundle named, use the **TEMPLATES** to populate it with the desired list of templates to be applied post-Enrollment:

1. Click the **+** button to add a new pair of drop-down menus.
2. Select a value from the **Template Type** menu. The selected template type filters the available names to those templates of that type.
3. Select a value from the **Template Name** menu.
4. Repeat until all desired type-name pairs are displayed.
5. Click **Apply**.

The templates in the table can be reordered using the arrow buttons in the far-left column of the table and are executed in the order they appear. The order buttons appear if there is more than one template in the table.

Template push operations stop if one template fails.

STRUCTURE OF AN ENROLLMENT BUNDLE

An Enrollment bundle file, **manifest.og**, contains a series of field-value pairs that an unconfigured device can use to configure itself.

Options that can be set in **manifest.og** include new firmware, custom configuration scripts, OPG config files, and Lighthouse Enrollment details.

By default, **manifest.og** includes the following field-value pairs (with example values):

```
address=192.168.88.20
api_port=4443
bundle=bne-dc
password=secret
```

Custom field-value pairs can be added manually. The field names are potential field names for a real-world, customized file, but the values following each field name are examples:

```
script=configure_ports.sh
image=acm7000-3.16.6.image
external_endpoints=192.168.1.2:4444,192.168.1.3:4445
```


ENROLLING NODES

Enrolling nodes is the process of connecting nodes to Lighthouse to make them available for access, monitoring, and management.

A node is a device that can be enrolled with Lighthouse, allowing it to be accessed, managed, and monitored.

You can enrol nodes in the following ways:

- Via the node's Web UI.
- Via Lighthouse Web UI.
- Via OM, ACM, CM, and IM Web UI.
- Via USB drive.
- Mass Enrollment using ZTP.

This section also covers how to back up nodes.

ENROLLMENT VIA NODE WEB UI

If a node is behind a firewall, Lighthouse cannot initiate an Enrollment. The node must be enrolled from the Node Web UI.


1. Log into the Node Web UI.
2. Select **Serial & Network > LIGHTHOUSE**.
3. Enter the **Server Address** of Lighthouse (which can be hostname, FQDN, or IP address).
4. Optionally, enter the **Server Port**.
5. Enter the **Enrollment Bundle** (if a specific bundle is being used), and the **Enrollment Token** (either the global token or the bundle-specific token).
6. Select **Apply Settings**. The Enrollment process begins.

After enrollment, the node displays in the **Pending Nodes** page, with a **Status** of *Approval*. Click the Approve icon in the **Actions** column.

ENROLLMENT VIA LIGHTHOUSE WEB UI

Enrollment via Lighthouse Web UI only works if the Node is reachable from Lighthouse. To enroll a node:

1. Select **Add Node** in the top menu bar to open a **NEW Enrollment** dialog.

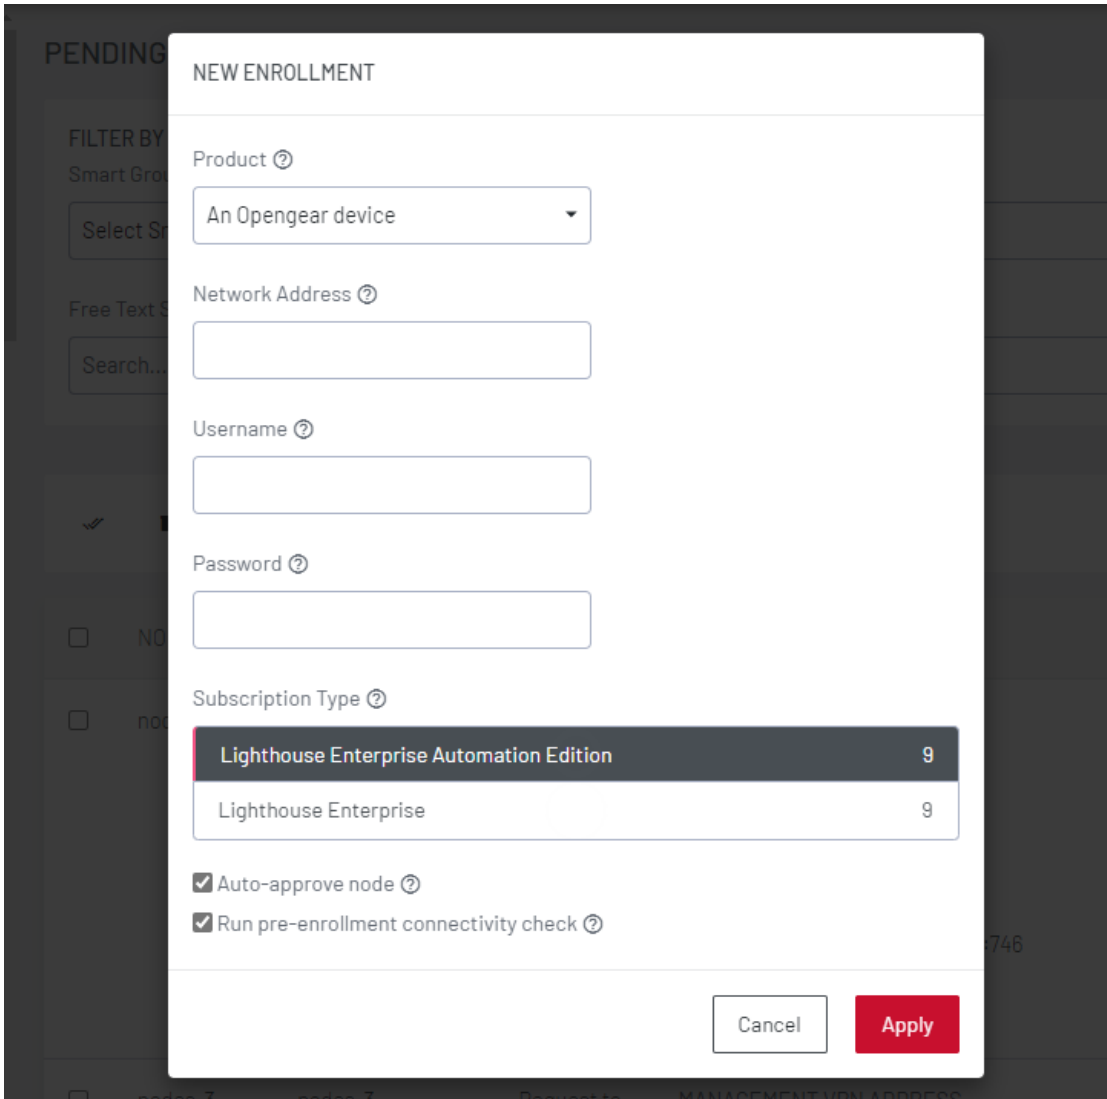

NEW ENROLLMENT

Product ⓘ
An Opendgear device ▼

Network Address ⓘ

Username ⓘ

Password ⓘ

Subscription Type ⓘ

Lighthouse Enterprise Automation Edition	9
Lighthouse Enterprise	9

☒ Auto-approve node ⓘ
☒ Run pre-enrollment connectivity check ⓘ

Cancel Apply

2. Select the **Product** type from the **Product** menu:

- An Opendgear device.
 - A generic third-party device, see Note below.
 - An Avocent ACS6000.
 - An Avocent ACS8000.
 - An Avocent ACS Classic.
 - A Cisco 2900 Series.
 - A Digi Passport.
3. Enter the **Network Address**, **Username**, and **Password** of the node being enrolled. The **Username** and **Password** fields are for the login credentials required by the remote node being enrolled, not the login credentials used to login to the Lighthouse instance.
 4. Select the **Subscription Type**. Each type shows the number of available subscriptions:
 - Enterprise Edition.
 - Automation Edition.
 5. If required, you can also select the **Auto-approve node** and **Run pre-enrollment connectivity checks**.
 6. Click **Apply**

Once enrolled, the console server's details are removed from the **Pending Nodes** page and added to the **CONFIGURE > NODE Enrollment > Enrolled Nodes** page.

ENROLLING NODES VIA OM, ACM, CM, AND IM WEB UI

Nodes can be enrolled from other UIs such as the **Operations Manager**(OM) as follows via:

- **OM:** Nodes can be enrolled into a Lighthouse instance on OPERATIONS MANAGER Web UI using the **CONFIGURE > LIGHTHOUSE Enrollment** menu item and the `lhvpn-callhome` command. See the OPERATIONS MANAGER User Guide for more details.
- **ACM, CM and IM:** On the Web UI, select **Serial & Network > Lighthouse** to open the **Request Enrollment with Lighthouse Server** page.

MASS ENROLLMENT USING ZTP

For mass node Enrolments using ZTP, three new custom DHCP fields are handled by ZTP scripts.

These fields contain the **URL**, **Bundle Name** and **Enrollment Password** used in an Enrollment which is kicked off after all other ZTP handling is completed. If a reboot is required because of a config file being provided the Enrollment starts after the reboot. Otherwise it happens immediately.

Here is a sample configuration file for the ISC DHCP Server:

```
option space opengear code width 1 length width 1;
option opengear.config-url code 1 = text;
option opengear.firmware-url code 2 = text;
option opengear.enroll-url code 3 = text;
option opengear.enroll-bundle code 4 = text;
option opengear.enroll-password code 5 = text;
class "opengear-config-over-dhcp-test" {
match if option vendor-class-identifier ~~ "^Opengear/";
vendor-option-space opengear;

option opengear.config-url "http://192.168.88.1/config.xml";
option opengear.enroll-url "192.168.88.20";
option opengear.enroll-bundle "";
option opengear.enroll-password "default";
}
```

Note: The maximum amount of data allowable as DHCP options is 1200 bytes, including all overhead inherent in the structuring of this data. Individual options are limited to 255 characters.

ENROLLMENT VIA USB DRIVE

An unconfigured device can be enrolled using a USB drive loaded with an Enrollment bundle. (See ["Creating an Enrollment bundle" on page 176.](#))

Download the Enrollment bundle, `manifest.og` from a Lighthouse instance as follows:

1. Select **CONFIGURE > NODE Enrollment > Enrollment Bundles**. A list of existing **Enrollment Bundles** displays.
2. In the **Actions** column of the particular bundle, click the download button, a downward arrow in a circle.
3. Depending on the browser's configuration, a `manifest.og` file either downloads to the local system or displays a dialog asking to specify where to download the file.

To enroll a node via USB drive:

1. Copy `manifest.og` to the root directory on a USB drive.
2. Plug the USB drive into an unconfigured and powered-down console server.
3. Power the console server up.

On first boot, the device searches for the file — `manifest.og` — on any USB drives attached to the device and configures the device based on its contents.


BACKING UP NODES

Administrative users can enable automatic node backup. Up to 10 backups can be stored on a rolling basis.

Note: Node backup requires firmware 4.6 or later.

To set up node backup:

1. Select **SETTINGS > SERVICES > Node Backup**.

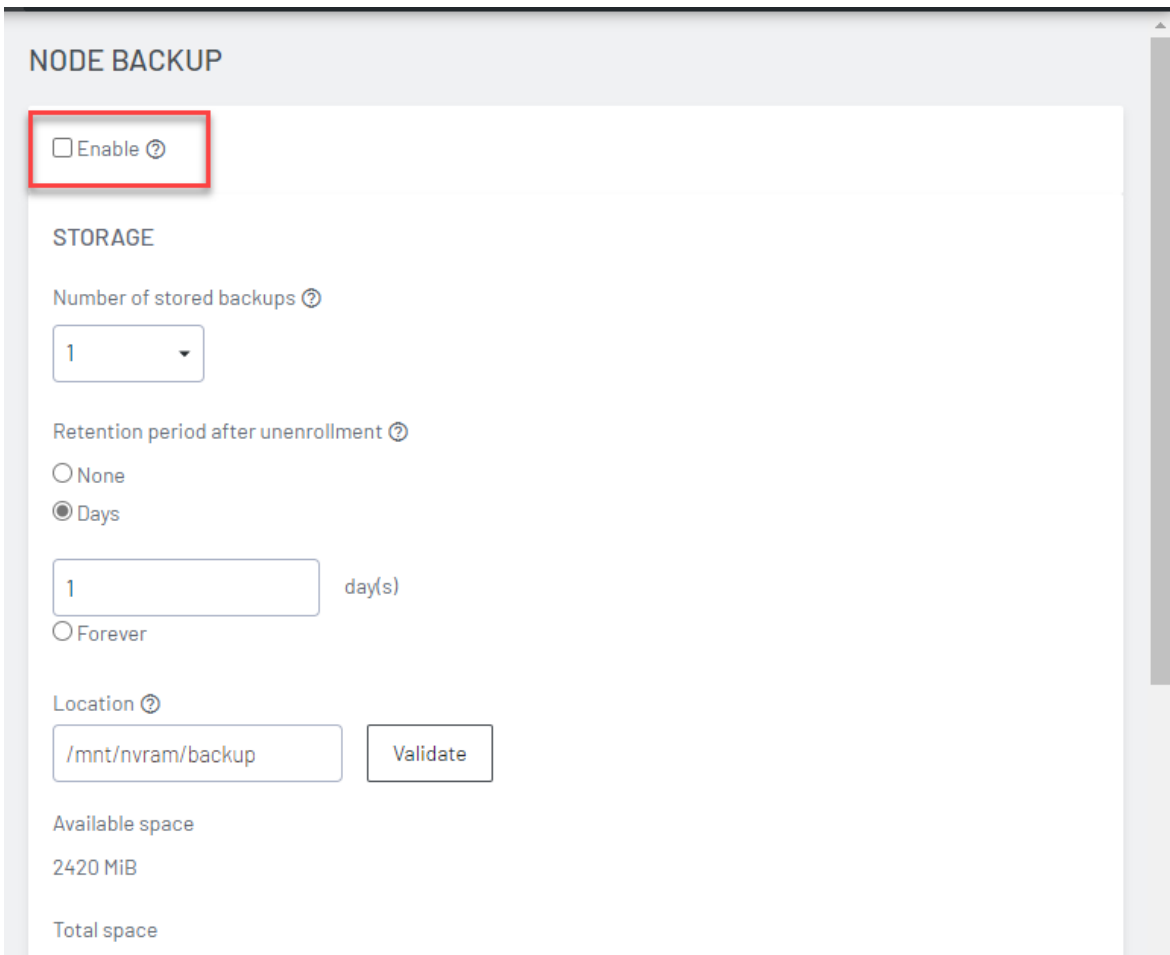

NODE BACKUP

☐ Enable ?

STORAGE

Number of stored backups ?

1

Retention period after unenrollment ?

☐ None

☒ Days

1 day(s)

☐ Forever

Location ?

/mnt/nvram/backup

Available space

2420 MiB


Total space

2. Select the **Enable** checkbox to turn on this service.

- Under the **Storage** section, select the **Number of stored backups** you wish to keep.
- In **Retention period after unEnrolment** select **None**, **Days** or **Forever**.
If you select **Days** enter the number of days.
- Enter the **Location** you wish to store the backup files. We suggest you store backups at `/mnt/nvram/`.
- Click **Validate** to make sure the location exists and has enough space to store them. The **Available space**, **Total Space** and **Estimated disk usage** MiBs display.
- Click **Apply** or set a schedule using the **Scheduling** fields.

To setup an automated schedule for performing node backups:

- Scroll down to the **SCHEDULING** section.

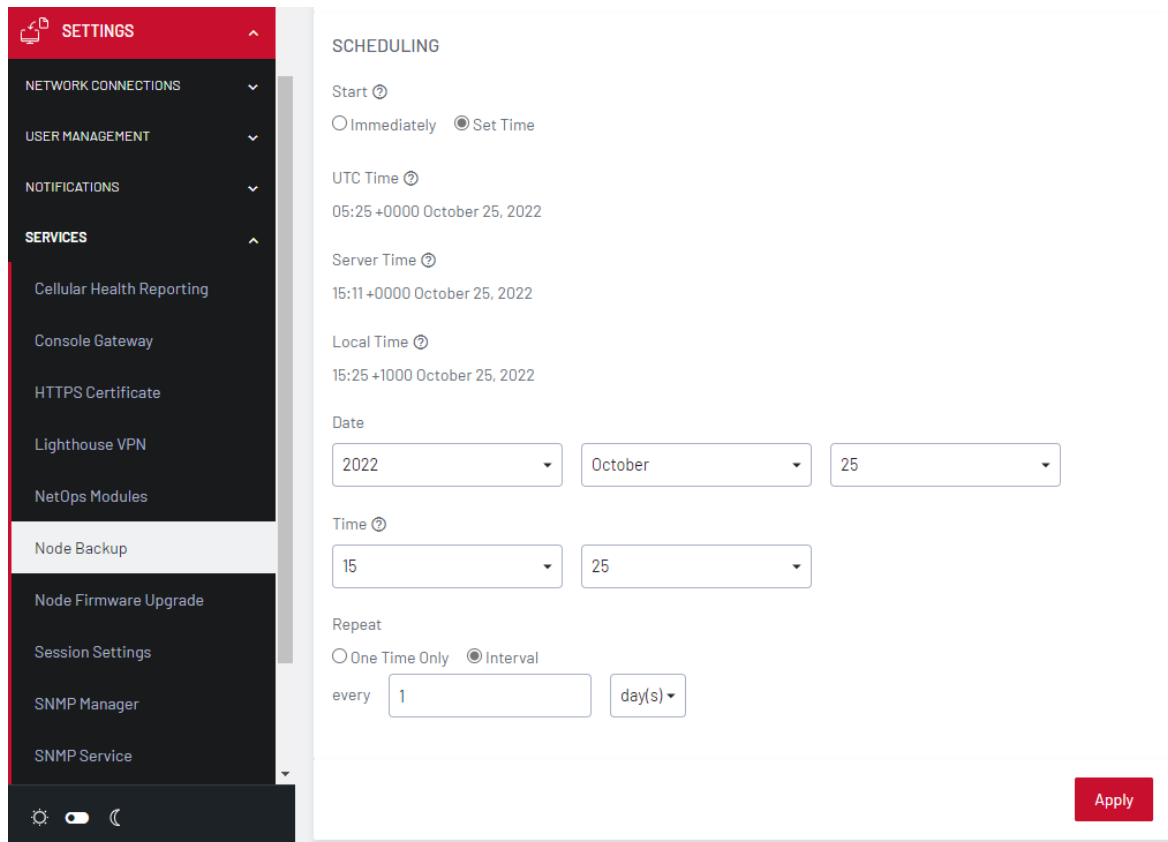

The screenshot shows the Lighthouse Settings interface. On the left is a dark sidebar with a menu. The 'SETTINGS' header is at the top. Below it are sections: NETWORK CONNECTIONS, USER MANAGEMENT, NOTIFICATIONS, and SERVICES. Under SERVICES, 'Node Backup' is selected and highlighted. Other options include Cellular Health Reporting, Console Gateway, HTTPS Certificate, Lighthouse VPN, NetOps Modules, Node Firmware Upgrade, Session Settings, SNMP Manager, and SNMP Service. At the bottom of the sidebar are icons for settings, a toggle switch, and a refresh icon.

The main content area is titled 'SCHEDULING'. It contains the following fields and options:

- Start**: Includes a help icon and two radio buttons: 'Immediately' (unselected) and 'Set Time' (selected).
- UTC Time**: Includes a help icon and displays '05:25 +0000 October 25, 2022'.
- Server Time**: Includes a help icon and displays '15:11 +0000 October 25, 2022'.
- Local Time**: Includes a help icon and displays '15:25 +1000 October 25, 2022'.
- Date**: Three dropdown menus for year (2022), month (October), and day (25).
- Time**: Two dropdown menus for hour (15) and minute (25).
- Repeat**: Includes a help icon and two radio buttons: 'One Time Only' (unselected) and 'Interval' (selected).
- every**: A text input field containing '1' followed by a dropdown menu set to 'day(s)'.

An 'Apply' button is located at the bottom right of the settings area.

2. For the **Start** time, choose either **Immediately** or choose **Set Time** to open editable **Date** and **Time** fields.
3. Choose how often you wish to **Repeat** the backup by selecting either **One Time Only** or **Interval**.
4. If you selected **Interval**, enter the values for **Days** or **Weeks**.

Note: You can modify these options by returning to **SETTINGS > SERVICES > Node Backup** at any time.



WORK WITH NODES


After a node has been enrolled, you can connect to it directly, either to monitor it, or to run commands on it. Multiple nodes can be selected.


CONNECT TO THE WEB-MANAGEMENT INTERFACE OF A NODE

After a node has been enrolled, you can connect to the enrolled node's web-management interface as follows:


1. Select **MANAGE > NODES > Node Web UI**. The nodes display:

NODE ID	NAME	STATUS	CELL HEALTH	INFO
nodes-5	SPT-OM2248	Connected Last status change 2 weeks ago	● Cellular Interface Disabled Last status change 2 weeks ago	MANAGEMENT VPN ADDRESS 192.168.128.5 NET1 MAC ADDRESS 00:13:c6:08:07:7c NET1:STATIC1 192.168.0.1 NET1:DHCP 10.220.3.6 NET1:IP6AUTO Unavailable WWAN0:DHCP Unavailable WWAN0:IP6AUTO Unavailable NET2:STATIC9 10.10.10.1 Show Details

2. Click  the **Access Web UI** link for the particular node. The web-based login for that node loads.
3. Authenticate using the username and password required by that node. The appearance of the Web UI depends on which device you have added. Below is the **ACM/CM/IM Web UI**, followed by the OM Web UI.

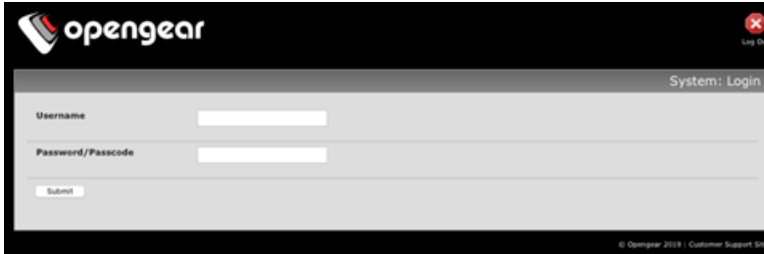

The screenshot shows the 'opengear' System Login interface. It features a dark header with the 'opengear' logo and a 'Log Out' button. The main area is a light gray box with the title 'System: Login'. It contains two input fields: 'Username' and 'Password/Passcode', followed by a 'Submit' button. At the bottom right, there is a small copyright notice: '© Opengear 2018 | Customer Support Site'.

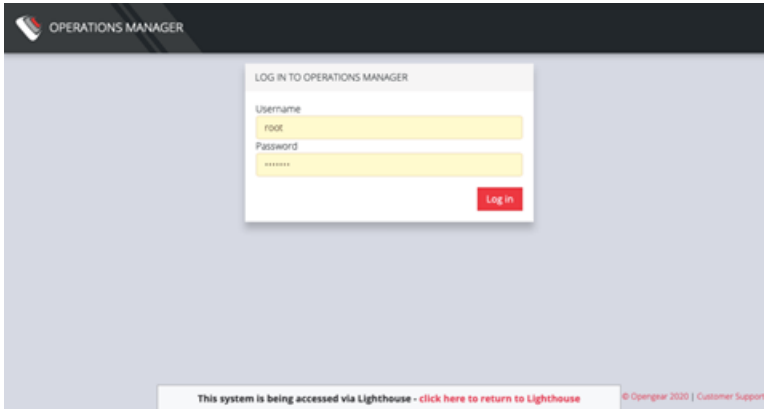

The screenshot shows the 'OPERATIONS MANAGER' login interface. It has a dark header with the 'opengear' logo and the text 'OPERATIONS MANAGER'. The main area is a light blue box with a central white login form titled 'LOG IN TO OPERATIONS MANAGER'. The form includes 'Username' and 'Password' fields, with 'root' entered in the username field. A red 'Log in' button is at the bottom right of the form. At the bottom of the page, a message states: 'This system is being accessed via Lighthouse - [click here to return to Lighthouse](#)'. A small copyright notice '© Opengear 2020 | Customer Support' is at the bottom right.


A message displays at the bottom of the browser and provides a link to return to Lighthouse.

CONNECTING TO A NODE'S SERIAL PORTS

You can connect to the enrolled node's serial ports via the Console Gateway option on the user interface if required. This allows the user to directly connect to any devices that are connected to the serial ports of the selected node.

FIND THE SERIAL PORTS

To search for serial ports on Lighthouse select **MANAGE > MANAGED DEVICES > Console Gateway**

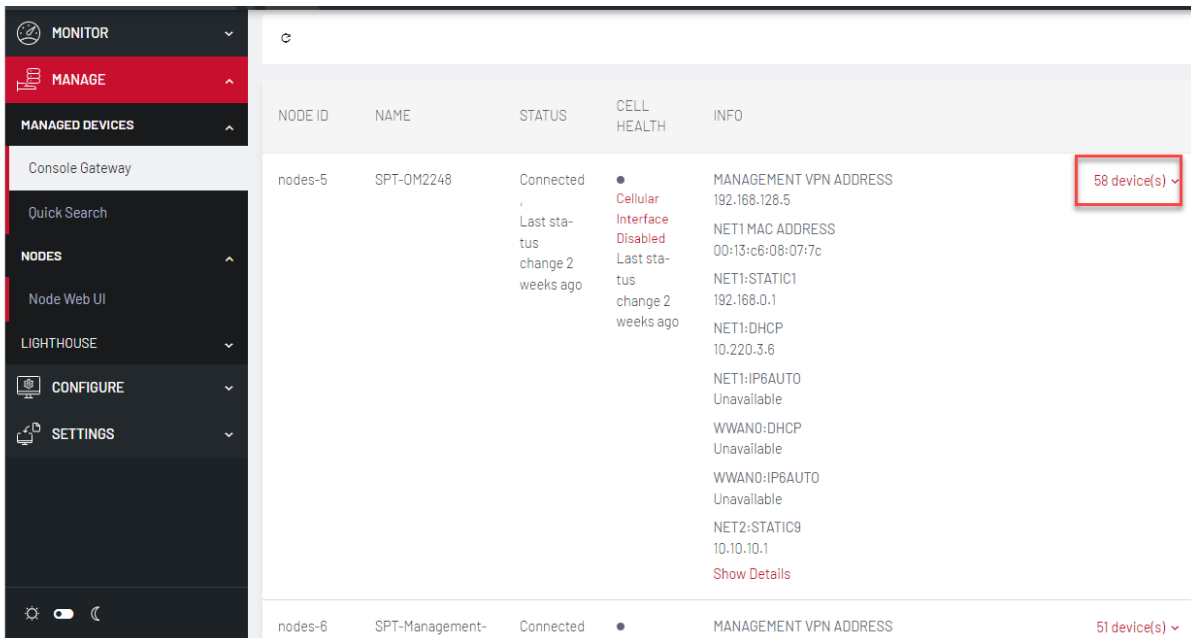

NODE ID	NAME	STATUS	CELL HEALTH	INFO
nodes-5	SPT-OM2248	Connected Last status change 2 weeks ago	Cellular Interface Disabled Last status change 2 weeks ago	MANAGEMENT VPN ADDRESS 192.168.128.5 NET1 MAC ADDRESS 00:13:c6:08:07:7c NET1:STATIC1 192.168.0.1 NET1:DHCP 10.220.3.6 NET1:IP6AUTO Unavailable WWAN0:DHCP Unavailable WWAN0:IP6AUTO Unavailable NET2:STATIC9 10.10.10.1 Show Details
nodes-6	SPT-Management-	Connected		MANAGEMENT VPN ADDRESS 192.168.128.5

or

Select **MANAGE > MANAGED DEVICES > Quick Search** A page displays all the connected nodes, the right most column displays the number of devices connected to the node.



Node ID	Port	Management ID	Status	Actions
ACM7004-5-L RS1	port5	SPT-Management-IM7248	Connected Last status change 2 weeks ago	Web Terminal SSH
OM1208-L RS1	port8	SPT-Management-IM7248	Connected Last status change 2 weeks ago	Web Terminal SSH
ACM7008-L RS1	port7	SPT-Management-IM7248	Connected Last status change 2 weeks ago	Web Terminal SSH
OM2200 RS2	port8	SPT-Management-IM7248	Connected Last status change 2 weeks ago	Web Terminal SSH
Port 1	port1	SPT-IM7216	Connected Last status change 8 days ago	Web Terminal SSH
Port 13	port13	SPT-IM7216	Connected Last status change 8 days ago	Web Terminal SSH
Port 2	port2	acm7008-2-l	Connected Last status change 2 weeks ago	Web Terminal SSH

Items per page: 10

The **Items per page** drop-down on **Quick Search** page allows the user to select the number of ports per page. This setting applies to the current user session only and will be lost when user logs out.

Note:Port-centric search allows filtering via the Managed Device Filters and displays a list of ports within enrolled nodes that match the search terms, while node-centric search allows filtering via Smart Groups and node properties.

Quick Search can be used to filter on the managed device label.

NODE-CENTRIC SEARCHING

1. Select **MANAGE > MANAGED DEVICES > Console Gateway**.
2. Find the port using the **Smart Group Filtering** options to restrict the listed nodes.

3. Click the **+** button in the **Access Console Ports** row adjacent the node.

PORT-CENTRIC SEARCHING


1. Select **MANAGE > MANAGED DEVICES > Console Gateway**.
2. Find the particular port by using the **Managed Device Filtering** options to restrict the listed managed devices within enrolled nodes.

Once the serial port is located, serial port access via **Console Gateway** can be accomplished in two ways:

- Web Terminal.
- SSH.

QUICK SEARCH

1. Select **MANAGE > MANAGED DEVICES > Quick Search**.
2. Enter the managed device label, aka name, in the **Quick Managed Device Search** field. This search live-updates as user type.

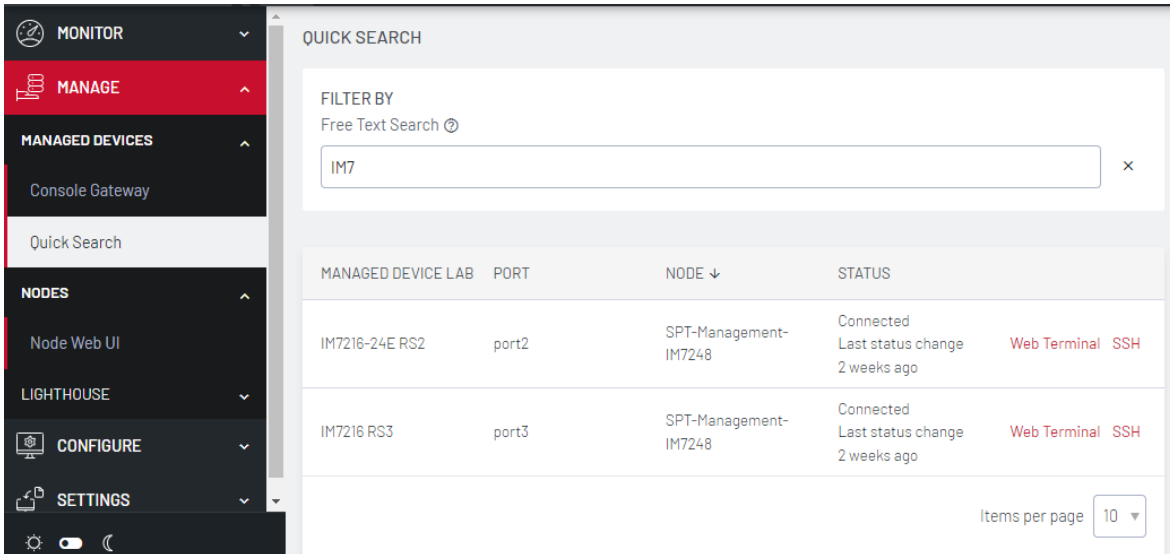

The screenshot shows the Lighthouse web interface. On the left is a dark sidebar with navigation links: MONITOR, MANAGE (highlighted in red), MANAGED DEVICES, Quick Search, NODES, Lighthouse, CONFIGURE, and SETTINGS. The main content area is titled 'QUICK SEARCH' and contains a 'FILTER BY' section with a 'Free Text Search' input field containing 'IM7'. Below the search bar is a table of managed devices.

MANAGED DEVICE LAB	PORT	NODE ↓	STATUS
IM7216-24E RS2	port2	SPT-Management-IM7248	Connected Last status change 2 weeks ago Web Terminal SSH
IM7216 RS3	port3	SPT-Management-IM7248	Connected Last status change 2 weeks ago Web Terminal SSH

At the bottom right of the table area, there is a pagination control: 'Items per page' with a dropdown menu set to '10'.

3. Use **Web Terminal** and/or **SSH** links on a particular port to access it.



ACCESS VIA HTML5 WEB TERMINAL

To provide easy console port access, Lighthouse includes a HTML5 Web Terminal. The HTML5 Web Terminal includes native cut, copy and paste support. The terminals available on nodes do not.

To access a console port via the Web Terminal:

1. Locate the particular port by using one of the search techniques described in ["Connecting to a node's serial ports" on page 195](#).
2. Click the **Web Terminal** link for the particular port. A new tab opens containing the Web Terminal.

To close a terminal session, close the tab, or type ~. in the **Web Terminal** window.

ACCESS A SERIAL PORT VIA SSH

To access ports via SSH, use a direct SSH link from the Web UI to connect to the port.

To access a console port via a Direct SSH link:

1. Locate the particular port by using one of the search techniques discussed in ["Connecting to a node's serial ports" on page 195](#).

Locate the particular port by using one of the search techniques discussed in ["Connecting to a node's serial ports" on page 195](#).

2. Click the **SSH** link to connect to the URL.


These auto-generated links use the colon (:) as the field-delimiter. The auto-generated SSH link has the following form:

```
ssh://user-name:console-server-name:port-number@lighthouse-  
ip-address
```

Some web browsers associate the colon character with delimiting the protocol at the beginning of a URI so they don't pass these auto-generated URIs correctly.

To work around this, the default delimiter character can be changed. To change this character:

1. Select **SETTINGS > SERVICES > Console Gateway**

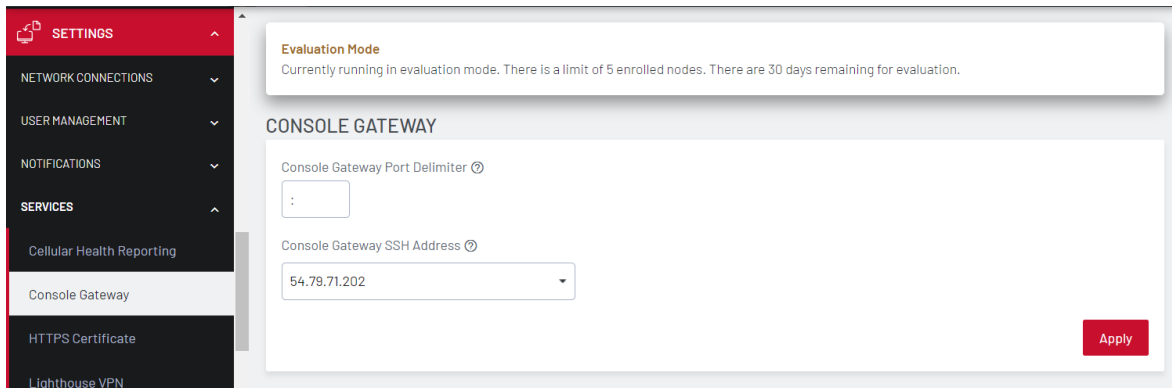

- 2.

3. Enter a delimited character in the **Console Gateway Port Delimiter** text-entry field. The carat, `^`, is the most common alternative.
4. Use the **Console Gateway SSH Address** drop-down menu to choose an address from which to SSH. The list of available addresses contains the current network interfaces and external network addresses. The value defaults to `net1:dhcp` if it exists and `net1:static` otherwise. The additional external addresses can be added to this list using the **SETTINGS > SYSTEM> Administration** page.

To use the console chooser menu, SSH to the Lighthouse appliance with the username format `username:serial`. This connects to the Lighthouse and presents a list of nodes that the user can access. Once the user selects a node, they are presented with a list of console ports they have access to. When one is selected, the user is connected to that port. For faster access, there are username format shortcuts that give more specific lists of serial ports, or direct access without a menu.

- **username:node_name**

When a valid node name is specified, a list of console ports that the user can access on that node is shown. If they do not have access to this node, the connection fails.

- **username:node_name:port_name**

When a valid node name and port name are specified, and the user has access to that node and port, the user is connected to this port. If they do not have access to that port, the connection fails.

- **username:port_name**

When a valid port name is specified, the user is connected to first port with that port name found. If the user does not have access to this port, the connection fails.

NOTE: Node names and port names are not case sensitive.



EXAMPLE CONSOLE GATEWAY SESSION

```
$ ssh adminuser:serial@lighthouse-name-or-ip-here  
1: cm71xx  
Connect to remote > 1  
1: Cisco Console 2: Port 2  
Connect to port > 1  
router#
```

SELECTING NODES USING SHELL-BASED TOOLS

There are a number of ways to select nodes, also known as console servers, as targets on which to run a command. These can be used multiple times, or together, to select a range of console servers:

Select individually by name, address, Lighthouse VPN address, config index or smart group (as per `--list- nodes` output):

```
node-command --node-name BNE-R01-IM4248
node-command --node-address 192.168.0.33
node-command --node-index nodes-1
node-command --smartgroup="model-acm"
```

To Select all nodes

```
node-command --all
```

To running commands on selected nodes

Once nodes are selected, the commands to be run for each can be given. These are run on each managed node in parallel. Any command which can be run from a node shell can be run on each managed node.

Note:All commands are run as root.

For example, to check the version on two specific, configured nodes, selecting one by name and the other by index, run the following command:

```
node-command --node-name BNE-R01-ACM7004-5 --node-index
nodes-2 cat
/etc/version
```




When using non-trivial selection arguments, check which target nodes have been selected on the initial command pass by using the `--list-nodes` switch rather than the final command.

NODE ORGANIZATION AND FILTERING

To provide clear and customized access to nodes, Lighthouse uses Smart Groups which allow node properties and user-supplied tags, consisting of a name and value, to be compiled into a search expression.

These search expressions can be saved and used to filter the various lists of nodes in the Web UI, for example when selecting a serial port to connect to or to connect to the node's Web UI. They can also be used for define and restrict the nodes that a particular group of users can access.

To help locate managed devices, Lighthouse includes Port Filtering which allows users to search for port labels and port tags on a node. This search can be saved and applied on the **MANAGE > MANAGED DEVICES > Console Gateway** page.

FILTER NODES

Filters enable you to quickly find a particular node or set of nodes. The filters are:

- **Free Text Search.**
- **Smart Group Filtering.**
- **Port Filtering.**

You can see how to use these in ["Monitor Nodes" on page 159](#).

CREATING SMART GROUPS

Smart Groups are used within Lighthouse to group related nodes.


Smart Groups can also be used to filter visible nodes on pages that display enrolled nodes (such as **CONFIGURE > NODE Enrollment > Enrolled Nodes**) to make it easier to drill down to a particular console.

Smart Groups are dynamic, when more nodes are added to the system, the filters update automatically.

A user group can be linked to a particular **Smart Group**. When a user group is linked to a smart group in this fashion, members of the group inherit rights over all nodes in the smart group based on the group's role. "[Modifying existing groups](#)" on [page 320](#) for how to set a group's role and linked Smart Group.


To create a Smart Group:

1. Navigate to any page which displays the Smart Group search interface, for example **MONITOR > Nodes**.

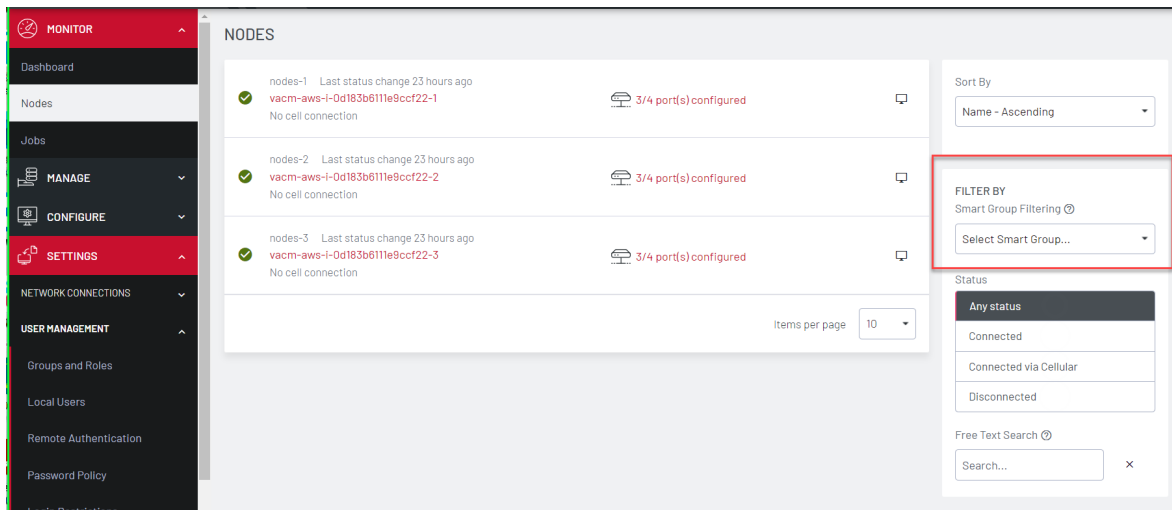

2. Move to the **Smart Group Filtering** and select **New Smart Group** from the displayed list

3. Click the **Field to search** dropdown to select a node attribute to filter on.

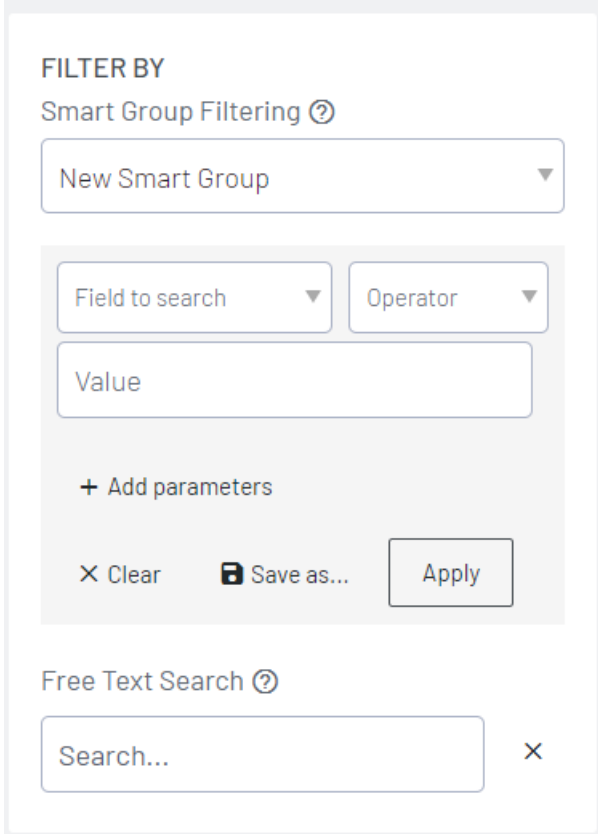

The screenshot shows a 'FILTER BY' section with a 'Smart Group Filtering' dropdown set to 'New Smart Group'. Below this is a filter configuration area with three fields: 'Field to search' (a dropdown menu), 'Operator' (a dropdown menu), and 'Value' (a text input field). Below these fields is a '+ Add parameters' button. At the bottom of the filter configuration area are three buttons: 'X Clear', 'Save as...' (with a document icon), and 'Apply'. Below the filter configuration area is a 'Free Text Search' section with a search input field containing the placeholder text 'Search...' and a close button 'X'.

Node attributes include details about the device (**Internal VPN Address, MAC Address, Name, Product, SSH Port, Firmware Version, Model, Serial Number, Node ID, Connection Status, Cell Health**), and include any **Tags** that have been configured in the system. For filtering access to devices, tags are the most useful attributes to filter on. When a tag is selected, the **Field to search** text box contains tag values.

4. Select the **Operator** to apply to the Value.
5. Select the **Value** to be matched against.
6. To enter multiple search parameters, click - **Add parameters**
7. The AND OR buttons display

- Select AND if the filter must match all values.
- Select OR if one or the other values must match.

8. Enter the additional details in the Field to search, Operator and Value fields.

Note:Note: Click the - button to remove the additional Search parameters if necessary.


9. Click **Apply** to see the results of the filter.
10. Click **Save As** and type in a name for your new Smart Group.

This Smart Group can now be used for filtering nodes for display and for access.


EDITING A SMART GROUP

To edit a Smart Group:

1. Select **CONFIGURE > Edit Smart Groups**.

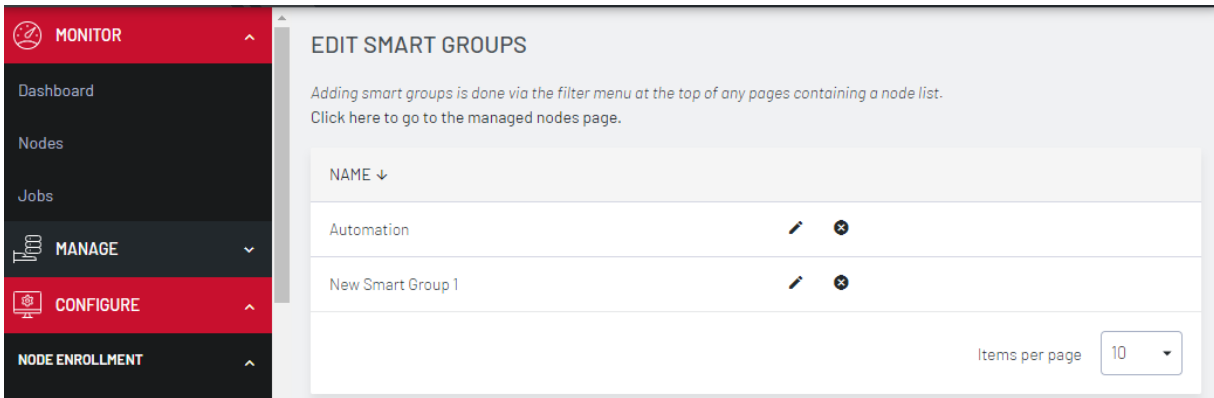

2. Click **Delete** to delete an existing Smart Group.
3. Click **Edit Group** button to change a Smart Group's name.

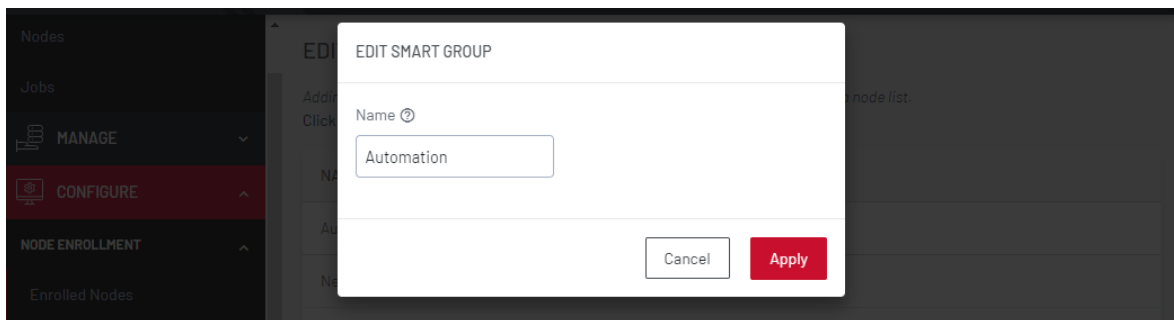

To change the search parameters used by a Smart Group:

1. Navigate to a page that displays Smart Groups for filtering (for example, **CONFIGURE > NODE Enrollment > Enrolled Nodes**).
2. Select the required Smart Group to be changed from the **Select Smart Group** drop-down menu.
3. Change the **Field to search** and **Operator** values as required.
4. Click **Save Changes**.

5. Retain the Smart Group **Name** and click **Apply**. The changed search parameters overwrite the parameters of the Smart Group.


CREATING PORT FILTERS

Use **Port Filters** to easily find ports on nodes. The **MANAGE > MANAGED DEVICES > Ports** page makes it easier to find a particular port.

Ports are dynamically updated when more nodes with managed devices are added. Ports can be filtered by multiple parameters using either the AND and OR boolean operators.

To create a Port Filter:

1. Select the **MANAGE > MANAGED DEVICES > Ports** page.
2. On **ADVANCED FILTER pane** and select **Port Filter**.

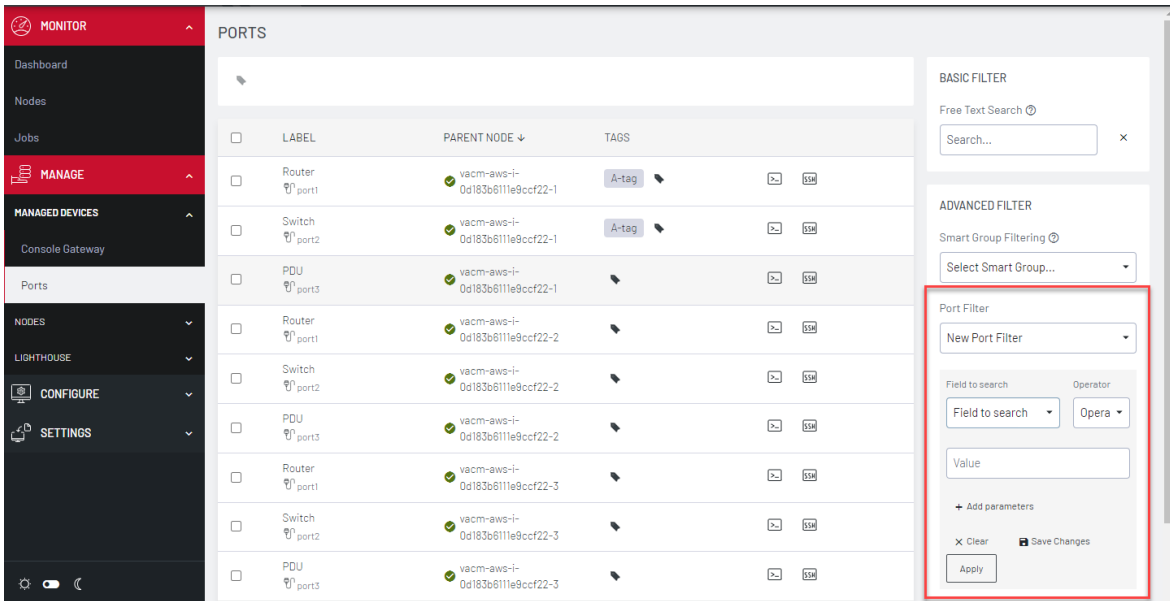

The screenshot displays the Lighthouse interface. On the left is a sidebar with navigation options: MONITOR, MANAGE, MANAGED DEVICES, and NOES. The main content area shows the 'PORTS' table with columns for LABEL, PARENT NODE, and TAGS. The table lists various ports (Router, Switch, PDU) under different parent nodes. On the right, the 'ADVANCED FILTER' pane is visible, with the 'Port Filter' section highlighted by a red box. This section includes a 'New Port Filter' dropdown, a 'Field to search' dropdown, an 'Operator' dropdown, and a 'Value' input field. There are also buttons for 'Add parameters', 'Clear', 'Save Changes', and 'Apply'.

3. Click **Field to search** to select a node attribute to filter on.
 - Select either **Port Label** or **Port Tag**.
4. If using Port Labels, click **Operator** to select the operator to apply to the Value.
5. Enter the **Value** to be matched against.
6. To enter multiple search parameters, click - **Add parameters**

7. The AND OR buttons display
 - Select AND if the filter must match all values.
 - Select OR if one or the other values must match.
8. Enter the additional details in the Field to search, Operator and Value fields.


Note:Note: Click the **x** button to remove the additional Search parameters if necessary.

9. Click **Apply** to see the results of the filter.
10. Click **Save As** and enter a name for the filter.

The new **Port Filter** can now be used for filtering nodes by ports.

EDITING AN EXISTING PORT FILTER

To edit an existing Port Filter, select **CONFIGURE > Edit Port Filters** page.

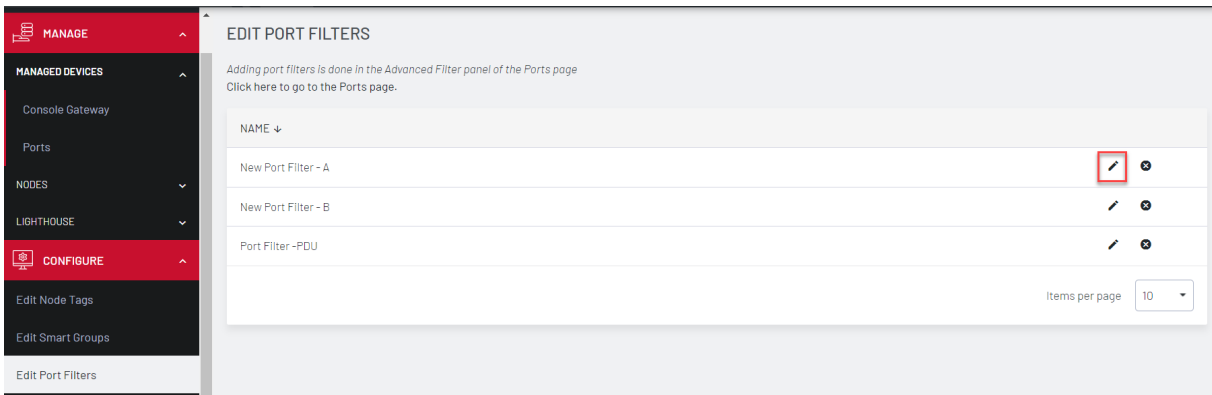


- Click the **Delete** button to delete an existing Port Filter.
- Click the **Edit** button to change a Port Filter's name.

EDIT PORT FILTER

Name ?

To change the search parameters for a Port Filter:

1. Navigate to a page that displays the Port Filters, such as **MANAGE > MANAGED DEVICES > Ports**.

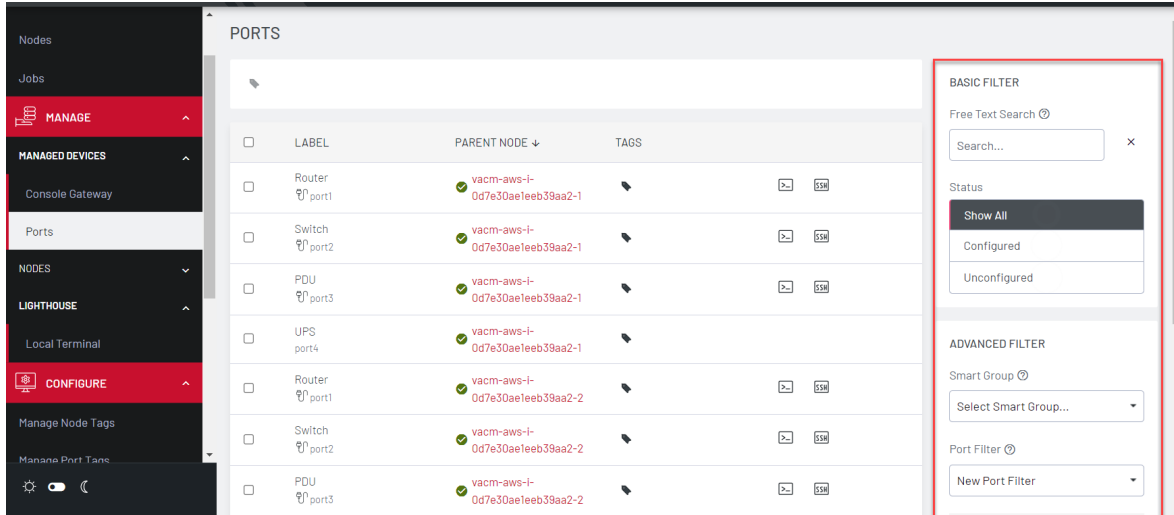

The screenshot shows the Lighthouse web interface. On the left is a dark sidebar with navigation options: Nodes, Jobs, MANAGE (highlighted), MANAGED DEVICES (with sub-items Console Gateway and Ports), NODES, LIGHTHOUSE (with sub-items Local Terminal and Local Terminal), CONFIGURE (highlighted), Manage Node Tags, and Manage Port Tags. The main content area is titled 'PORTS' and contains a table with columns: LABEL, PARENT NODE, and TAGS. The table lists various network components like Router, Switch, PDU, and UPS across different parent nodes. On the right, a sidebar contains filter options: BASIC FILTER (with a Free Text Search box), Status (with buttons for Show All, Configured, and Unconfigured), and ADVANCED FILTER (with Smart Group and Port Filter dropdowns). The 'Port Filter' dropdown is currently set to 'New Port Filter'.

	LABEL	PARENT NODE	TAGS
<input type="checkbox"/>	Router port1	vacm-aws-l-0d7e30ae1eeb39aa2-1	
<input type="checkbox"/>	Switch port2	vacm-aws-l-0d7e30ae1eeb39aa2-1	
<input type="checkbox"/>	PDU port3	vacm-aws-l-0d7e30ae1eeb39aa2-1	
<input type="checkbox"/>	UPS port4	vacm-aws-l-0d7e30ae1eeb39aa2-1	
<input type="checkbox"/>	Router port1	vacm-aws-l-0d7e30ae1eeb39aa2-2	
<input type="checkbox"/>	Switch port2	vacm-aws-l-0d7e30ae1eeb39aa2-2	
<input type="checkbox"/>	PDU port3	vacm-aws-l-0d7e30ae1eeb39aa2-2	

2. Select the required Port Filter from the **Port Filter** list.
3. Change the parameters (for example, **Operator** values) as required.
4. Do not change the name of the Port Filter.
5. Click **Save as**.
6. Click **Apply**. The modified **Port Filter** overwrites the existing Port Filter.

Note: Do not change the name of the Port Filter.


Creating Managed Device Filters

Use **Managed Device Filters** to group managed devices on nodes. The **MANAGE > MANAGED DEVICES > Console Gateway** page makes it easier to find a particular console.

Managed Device Filters are dynamically updated when more nodes with managed devices are added. Managed Filters can be filtered by multiple parameters using either the AND and OR boolean operators.

To create a Managed Device Filter:

1. Select the **MANAGE > MANAGED DEVICES > Console Gateway** page.
2. On *the Managed Device Filtering pane* and select **New Managed Device Filter**.

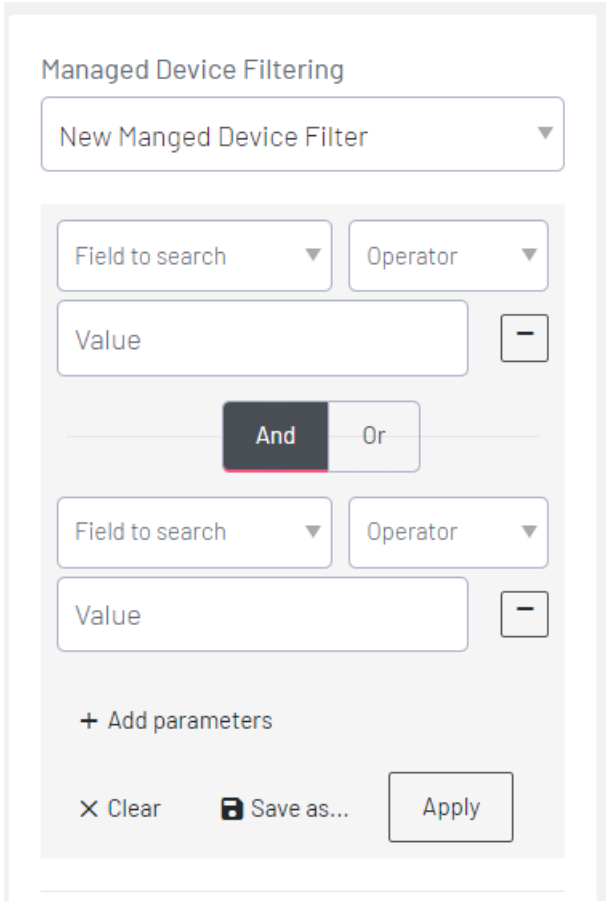

The screenshot shows the 'Managed Device Filtering' pane. At the top, there is a dropdown menu labeled 'New Manged Device Filter'. Below this, there are two identical filter rule sections. Each section contains a 'Field to search' dropdown, an 'Operator' dropdown, and a 'Value' text input field with a minus sign button to its right. Between the two filter sections are 'And' and 'Or' buttons. At the bottom of the pane, there is a '+ Add parameters' button, and a row of three buttons: 'X Clear', 'Save as...' (with a floppy disk icon), and 'Apply'.

3. Click **Field to search** to select a node attribute to filter on.
 - Select **Port Label** configuration.
4. Click **Operator** to select the operator to apply to the Value.
5. Enter the **Value** to be matched against.
6. To enter multiple search parameters, click - **Add parameters**
7. The AND OR buttons display

- Select AND if the filter must match all values.
- Select OR if one or the other values must match.

8. Enter the additional details in the Field to search, Operator and Value fields.


Note:Note: Click the - button to remove the additional Search parameters if necessary.

9. Click **Apply** to see the results of the filter.
10. Click **Save As** and enter a name for the filter.

The new **Managed Device Filter** can now be used for filtering nodes with managed devices.

EDITING AN EXISTING MANAGED DEVICE FILTER

To edit an existing Managed Device Filter, select **CONFIGURE > Edit Managed Device Filters** page.

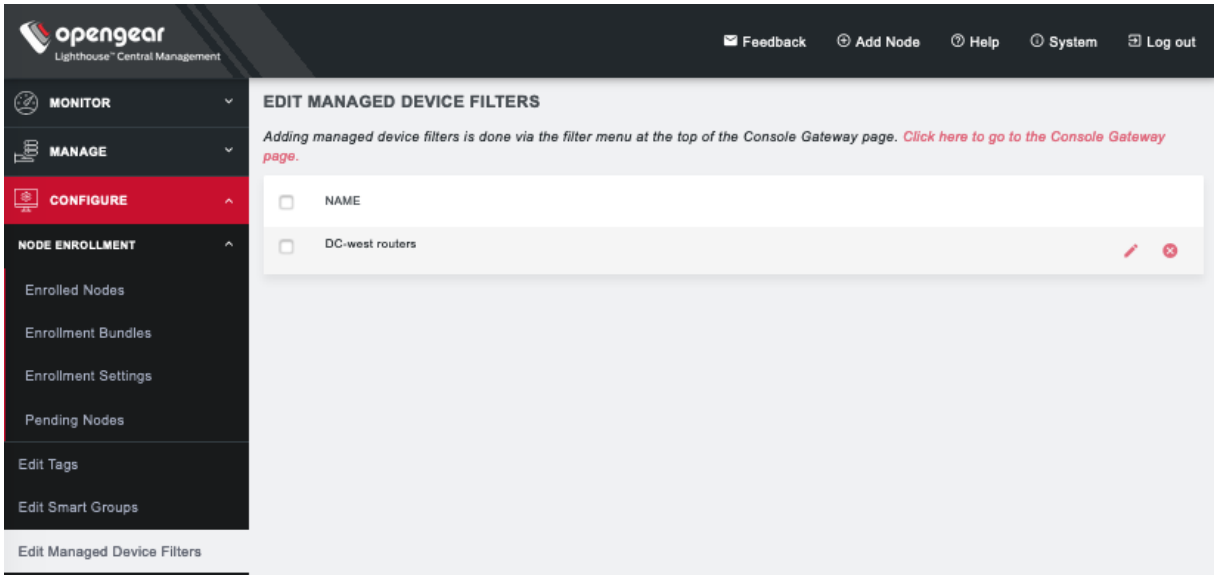

- Click the **Delete** button to delete an existing Managed Device Filter.
- Click the **Edit** button to change a Managed Device Filter's name.

To change the search parameters used by a Managed Device Filter:

1. Navigate to a page that displays the Managed Device Filters, such as **MANAGE > MANAGED DEVICES > Console Gateway**.
2. Select the required Managed Device Filter from the **Select Managed Device Filter** list.
3. Change the parameters (for example, **Operator** values) as required.
4. Do not change the name of the Managed Device Filter.
5. Click **Save as**.

6. Click **Apply**. The modified **Managed Device Filter** overwrites the existing Managed Device Filter.

EDIT MANAGED DEVICE FILTER

Name ⓘ

DC-west routers

Cancel

Apply

Note: Do not change the name of the Managed Device Filter.

UPGRADE NODES VIA THE UI

When you need to upgrade nodes to the latest firmware, for example, for security fixes, use the Node Upgrade UI to upgrade up to 5000 connected nodes per task. The Node Upgrade UI allows you to upgrade nodes either immediately or at a scheduled time, even outside normal business hours.

The Node Upgrade UI is available in the Web UI under **Settings > Services > Node Firmware Upgrade**.

Completed jobs with the nodes selected can be duplicated so as to allow easy sequential upgrades. Nodes that failed to upgrade can be re-scheduled.

Upon opening the Node Firmware Upgrade window there are two tabs accessible, plus access to the upgrade scheduling wizard, these are:

- Upgrade Tasks – a filtered dashboard where you can view scheduled and completed tasks and see their status.
- File Manager – An area that allows upgrade files to be uploaded and a table that displays previously uploaded files.
- Node Firmware Upgrade scheduling wizard – This is where you can set up and schedule firmware upgrades. The wizard is accessed by clicking on the + button in the Upgrade Tasks tab.

Completed jobs with the nodes selected can be duplicated so as to allow easy sequential upgrades. Nodes that failed to upgrade can be re-scheduled.



FIRMWARE FILES


Before you upgrade, you need access to firmware files.

UPLOAD A FIRMWARE FILE

The Node Upgrade UI is available in the Web UI under **Settings > Services > Node Firmware Upgrade**. Use the Upload tool on the File Manager tab to upload one file at a time.

Note: Only one file may be uploaded at a time using the upload tool. If multiple files are selected and placed in the drag and drop field, only the last file that was selected will be uploaded.

1. Select the 'File Manager' tab in the Node Firmware Upgrade UI section.
2. Either select 'upload a file' to open an explorer view, then select the file. Or
3. Drag and drop the file into the upload area.

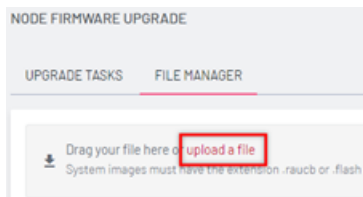

In-progress uploads can be cancelled by clicking the Close button (X).

The file upload will continue even if you click elsewhere in the Lighthouse UI, however, the upload will be cancelled if you close the website or if the HTTPS connection to Lighthouse is closed.


DELETE A FIRMWARE FILE

The Node Upgrade UI is available in the Web UI under **Settings > Services > Node Firmware Upgrade**. Use the Delete tool on the File Manager tab to delete one file at a time.

To delete a firmware file that is no longer needed:

1. Select the **File Manager** tab on the **Node Firmware Upgrade UI** page.
2. Click the delete button (■) next to the firmware file you wish to delete.

Note: If the selected firmware file is required by an ongoing or upcoming firmware upgrade task, an error message displays and the file is not deleted.

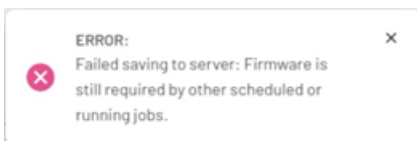



NODE UPGRADE TASKS

To upgrade a node you will need to set up a task.


CREATE AN UPGRADE TASK

The Node Upgrade UI is available in the Web UI under **Settings > Services > Node Firmware Upgrade**. Use the Upgrade tasks tab to

- Upgrade a node
- Schedule a node upgrade
- Upload a new firmware file


To upgrade a node use the task information table:

1. Click the Schedule an Upgrade button (+) above the task information table to schedule an upgrade (or start one immediately).
2. The **Node Firmware Upgrade** wizard displays. Enter a name/title for the upgrade task.

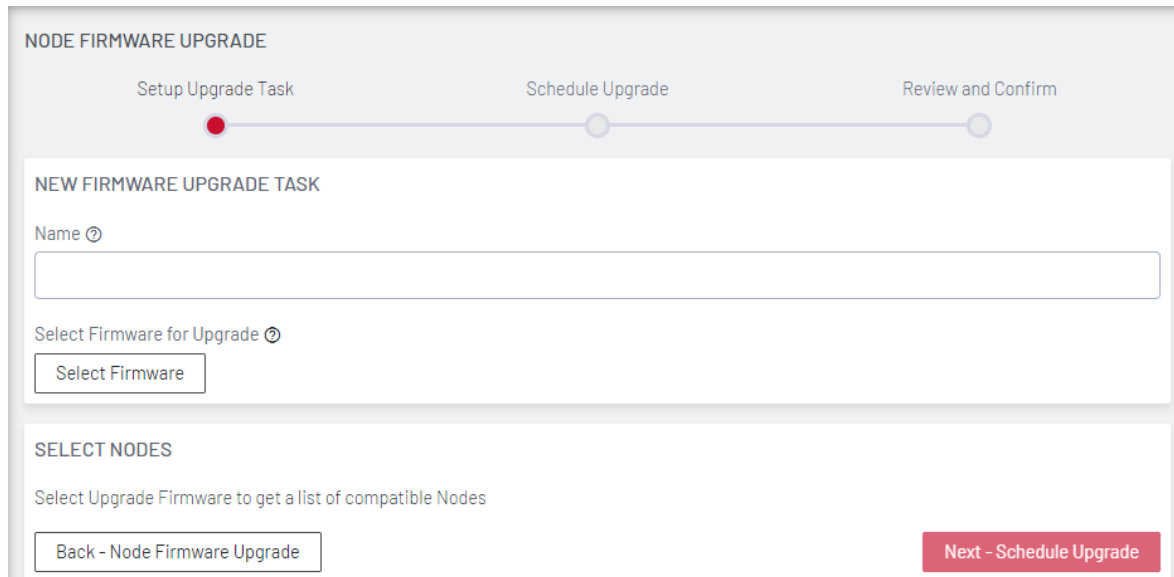


The screenshot shows the 'NODE FIRMWARE UPGRADE' wizard. At the top, a progress bar has three steps: 'Setup Upgrade Task' (active, red dot), 'Schedule Upgrade' (grey dot), and 'Review and Confirm' (grey dot). Below the progress bar, the 'NEW FIRMWARE UPGRADE TASK' section contains a 'Name' input field with a help icon, a 'Select Firmware for Upgrade' section with a 'Select Firmware' button, and a 'SELECT NODES' section with the instruction 'Select Upgrade Firmware to get a list of compatible Nodes'. At the bottom, there are two buttons: 'Back - Node Firmware Upgrade' and 'Next - Schedule Upgrade'.

- Click the **Select Firmware** button. The Select Firmware list displays.

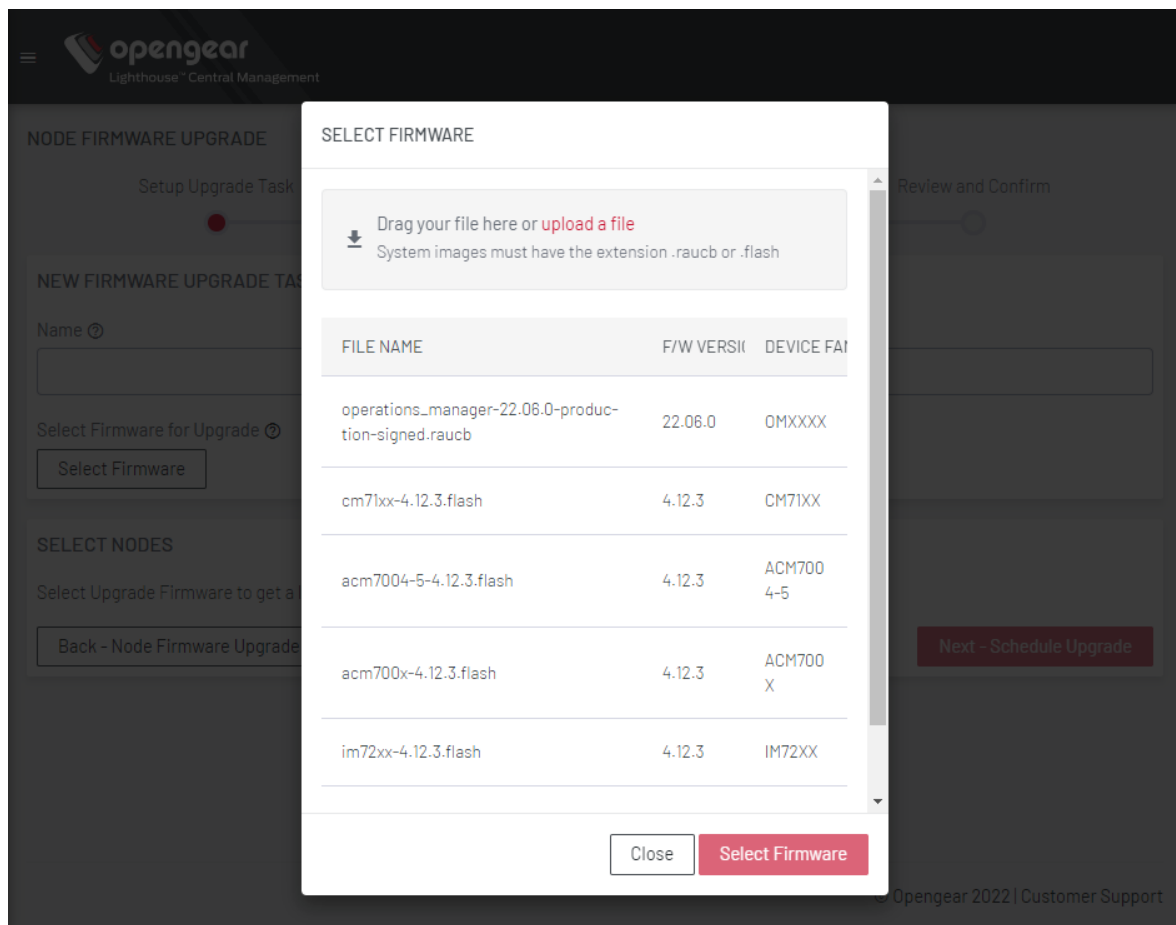

- Select the firmware upgrade or upload new firmware for the upgrade task. Click **Select Firmware** button.

- Select the nodes to be upgraded. Select **Next - Schedule Upgrade**.

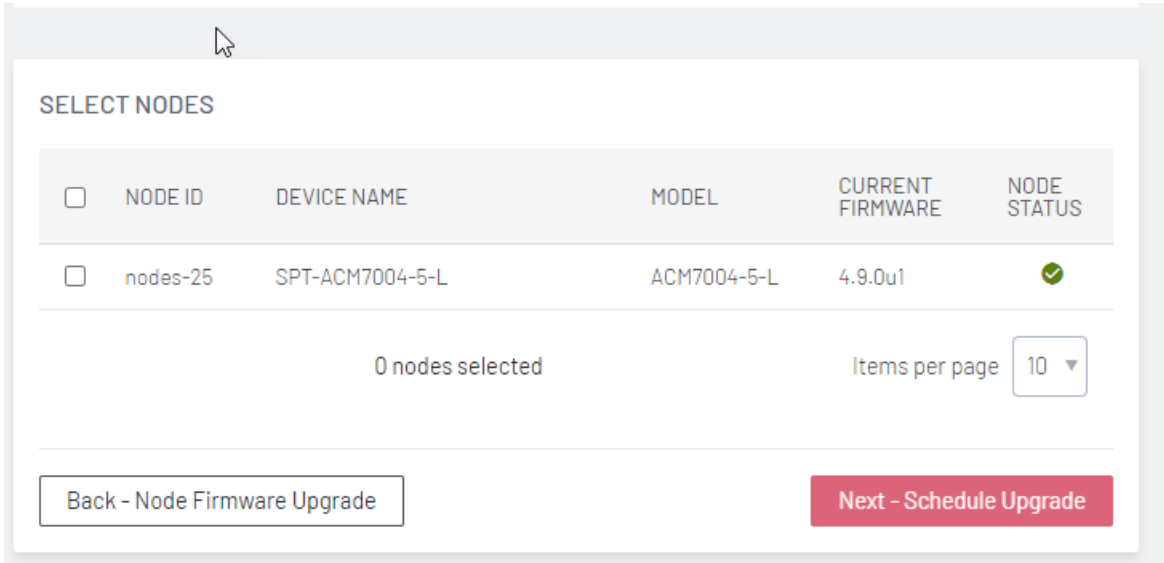

SELECT NODES

<input type="checkbox"/>	NODE ID	DEVICE NAME	MODEL	CURRENT FIRMWARE	NODE STATUS
<input type="checkbox"/>	nodes-25	SPT-ACM7004-5-L	ACM7004-5-L	4.9.0u1	✓

0 nodes selected


Items per page 10 ▼

Back - Node Firmware Upgrade

Next - Schedule Upgrade

Note: Compatible nodes that have already been scheduled for an upgrade cannot be selected, these are visible in the list but appear greyed-out. Nodes that are not compatible with the firmware file will not be listed.

- Select the **Start time** as either **Immediately after creation** for immediate start, or, **Set time**. For Set Time, enter the Scheduled time Date and Time.

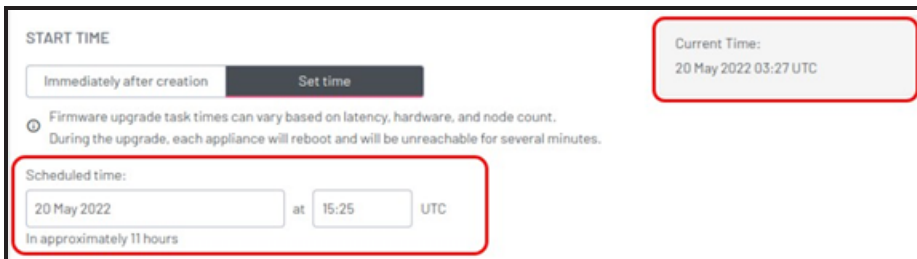

START TIME

☐ Immediately after creation
 ☒ Set time


Current Time:
 20 May 2022 03:27 UTC

ⓘ Firmware upgrade task times can vary based on latency, hardware, and node count.
 During the upgrade, each appliance will reboot and will be unreachable for several minutes.

Scheduled time:
 20 May 2022 at 15:25 UTC
 In approximately 11 hours

Note: The scheduled time is always in UTC.

7. If Upgrade in Failover is selected, it is selected either in bulk, by dropdown selection (a), or, individually by a toggle switch beside each table row (b):

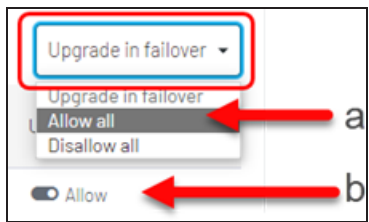

Note: Selecting this option may result in considerable cell charges in the event of a failover.


8. Click **Next – Review and Confirm** to go to the review screen. Check the schedule details are correct. To change schedule details, click **Back – Schedule Upgrade**, all data local data will be preserved while you change parameters on previous screens.
9. Select **Confirm**, and type **Yes** at the prompt, then click **Confirm** to create the task.

CANCEL AN UPGRADE TASK

You can cancel a task that has not yet completed the upgrade.

To cancel an upgrade task"

1. Select **Settings > Services > Node Firmware Upgrade**
2. In the task list, select the task name you wish you cancel, the Task Details screen displays.
3. Click the X button (top-right) to cancel the task.

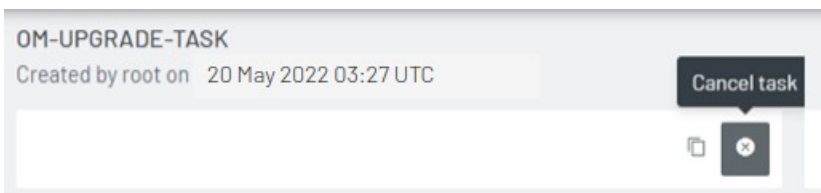

Note: You cannot cancel upgrade tasks that have already been completed.

Limitations:


- Do not cancel an upgrade job just as it is about to begin, for example, 10 seconds before or after the start time.
- If an upgrade is cancelled while in progress, only nodes that have not yet been upgraded will be cancelled.

COPY A SCHEDULED TASK

You can copy a scheduled task in order to create a new upgrade task. The new upgrade task will use the nodes that were selected for the original task you are copying, for example to add or remove nodes from the list. You can also select different firmware or use the same firmware for the list of nodes.

Note:For a task to be copied, the task must have already run or been cancelled, and display an Upgrade Status of Completed.

1. Navigate to the Node Firmware Upgrade Home screen. The Node Upgrade UI is available in the Web UI under **Settings > Services > Node Firmware Upgrade**

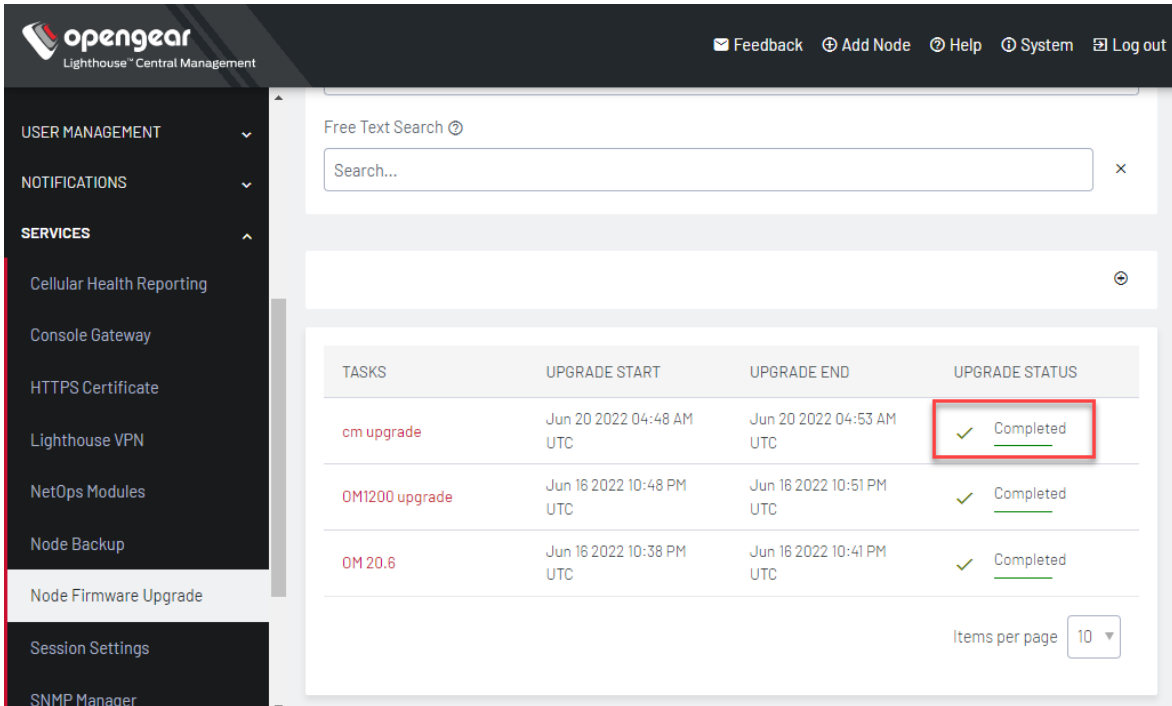


The screenshot shows the OpenGear Lighthouse Central Management web interface. The left sidebar contains a menu with the following items: USER MANAGEMENT, NOTIFICATIONS, SERVICES (expanded), Cellular Health Reporting, Console Gateway, HTTPS Certificate, Lighthouse VPN, NetOps Modules, Node Backup, Node Firmware Upgrade (selected), Session Settings, and SNMP Manager. The main content area features a search bar and a table of upgrade tasks. The table has four columns: TASKS, UPGRADE START, UPGRADE END, and UPGRADE STATUS. Three tasks are listed, all with a 'Completed' status. The first task, 'cm upgrade', is highlighted with a red box around its status.

TASKS	UPGRADE START	UPGRADE END	UPGRADE STATUS
cm upgrade	Jun 20 2022 04:48 AM UTC	Jun 20 2022 04:53 AM UTC	✓ Completed
OM1200 upgrade	Jun 16 2022 10:48 PM UTC	Jun 16 2022 10:51 PM UTC	✓ Completed
OM 20.6	Jun 16 2022 10:38 PM UTC	Jun 16 2022 10:41 PM UTC	✓ Completed

Items per page: 10

2. Select the task you wish you copy, by clicking the task name in the task table

3. Click the Copy button to copy the task

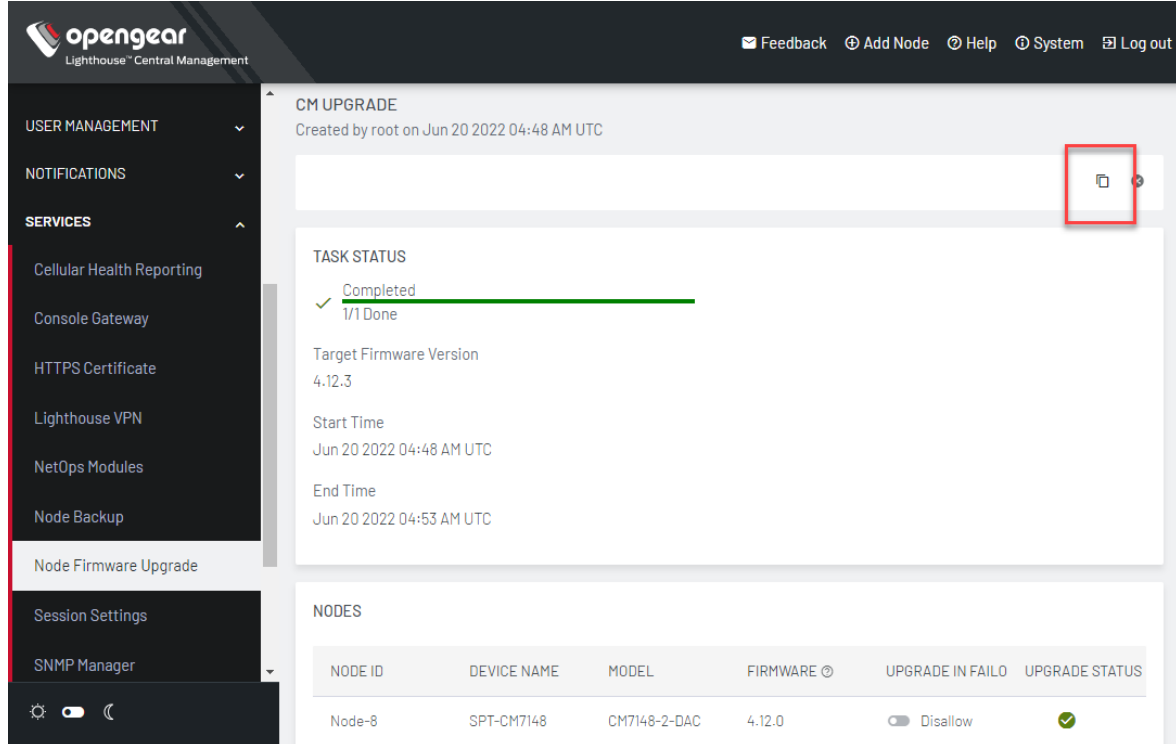

The screenshot shows the OpenGear Lighthouse Central Management interface. The left sidebar contains navigation links: USER MANAGEMENT, NOTIFICATIONS, SERVICES (expanded), Cellular Health Reporting, Console Gateway, HTTPS Certificate, Lighthouse VPN, NetOps Modules, Node Backup, Node Firmware Upgrade, Session Settings, and SNMP Manager. The main content area displays a 'CM UPGRADE' task created by root on Jun 20 2022 04:48 AM UTC. The task status is 'Completed' with a green progress bar. Below the status, the target firmware version is 4.12.3, and the start and end times are listed. A red box highlights the copy icon in the top right corner of the task details panel.

TASK STATUS

✓ Completed
1/1 Done

Target Firmware Version
4.12.3

Start Time
Jun 20 2022 04:48 AM UTC

End Time
Jun 20 2022 04:53 AM UTC

NODES

NODE ID	DEVICE NAME	MODEL	FIRMWARE	UPGRADE IN FAIL	UPGRADE STATUS
Node-8	SPT-CM7148	CM7148-2-DAC	4.12.0	Disallow	✓

4. A new task is created with the same nodes.

DELETE AN UPGRADE TASK


Upgrades cannot be permanently deleted as they can offer a valuable insight into the health of the nodes when problem-solving and provide the version path that they have traversed over their lifetime.

If the number of jobs is becoming unmanageable, or jobs need to be deleted for security measures, the support team will be able to advise on how to remove/clear them.

RETRY AN UPGRADE TASK

If an upgrade task fails, you can retry the node upgrades, provided the firmware file is still available.

1. Navigate to the Node Firmware Upgrade Home screen. The Node Upgrade UI is available in the Web UI under **Settings > Services > Node Firmware Upgrade**
2. Select the task you wish you retry, by clicking the task name in the task table. You can filter the task list by using the **Completed with Errors** filter.

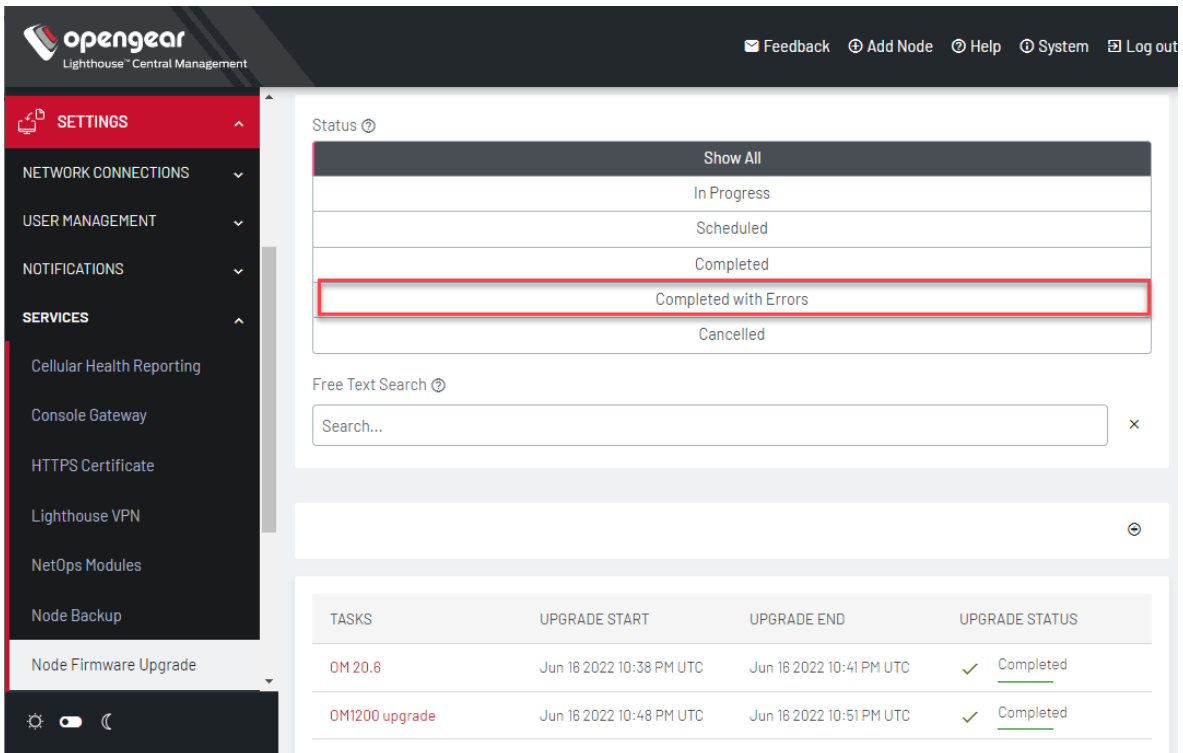

The screenshot shows the OpenGear Lighthouse Central Management web interface. The left sidebar contains a navigation menu with the following items: SETTINGS, NETWORK CONNECTIONS, USER MANAGEMENT, NOTIFICATIONS, SERVICES, Cellular Health Reporting, Console Gateway, HTTPS Certificate, Lighthouse VPN, NetOps Modules, Node Backup, and Node Firmware Upgrade. The 'Node Firmware Upgrade' item is selected. The main content area displays a 'Status' filter dropdown with options: Show All, In Progress, Scheduled, Completed, Completed with Errors (highlighted with a red box), and Cancelled. Below the filter is a 'Free Text Search' box. A table of upgrade tasks is shown with the following data:

TASKS	UPGRADE START	UPGRADE END	UPGRADE STATUS
OM 20.6	Jun 16 2022 10:38 PM UTC	Jun 16 2022 10:41 PM UTC	✓ Completed
OM1200 upgrade	Jun 16 2022 10:48 PM UTC	Jun 16 2022 10:51 PM UTC	✓ Completed

3. In the task detail screen, click the **Repeat for failed upgrades** button.



The screenshot shows the task detail screen. The 'TASK STATUS' section displays a green progress bar with the text 'Completed 3/3 Done'. A red triangle icon is visible. A button labeled 'Repeat for failed upgrades' is displayed.

Note: If the relative Firmware file has been deleted, the **Repeat for failed upgrades** button is not displayed.



4. The **Node Firmware Upgrade** page displays. See ["Create an upgrade task" on page 227](#).

NODE UPGRADE RUNTIME BEHAVIOUR

The following describes the behavior of the Node Upgrade tool while performing routine upgrade tasks.

PROMOTING A SECONDARY INSTANCE TO PRIMARY

- All scheduled upgrades are cancelled when a secondary node is promoted to be the new primary node.
- Firmware files are not replicated among the multiple instance cluster and must be re-uploaded to the new primary after promotion.

DOWNGRADING AND SKIPPING VERSIONS

Lighthouse does not allow downgrading of nodes, nor does it allow upgrading to an identical version. The node upgrade will skip nodes that are at the upgrade version or later, for example, if upgrading from version 21.Q3 to 21.Q4, it will ignore any nodes that are already at 21.Q4 or 22.Q1.

Skipping versions

If a node is scheduled to be upgraded from 21.Q3 directly to 22.Q1 (skipping 21.Q4), it will upgrade the node even if it has been manually upgraded to 21.Q4 before the scheduled upgrade starts.

Note: Lighthouse does not check or validate the version jumps for nodes, so there is a risk that the upgrade could fail if major versions are being skipped. Skipping versions is not recommended or supported, however, it is not disallowed.

TIME ZONES

Node upgrades can only be initiated or scheduled by an operator with administrator credentials while logged in at the primary lighthouse. The scheduling of the node upgrade is based on the time zone of the primary lighthouse.

If the time zone of the primary lighthouse is changed before a scheduled upgrade starts, the schedule time will be based upon the new time zone. This may result in jobs not running at all, being skipped, ignored, or otherwise running at unpredictable times.

Note: It is recommended that you avoid changing the system time of lighthouse, or its time zone, while jobs are scheduled.



OFFLINE NODES

If a node is offline or otherwise unreachable at the time of upgrade, the node will be skipped.

If the node is offline there is a one minute buffer before the scheduled upgrade is skipped and Lighthouse will report the node with a failed to upgrade status.



NODE CONNECTION INTERRUPTED

If the connection to the node is interrupted during the upgrade, the upgrade may be cancelled and will fail unless the upgrade was in the final stages and had no need for further interaction with Lighthouse. In this scenario Lighthouse may still report the node upgrade as failed if it was unable to confirm that the upgrade succeeded due to the node being disconnected during the validation period.

Failure to upgrade one node does not affect other nodes in the upgrade job.



UNENROLLING NODES AT UPGRADE

Unenrolling nodes as they are being upgraded is not supported as this could result in unexpected behavior.



LIGHTHOUSE AVAILABILITY AND STABILITY

Lighthouse must be online and fully booted (preferably for at least a few minutes) before the upgrade starts. It is good practice to have Lighthouse online for a few hours before a node upgrade. This ensures that all the nodes that will be upgraded have re-established their connection and allows time to troubleshoot any issues.

Do not attempt to change major Lighthouse settings, especially those involving the network or timezone, when an upgrade is underway or imminent.


Do not conduct multiple major operations on nodes simultaneously, for example, do not apply templates to the node while it is being upgraded. Do not login to a node and change settings moments before an upgrade occurs.

Note: If Lighthouse is offline when a scheduled upgrade is due to start, the upgrade will not be run.

MANAGE PORTS

Lighthouse allows you to manage all ports connected to nodes. **MANAGE > MANAGED DEVICES > Ports** displays the status and number of all the ports on Lighthouse, which you have permissions to view/edit.

1. Select **MANAGE > MANAGED DEVICES > Ports**. The Ports page displays the Labels, Parent Node and Tags of the connected ports which the user has permissions to view/edit.

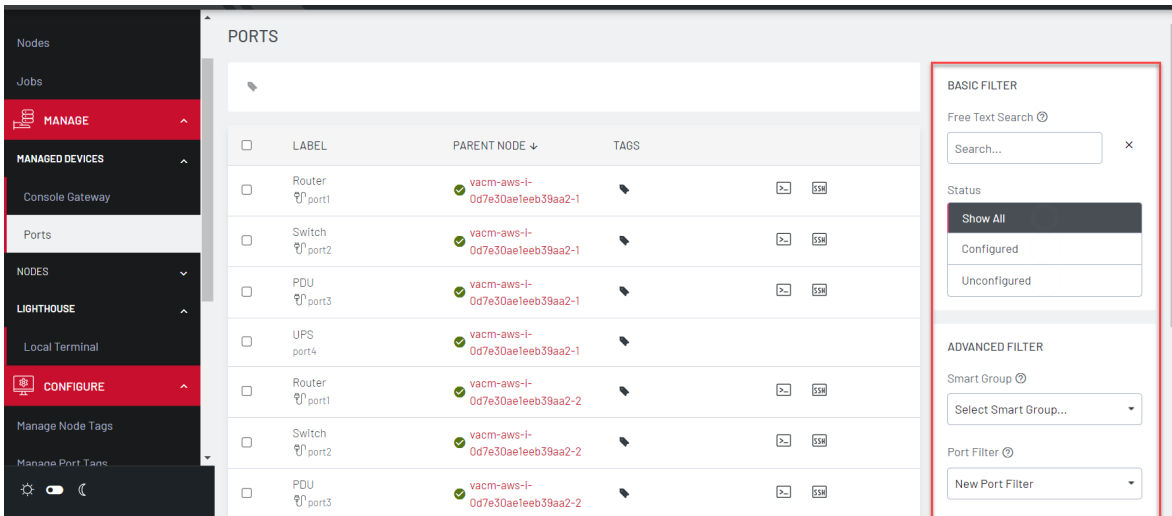

	LABEL	PARENT NODE ↓	TAGS
<input type="checkbox"/>	Router port1	vacm-aws-i- 0d7e30ae1eeb39aa2-1	
<input type="checkbox"/>	Switch port2	vacm-aws-i- 0d7e30ae1eeb39aa2-1	
<input type="checkbox"/>	PDU port3	vacm-aws-i- 0d7e30ae1eeb39aa2-1	
<input type="checkbox"/>	UPS port4	vacm-aws-i- 0d7e30ae1eeb39aa2-1	
<input type="checkbox"/>	Router port1	vacm-aws-i- 0d7e30ae1eeb39aa2-2	
<input type="checkbox"/>	Switch port2	vacm-aws-i- 0d7e30ae1eeb39aa2-2	
<input type="checkbox"/>	PDU port3	vacm-aws-i- 0d7e30ae1eeb39aa2-2	

BASIC FILTER

Free Text Search

Search...

Status

Show All

Configured

Unconfigured

ADVANCED FILTER

Smart Group


Select Smart Group...

Port Filter

New Port Filter

2. BASIC FILTER and ADVANCED FILTER allow you to sort the display of ports, by *Free Text*, *Smart Group* or *Port Filter*.
3. The **BASIC FILTER** Free Text Search allows you to search by the name of a port label or port tag.

The **Port Filter** drop down menu allows you to fine tune your search by either selecting an existing Port Filter or to creating a New Port Filter.

4. The **Tag** icon  allows you to create, assign or remove a new Port Tag. You can use port tags to control user access to ports.

You can also access the *Web Terminal* and *SSH* links for individual ports via the icons to the right of each row, if you have the requisite permissions.


FILTERING PAGES DISPLAYING PORTS

If you want to quickly find a particular port or set of ports, you can drill down to specific ports by using the BASIC and ADVANCED filters. You can filter on:

- **Free Text Search**
- **Smart Group**
- **Port Filters**
- **Status.**

The filters can be used independently from each other or in combination.

1. Select **MANAGE > MANAGED DEVICES > Ports**. The Ports page displays the Labels, Parent Node and Tags of the connected ports.

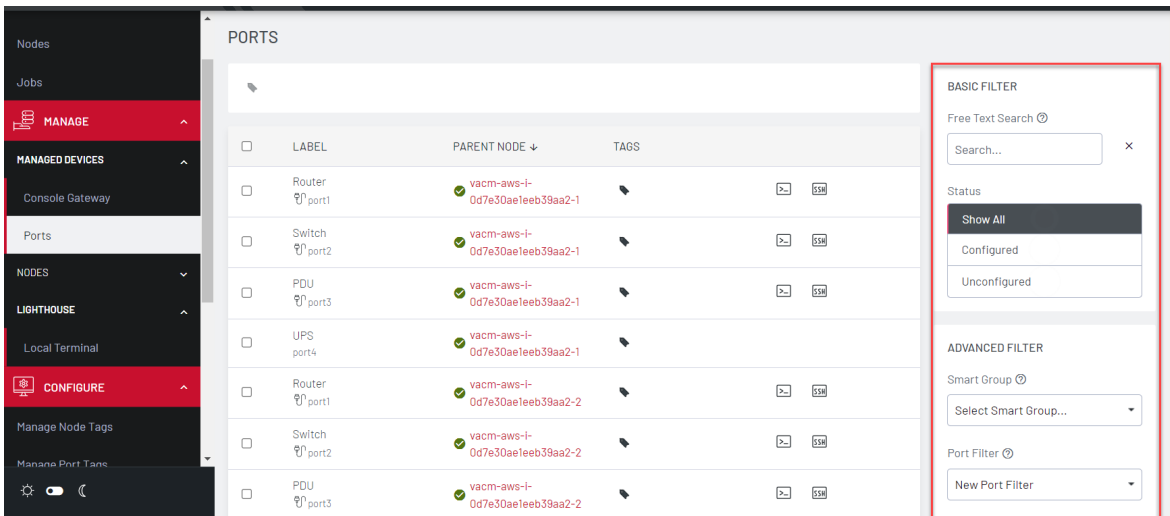

The screenshot shows the Lighthouse interface with the 'MANAGE' sidebar. The 'PORTS' page is active, displaying a table of ports. On the right, there are two filter panels: 'BASIC FILTER' and 'ADVANCED FILTER'. The 'BASIC FILTER' panel includes a 'Free Text Search' input field and a 'Status' dropdown menu with options: 'Show All', 'Configured', and 'Unconfigured'. The 'ADVANCED FILTER' panel includes a 'Smart Group' dropdown menu with the option 'Select Smart Group...' and a 'Port Filter' dropdown menu with the option 'New Port Filter'.

	LABEL	PARENT NODE ↓	TAGS
<input type="checkbox"/>	Router port1	vacm-aws-l- 0d7e30ae1eeb39aa2-1	
<input type="checkbox"/>	Switch port2	vacm-aws-l- 0d7e30ae1eeb39aa2-1	
<input type="checkbox"/>	PDU port3	vacm-aws-l- 0d7e30ae1eeb39aa2-1	
<input type="checkbox"/>	UPS port4	vacm-aws-l- 0d7e30ae1eeb39aa2-1	
<input type="checkbox"/>	Router port1	vacm-aws-l- 0d7e30ae1eeb39aa2-2	
<input type="checkbox"/>	Switch port2	vacm-aws-l- 0d7e30ae1eeb39aa2-2	
<input type="checkbox"/>	PDU port3	vacm-aws-l- 0d7e30ae1eeb39aa2-2	

2. Use the BASIC FILTER and ADVANCED FILTER dropdowns to sort the display of ports, by *Free Text*, *Status*, *Smart Group* or *Port Filter*.
3. In Status, you can select to Show All, or Configured or Unconfigured ports.

FILTERING USING THE FREE TEXT SEARCH FIELD

The **Free Text Search** input field allows near real-time filtering of ports using the following criteria:

- Port Label
- Port Tag

Enter your search term in the **Free Text Search** field and click **Enter**.

The **Free Text Search** field treats multiple search terms separated by the space character as being combined with the logical AND operator, returning results only if all terms are present in the item.

For example, the search phrase `production switch` returns only ports that contain both `production` AND `switch` anywhere in searchable fields.

To search for a multi-word term, enclose the search term in double quote characters. For example, `"production switch"` will return results only if the entire search term is matched in the item.

FILTERING USING THE SMART GROUP FILTERING DROP-DOWN MENU

You can search for groups of ports by using the **Select Smart Group** field. Enter the search criteria in **Select Smart Group** and a menu displays the ports that belong to the selected group, provided you have the requisite permissions.

See ["Creating Smart Groups" on page 208](#) for how to create such groups.

After a particular Smart Group has been selected, further filtering options become available under **Fields to search**:

To add more filtering options:

1. Click **Field to search**.
2. Select a field and enter a value in the text box.
3. Select an **Operator** from the drop-down box on the right.
4. Click the **+ Add Parameters** button. Select a parameter.
5. Click **Apply**.

The list of ports that meet the specified criteria display.

FILTERING USING THE PORT FILTER DROP-DOWN MENU

You can search for groups of ports by using the **Port Filter** field. Enter the search criteria in **Port Filter** and the page displays the ports that belong to the selected group.

To add a new Port Filter:


1. Click **Field** .
2. Select a field option such as *Port Label* or *Port Tag* and enter a value in the text box.
3. Select the next **Field to Search** option such as *Port Tag* and enter a value in the text box.
4. For Port Labels you can select an **Operator** from the drop-down box on the right.
5. If you wish to narrow the search, select **+Add Parameters**. Select the *AND* or *OR* button to specify the requisite boolean value.
6. You can repeat from step 4 to add more parameters.
7. Click **Apply Filter**.
8. Click **Save Changes**. You can also select to **Clear**.

FILTERING USING THE PORT TAGS

You can search for groups of ports by using the **Tags** filter on the **Manage Port Tags** page.

To find a tag


1. Select **CONFIGURE > Manage Port Tags**. The **Manage Port Tags** page displays the *Tags*.|

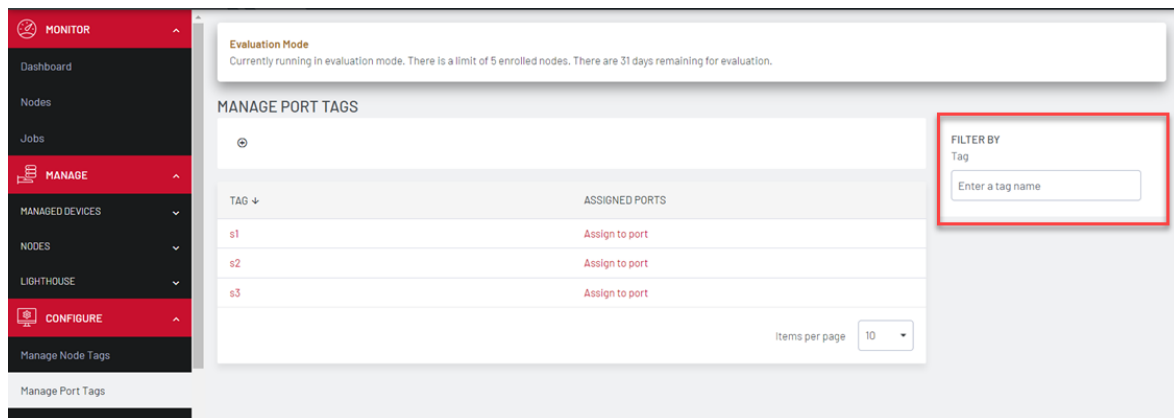


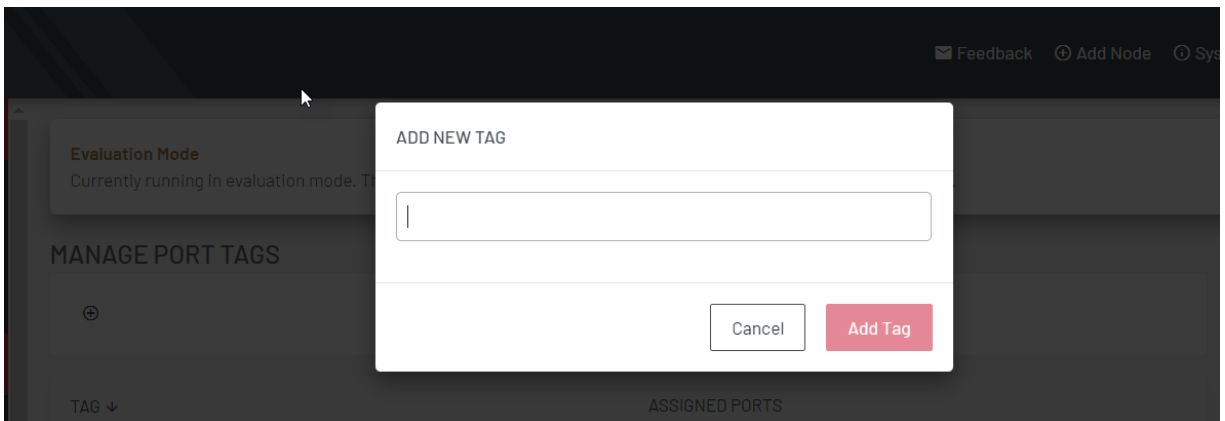
2. Enter a value in the FILTER BY text box, such as a name of a tag, or even part of a name
3. The **Manage Port Tags** page displays the list of ports with the selected tag only.
4. You can then click the Assigned Port link to view or manage the tagged ports.

CREATE A NEW PORT TAG

1. Select **CONFIGURE > Manage Port Tags**. The **Manage Port Tags** page displays the *Tags* and the number of *Assigned Ports*, if any

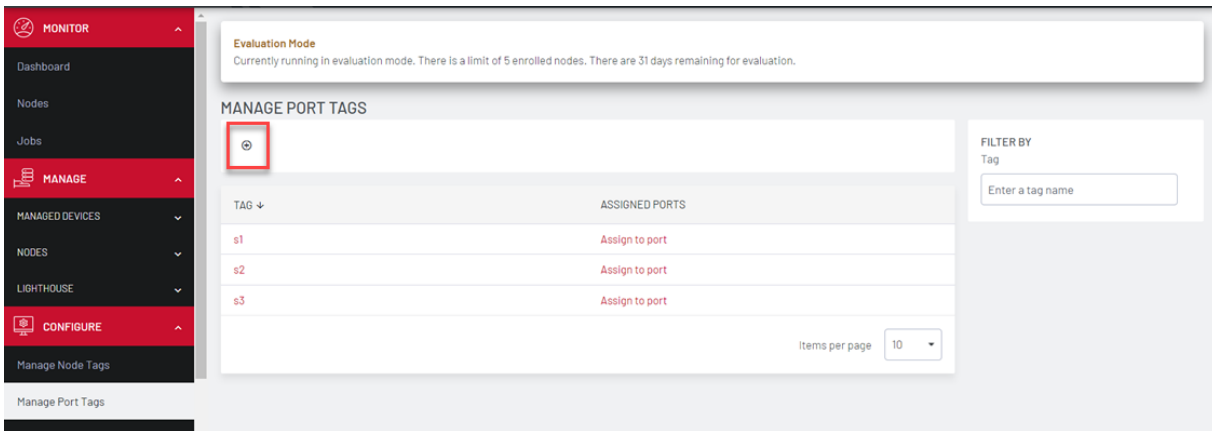

Select  Create New Tag icon on the upper right. The **ADD NEW TAG** dialog displays.




1. Enter the port tag name in the field and click **Add Tag**.
2. You can also enter multiple port tag names separated by commas.
3. The new tags display on the **Manage Port Tags** page.


4. Click the *Assign to Port* link to assign the tag to a specific port. The **Ports** page displays.
5. After the tag is assigned, the **Manage Port Tags** page displays the number of ports that a tag is assigned to in the *Assigned Ports* column. You can click on the number in the Assigned ports column to view a filtered version of the PORTS page.

EDIT A PORT TAG

Select **CONFIGURE > Manage Port Tags**. The **Manage Port Tags** page displays the *Tags*.

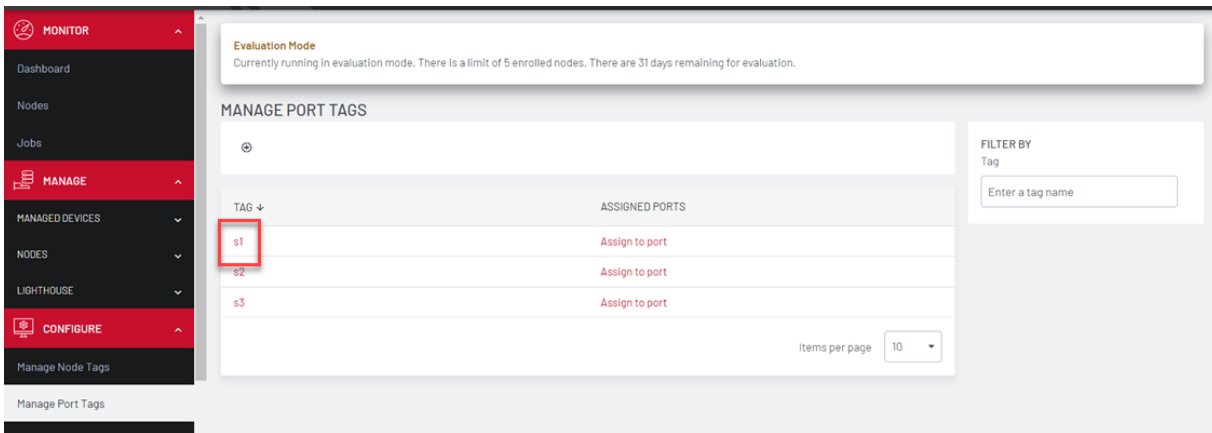


Select the tag to edit. The **EDIT <TAGNAME>** dialog displays.

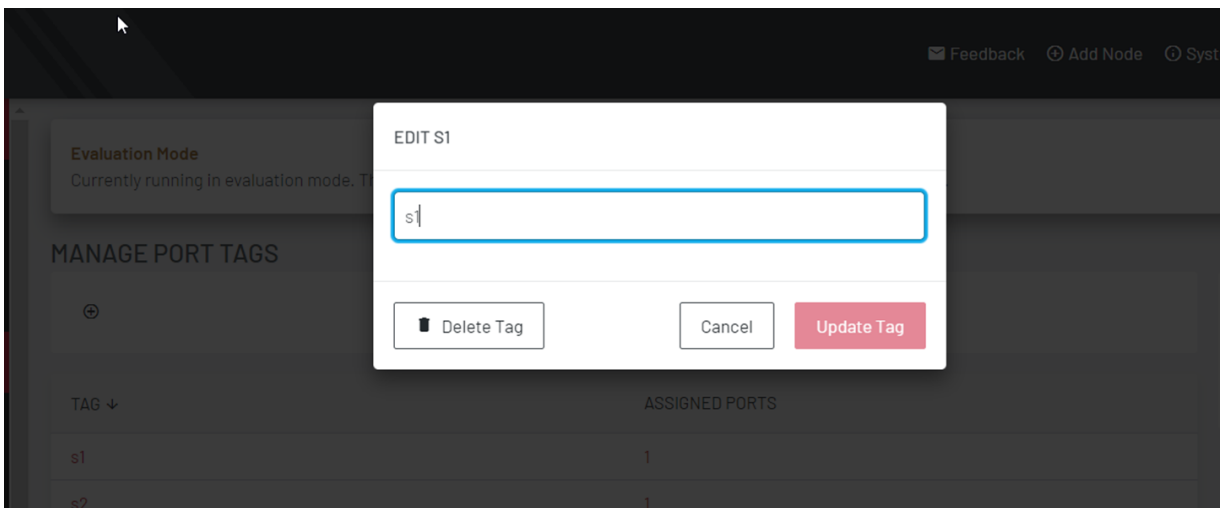


1. Edit the port tag name in the field and click **Update Tag**.
2. The edited tag name displays on the **Manage Port Tags** page.

DELETE A PORT TAG

Select **CONFIGURE > Manage Port Tags**. The **Manage Port Tags** page displays the *Tags*.

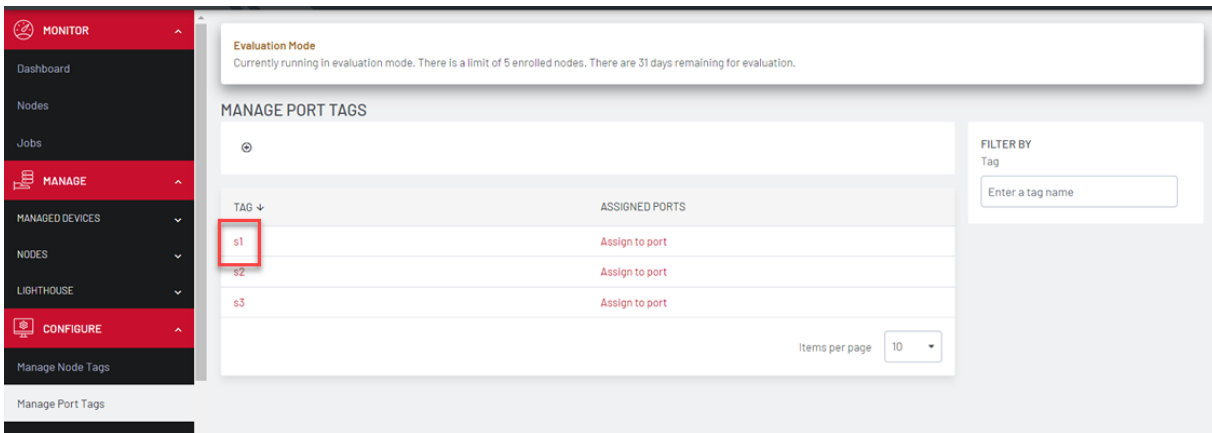


Select the tag to delete. The **EDIT <TAGNAME>** dialog displays.

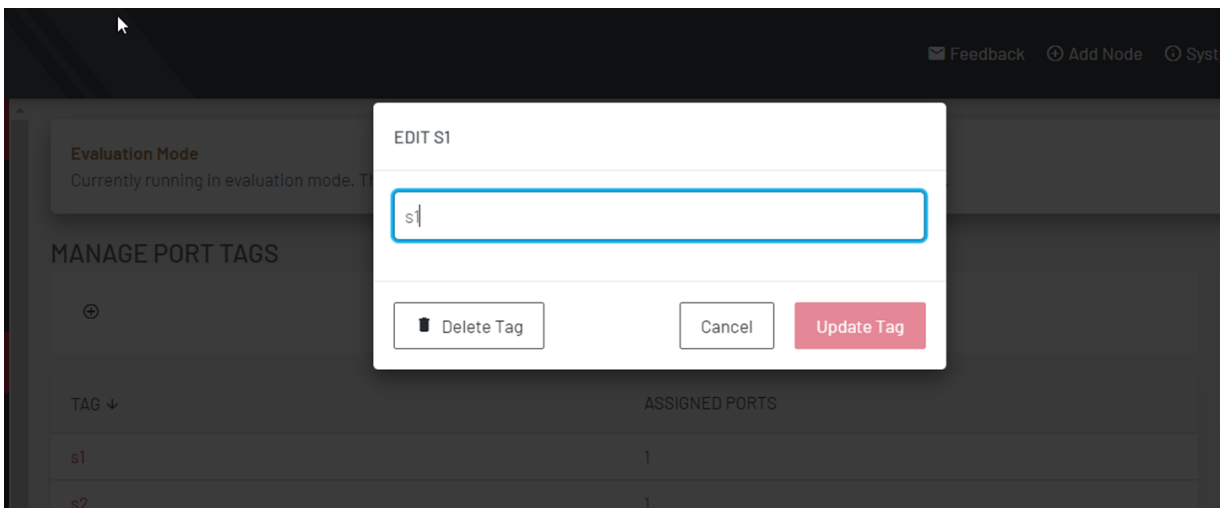


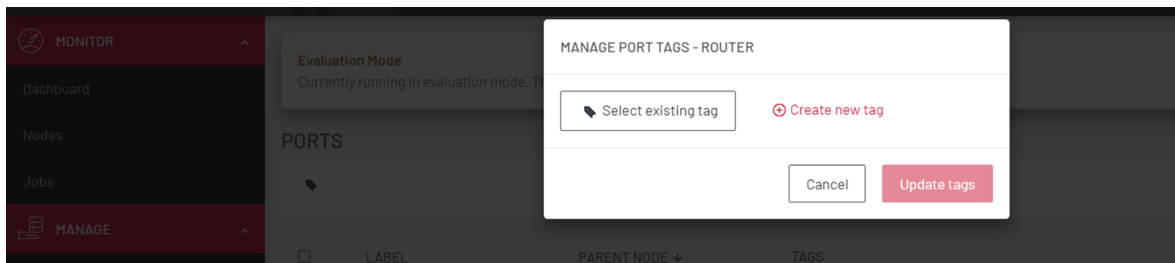
1. Click **Delete Tag**.
2. A confirmation message displays. Click Confirm to delete the tag.

ASSIGN A PORT TAG

1. Select **MANAGE > MANAGED DEVICES > PORTS**. The **PORTS** page displays .

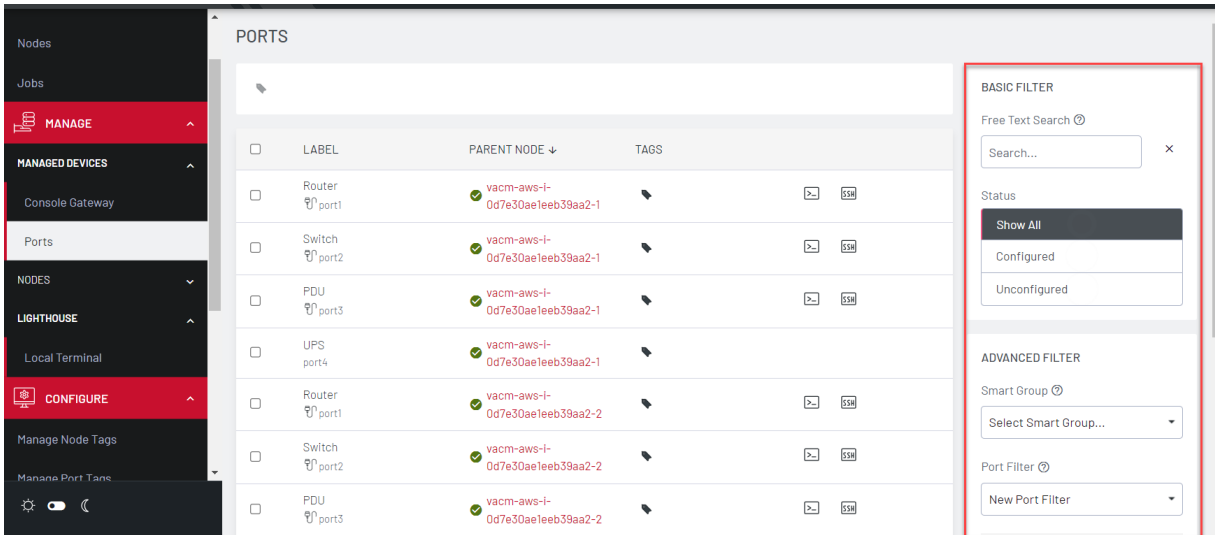

2. You can select one or more ports. Click the tag icon  .
3. The **MANAGE PORT TAGS** dialog displays.



4. To assign port tags to the selected port(s), click the **Select existing tag** button. A dropdown list of existing tags displays. Select the required tags.
5. Click **Confirm** on the **Confirm Changes** message box.
6. Select the required tag(s) and click **Update tags**
7. The added tags display on the **PORTS** page

PORTS				
<input type="checkbox"/>	LABEL	PARENT NODE ↓	TAGS	
<input type="checkbox"/>	Router port1	✓ vacm	s1 s2	[-] SSH
<input type="checkbox"/>	Switch port2	✓ vacm		[-] SSH
<input type="checkbox"/>	PDU port3	✓ vacm		[-] SSH
<input type="checkbox"/>	Router port1	✓ vacm		[-] SSH
<input type="checkbox"/>	Switch port2	✓ vacm		[-] SSH

8. The number of assigned ports also display on the **Manage Port Tags** page.

CONFIGURING LIGHTHOUSE

Lighthouse can be customized as required, by the creation of users and user Groups, to enable Smart Management Fabric, for authentication, and to enable network traffic mirroring.

Lighthouse supports the creation of Users and Groups, Smart Management Fabric, Authentication and Script templates. Templates are a centralized way of changing the configuration for enrolled Opendgear console server nodes by pushing pre-defined configuration templates to selected nodes.

Smart Management Fabric (SMF) is an advanced feature that uses routing protocols like OSPF (Open Shortest Path First). It is strongly recommended that you ensure whether OSPF is compliant with your enterprise security policy.

The following minimal strategies are recommended to address and mitigate risks:

- Conduct a meticulous examination of networks participating in OSPF advertisement, with a suggestion to implement passive interfaces.
- Execute comprehensive testing and verification to ensure that no routing occurs among networks not involved in SMF.
- Verify the activation of OSPF authentication to augment network security.

CREATE TEMPLATES

Administrators can access **CONFIGURE > CONFIGURATION TEMPLATING > Users and Groups Templates** to create, edit, and delete templates. Each template must contain at least one group.

Each template contains a list of user-defined groups and/or individual users. Each group has a defined role which determines what privileges group members have. User roles are defined by the groups they are a member of.

The available group roles are:

- **Node Administrator** — maps to the administrator role on the nodes.
- **Node User** — maps to the ports user role and the pmshell role on the nodes.
Ports access can be restricted if required.

CREATING NEW USER AND GROUP TEMPLATES

Administrators can access **CONFIGURE > CONFIGURATION TEMPLATING > Users and Groups Templates** to create, edit, and delete users and groups templates. Each template must contain at least one group.


Each template contains a list of user-defined groups and/or individual users. Each group has a defined role which determines what privileges group members have. User roles are defined by the groups they are a member of.

The available group roles are:

- **Node Administrator** — maps to the administrator role on the nodes.
- **Node User** — maps to the ports user role and the pmshell role on the nodes.
Ports access can be restricted if required.

To create a new users and groups template:

1. Select **CONFIGURE > CONFIGURATION TEMPLATING > Users and Groups Templates**.
2. Click the **+** button. The **New Users and Groups Template page** displays.

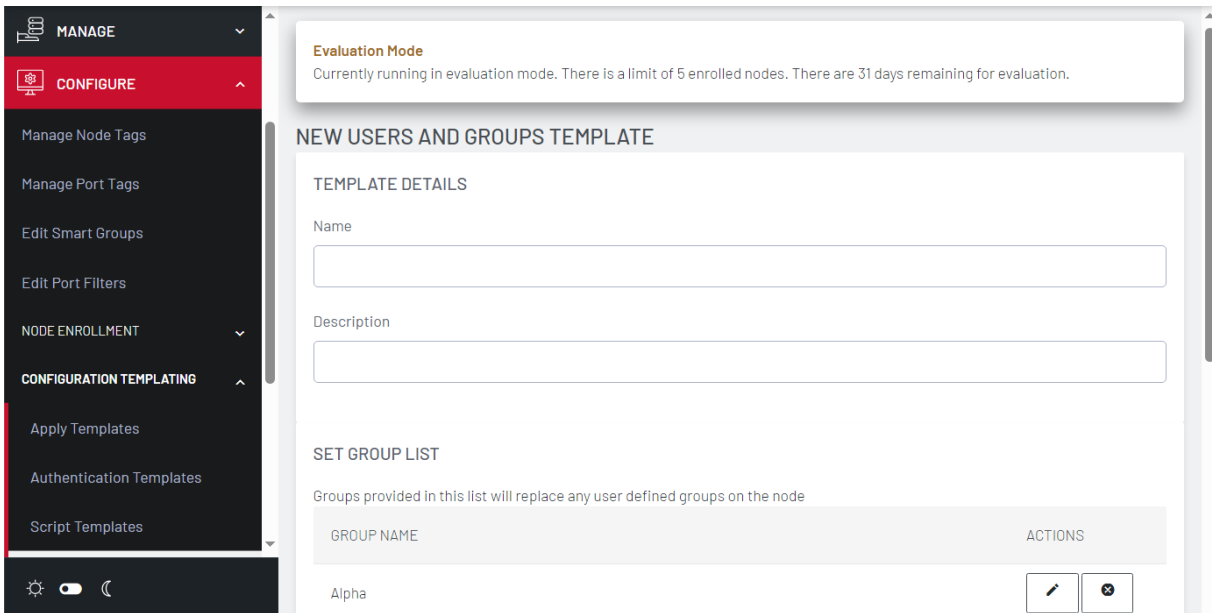

The screenshot shows the Lighthouse web interface. On the left is a dark sidebar with a 'MANAGE' section and a 'CONFIGURE' section. The 'CONFIGURE' section is expanded, showing options like 'Manage Node Tags', 'Manage Port Tags', 'Edit Smart Groups', 'Edit Port Filters', 'NODE ENROLLMENT', 'CONFIGURATION TEMPLATING' (which is selected), 'Apply Templates', 'Authentication Templates', and 'Script Templates'. At the bottom of the sidebar are icons for settings, a light/dark mode toggle, and a refresh icon.

The main content area has a top banner for 'Evaluation Mode' stating: 'Currently running in evaluation mode. There is a limit of 5 enrolled nodes. There are 31 days remaining for evaluation.' Below this is the 'NEW USERS AND GROUPS TEMPLATE' section. It contains a 'TEMPLATE DETAILS' form with 'Name' and 'Description' text boxes. Below that is the 'SET GROUP LIST' section, which includes a note: 'Groups provided in this list will replace any user defined groups on the node'. It features a table with the following structure:

GROUP NAME	ACTIONS
Alpha	<input type="button" value="edit"/> <input type="button" value="delete"/>

3. Enter a **Name** and **Description** for a template in the **Template Details** section.
4. Click the **+ Add a group** button in the **Set Group List** section to add a new group. The **Group Details** dialog loads.
5. Enter a **Group Name**, a **Description**, and select a **Role** for the group.
6. If **Node User** role is selected, the **Restrict accessible Serial Ports** checkbox and **Serial Ports range** appear.
7. Use the checkbox to restrict access and specify as port or range of ports in the **Serial Ports range** text box.
8. Click **Apply**.
9. Click the **+ Add a user** button in the **Set User List** section to add new users. The **User Details** dialog displays.
10. Enter a **Username**, a **Description**, and a **Password** for the user. Type the password again in the **Confirm Password** text box.
11. Optionally, click checkboxes next to the groups this user should belong to. Only groups from this template are available.

12. Click **Apply**.
13. Continue adding new groups and users until finished.
14. Click **Save Template**.


Note: When a users and groups template is pushed to a node, all custom groups on that node are replaced by groups defined in the template. If no users are in the new template, existing users will remain on the node. To push users, the selected nodes need to be running firmware version 4.3.0 or later.

MODIFYING EXISTING USERS AND GROUPS TEMPLATES


Use the **Edit Users and Groups Template** dialog to modify a template's **Description**, **Group List**, and **User List**.

To modify a template:

1. Select **CONFIGURE > CONFIGURATION TEMPLATING > Users and Groups Templates**

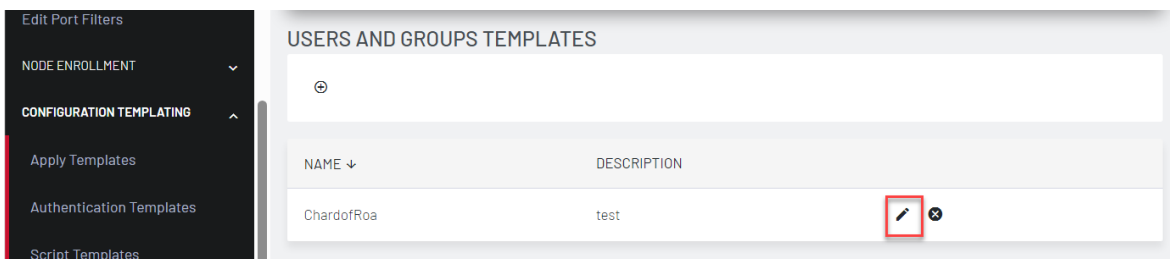

2. Click **Edit button** next to the template to be modified. The **Edit Users and Groups Template** dialog displays

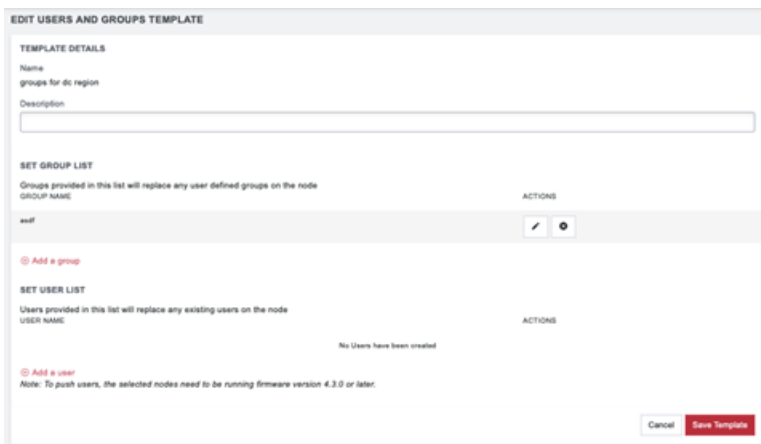

3. Make changes to the template's details, group list, or Individual user list as required.
4. Click the **x** button under **Actions** next to any groups or users which need to be



removed.

5. Click **Save Template**.

DELETING USERS OR GROUPS FROM A TEMPLATE

To delete users or groups from a template:

1. Select **CONFIGURE > CONFIGURATION TEMPLATING > Users and Groups Templates**.
2. Click the **Edit** button in the **Actions** section of the template.
3. Click the **x** button under **Actions** next to any groups or users which need to be removed.
4. Click **Save Template** to save the changes.

DELETING USERS AND GROUPS TEMPLATES

To delete a template:

1. Select **CONFIGURE > CONFIGURATION TEMPLATING > Users and Groups Templates**.
2. Click the **Delete** button next to the template to be removed. The **Confirmation** dialog displays.
3. Click **Yes** in the **Confirmation** dialog.

The template is deleted.

CREATE AUTHENTICATION TEMPLATES

Only users assigned to the ***Lighthouse Administrator*** role can access

CONFIGURE > CONFIGURATION TEMPLATING > Authentication Templates
and create authentication templates.


CREATING NEW AUTHENTICATION TEMPLATES

Only users assigned to the **Lighthouse Administrator** role can access **CONFIGURE > CONFIGURATION TEMPLATING > Authentication Templates** and create authentication templates.

The supported modes are **Local**, **Radius**, **TACACS+**, and **LDAP**. For example, if an authentication template is configured to use **RADIUS** as an authentication source, that corresponds to **RADIUSDownLocal** with **Use Remote Groups** ticked on the downstream node.

To create a new authentication template:

1. Select **CONFIGURE > CONFIGURATION TEMPLATING > Authentication Templates**.
2. Click the **+** button. The **New Authentication Template** page loads.

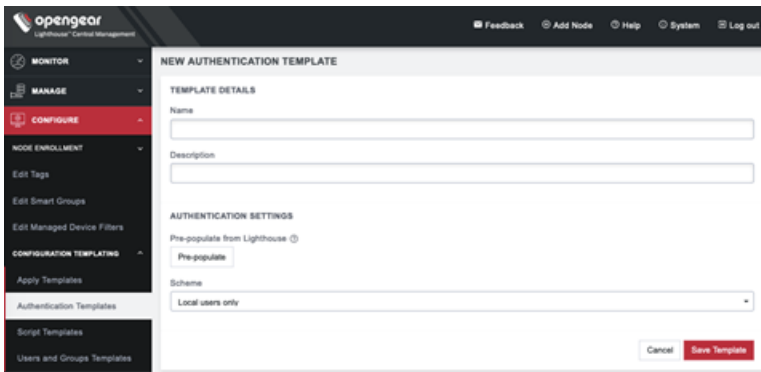

3. Enter a **Name** and **Description** for a template in the **Template Details** section.
4. Select a desired **Scheme** or click **Pre-populate** to pre-populate a template with the current Lighthouse remote authentication configuration.
5. Enter or update authentication settings if required. See 8.10 Configuring AAA for an example.
6. Click **Save Template**.

Note: When an authentication template is pushed to a node, the authentication settings at that node are replaced by the those defined in the authentication template.


Note: The authentication templates do not support the full list of settings that the Opengear console servers support. However, templates can be applied, and then additional settings configured manually.

MODIFYING EXISTING AUTHENTICATION TEMPLATES


The **Edit Authentication Template** dialog allows the template's **Description** and **Authentication Settings** to be set and changed.

To modify an existing authentication template:

1. Select **CONFIGURE > CONFIGURATION TEMPLATING > Authentication Templates**.

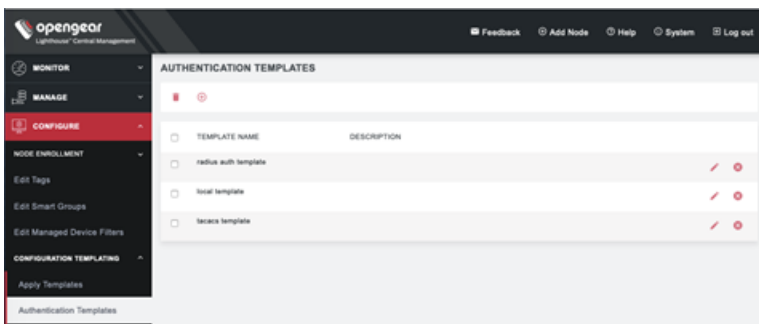

2. Click **Edit** next to the template to be modified. The **Edit Authentication Template** dialog displays.

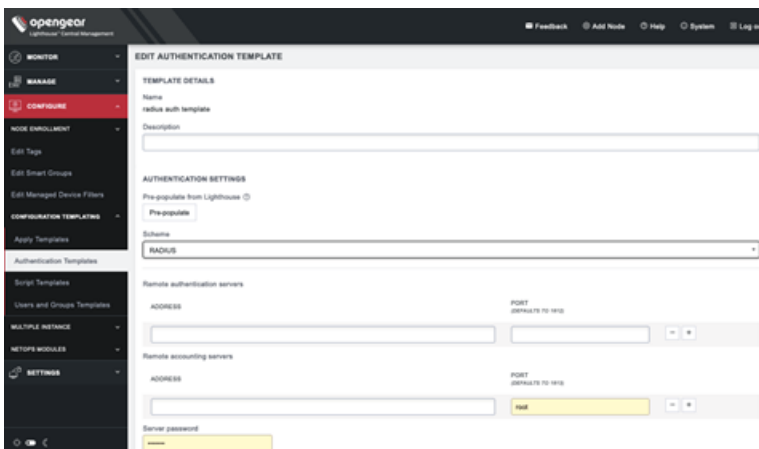

3. Make required changes.
4. Click **Save Template**.

DELETING AUTHENTICATION TEMPLATES

To delete an authentication template:

1. Select **CONFIGURE > CONFIGURATION TEMPLATING > Authentication Templates**.
2. Click **Delete** next to the template to be removed. The **Confirmation** dialog displays.
3. Click **Yes** in the **Confirmation** dialog.


The authentication template is deleted.

CREATE SMART MANAGEMENT FABRIC (SMF) TEMPLATES

Smart Management Fabric (SMF) allows you to create an enterprise grade solution for network connectivity, configuration and troubleshooting devices connected to supported nodes on Lighthouse.

To ensure that Smart Management Fabric (SMF) connectivity stays up to date, a number of scenarios require an additional push of the SMF configuration templates after the initial setup. See ["Re-enable smart management Fabric \(SMF\) Templates" on page 122.](#)

Caution: Smart Management Fabric (SMF) is an advanced feature. Prior to roll out, it is recommended to ensure its compliance with your enterprise security posture.

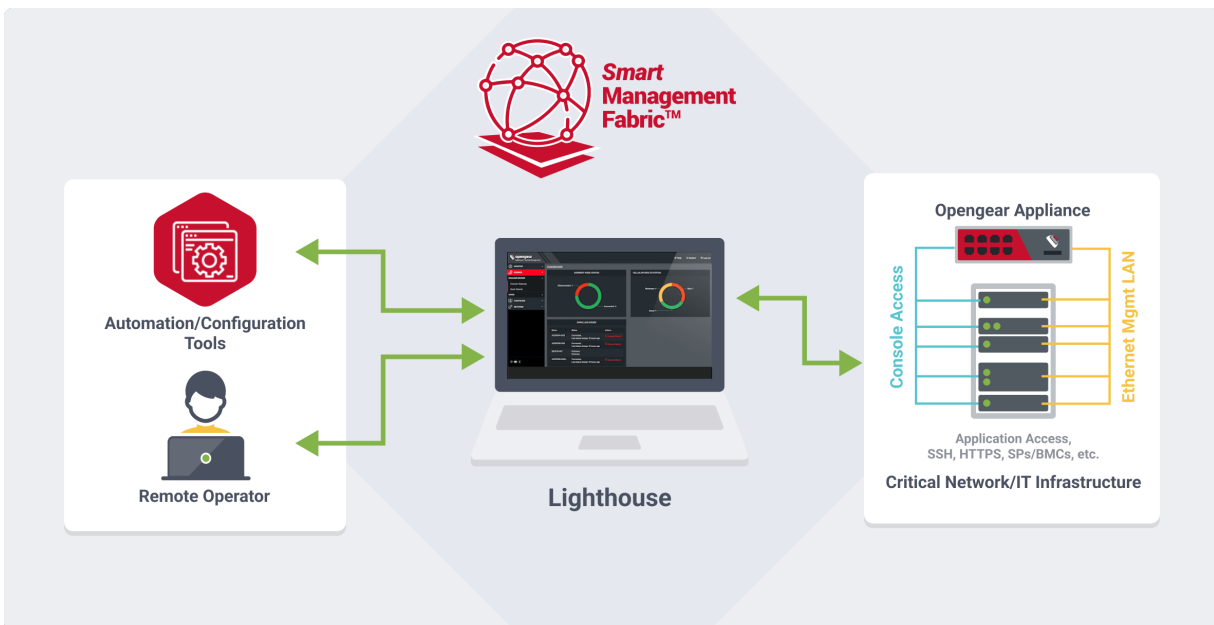

Smart Management Fabric (SMF) uses dynamic link state routing to allow IP

connectivity to IT resources that are physically connected and are configured with IP addresses that are downstream from the Lighthouse. In addition, physical devices can also be accessed:

- Virtually, via SSH, https (GUI), SPs/BMCs (iLO, iDRAC, etc.)
- Via commonly used automation tools such as RDP, Ansible, Python, vCenter.

Smart Management Fabric (SMF) templates allow OSPF to be run on a node. For example, a template may set network addresses, subnet masks and authentication methods. To apply Smart Management Fabric (SMF) templates, the selected nodes must:

- Be a supported Opendaylight appliance
- Be running firmware version 23.10 or later.

Note: A user can override the Smart Management Fabric (SMF) configuration by using the command line interface.

SETTING UP SMART MANAGEMENT FABRIC (SMF) TEMPLATES

Smart Management Fabric (SMF) templates enable Lighthouse users to implement Open Shortest Path First (OSPF) protocols. OSPF is an interior gateway protocol used to distribute routing information within a single autonomous system. It is based on link-state technology.

How OSPF Works:

OSPF routers exchange link-state information with their neighbors to build a complete map of the network topology. This information is used to calculate the shortest path to each destination. OSPF supports multiple paths of equal cost and can load balance traffic across these paths.

1. To create a Smart Management Fabric (SMF) template:

Click **Configure > Configuration Templating > Smart Management Fabric Templates**.




- Click **Add** button. The **NEW Smart Management Fabric Template** page displays.

- Enter the **Name** and **Description** of the template.
- Enter the **OSPF SETTINGS** for the Node.
 - **Redistribute Connected** to redistribute directly connected routes to all routers in the attached Routing Information Protocol (RIP) domain.
 - **Redistribute Kernel** to share the static routes on the console servers.
- Select **Firewall Options** for the OSPF configuration. If required, select **Enable Masquerading for all interfaces** to override individual masquerading settings on interfaces.
- Enable the **OSPF Configuration Method**. Select one of the following to send link-state advertisements on one of following:
 - **Interface** - to advertise the OSPF on the whole interface
 - **Network** - to advertise the OSPF on a selected network

6. Select **Network** if you wish to define the network to be advertised for OSPF. Click **Add Network** and enter the **Network and Areas**:

- **Network Address** - The connected IPv4 network that will send and receive link-state advertisements.
- **Subnet mask** - The subnet for the above.
- **OSPF Area** - Define the area if you want to limit the routes. This provides the link-state advertisement (LSA) that communicates the router's local routing topology to all other local routers in the same OSPF area.

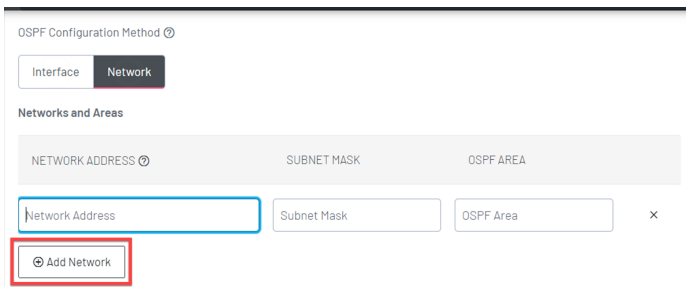

7. Click **Add Interface** to configure the interface settings. If **Interface** is selected as the **OSPF Configuration Method**, the Network table is hidden and a new field **OSPF Area** displays.

Interface Configuration ?

INTERFACE	COST	AUTHORIZATION	MASQUERADE	PASSIVE	OSPF AREA
		No Authentication	No	No	^

Interface Name ?

☐ Masquerade Interface

☐ Passive Interface

OSPF Area ?

Cost ?

Authentication Method

- **Interface Name** - Enter the device name. This must match the name of the interface on the device.
- **Masquerade Interface** - Select this to show that traffic from this interface appears to come directly from the supported node to other devices in the subnet.
- **Passive Interface** - Select **Passive** to ensure that link-state advertisement (LSA) is confined to routers in the same OSPF area.
- **OSPF Area** - Define the area if you want to limit the routes. This provides the link-state advertisement (LSA) that communicates the router's local routing topology to all other local routers in the same OSPF area. If **Network** was chosen as the **OSPF Configuration method**, this field will be hidden.
- **Cost** - The cost (also called metric) indicates the overhead required to send packets across a certain interface.

8. Select the **Authentication** method:

- **MD5**
- **Clear Text**
- **No Authentication** is selected by default.

Authentication protects routing nodes on the network from accepting OSPF updates generated by unauthorized/malicious devices in the current routing domain. Unauthorized routers cannot join and influence routing decisions within the system because they must prove identity via supplying a shared password to neighbor nodes.

9. For **MD5**, enter the **ID** and **Digest Key** to be used across all routers. MD5 authentication provides higher security than plain text authentication.
 - **ID** - A unique identifier for the password
 - **Add Digest Key** - A password to be used along with the contents of the packet to compute a hash value using the MD5 algorithm. This hash value is transmitted in the packet, along with the key ID and a non-decreasing sequence number.
10. For **Clear Text**, enter the **Password** to be used across all routers. This is less secure than MD5.
11. Click **Save Template**.

Note: Templates will need to be applied to compatible Opendgear Console Servers in order to activate Smart Management Fabric (SMF) functionality.

VALIDATING SMART MANAGEMENT FABRIC (SMF) TEMPLATES

To check that the Smart Management Template (SMF) has been applied and to verify that OSPF is running and configured, login to Lighthouse and Appliances CLI. Run the commands below to validate that the Smart Management Fabric (SMF) template has been properly applied:

```
vttysh -c "show running-config"

vttysh -c " sh ip ospf neigh" -c " sh ip ospf route"
```


The templated OSPF/SMF values will display, for example:

```
interface wg-rmf-1
 ip ospf authentication message-digest
 ip ospf message-digest-key 1 md5 GDDVMFPUXHYJFOBT
 ip ospf network non-broadcast
exit
!
router ospf
 ospf router-id 10.0.0.1
 log-adjacency-changes
 maximum-paths 1
 network 10.0.0.0/19 area 0.0.0.0
 neighbor 10.0.0.2
 neighbor 10.0.0.3
exit
!
```

MODIFYING EXISTING SMART MANAGEMENT FABRIC (SMF) TEMPLATES

To modify an existing Smart Management Fabric (SMF) template:

1. Select **CONFIGURE > CONFIGURATION TEMPLATING > Smart Management Fabric Templates**. The list of existing templates displays.
2. Click the **Edit** icon next to the template to be modified.

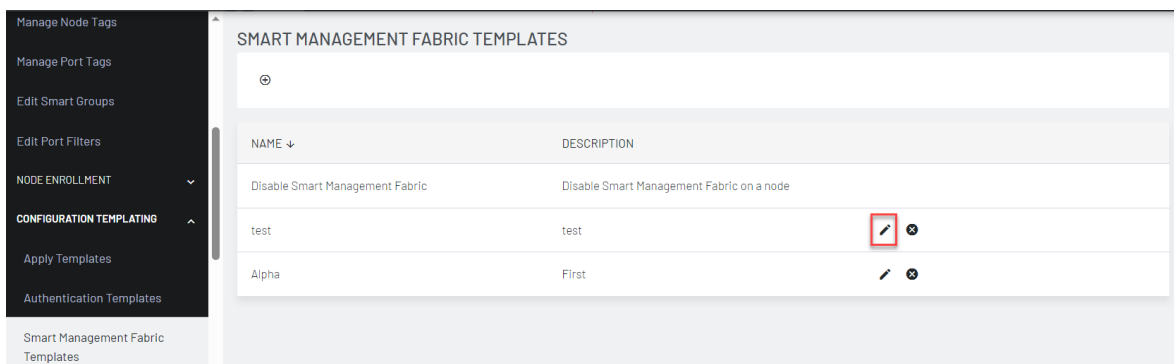


3. The **Edit Smart Management Fabric (SMF) Template** dialog displays.
4. Make the required changes.
5. Click **Save Template**.

Note: You cannot edit or delete the Disable Smart Management Fabric template.

DELETING SMART MANAGEMENT FABRIC (SMF) TEMPLATES

To delete a Smart Management Fabric (SMF) template completely:

1. Select **CONFIGURE > CONFIGURATION TEMPLATING > Smart Management Fabric Templates**. The list of existing templates displays.

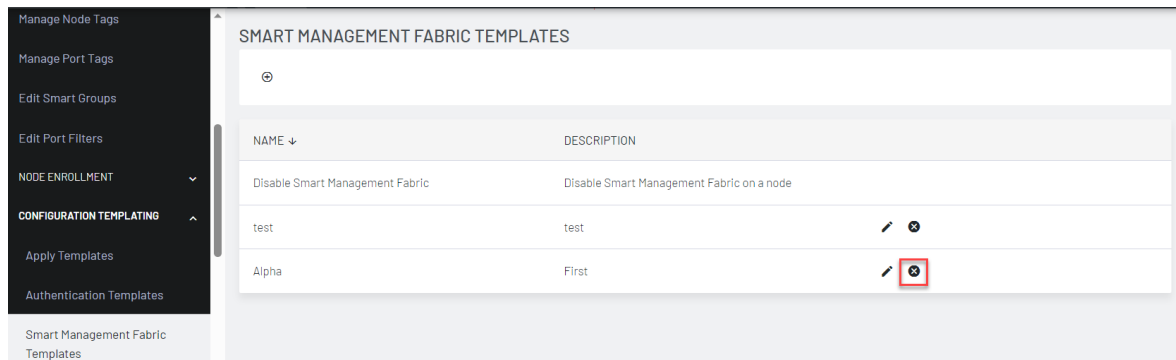

2. Click **Delete** next to the template to be removed. The **Confirmation** dialog displays.
3. Click **Yes** in the **Confirmation** dialog.

The Smart Management Fabric (SMF) template is deleted.

Note: You cannot delete the Disable Smart Management Fabric template.

CREATE SCRIPT TEMPLATES

Script Templates allow the user to upload arbitrary shell scripts to be run on a node. For example, a script may set additional configuration settings not available in other templates or store additional files onto the node such as certificates.

The uploaded script must have:

- a .sh extension and
- cannot exceed 1MB in size.

Other than those, there are no other restrictions on the script file to be uploaded.

Once saved, the template stores the size and SHA1 checksum of the script. This can be used to verify the script contents of the template once saved.

To apply script templates, the selected nodes need to be running firmware version 4.1.1 or later.


CREATING NEW SCRIPT TEMPLATES

Script Templates allow the user to upload arbitrary shell scripts to be run on a node. A script may set additional configuration settings not available in other templates or store additional files onto the node such as certificates, for example. The uploaded script must have a .sh extension and can't be more than 1MB in size. Other than those, there are no other restrictions on the script file to be uploaded. Once saved, the template stores the size and SHA1 checksum of the script. This can be used to verify the script contents of the template once saved. To apply script templates, the selected nodes need to be running firmware version 4.1.1 or later.

Lighthouse Administrators can create script templates via **CONFIGURE > CONFIGURATION TEMPLATING > Script Templates**

To create a new script template:

1. Select **CONFIGURE > CONFIGURATION TEMPLATING > Script Templates**.
2. Click the **+** button. The **New Script Template** dialog loads.

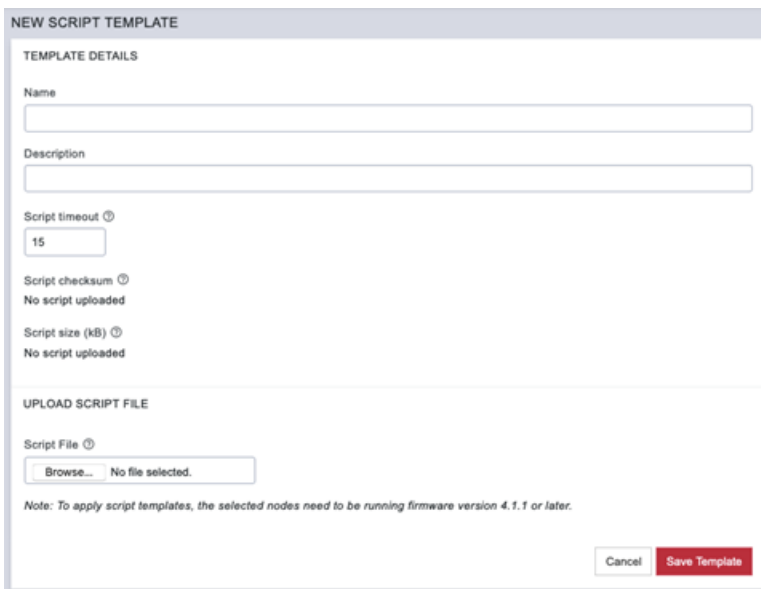




3. Enter a **Name** and **Description** for a template in the **Template Details** section.
4. To select a script to upload, click **Choose file**.
5. Click **Save Template**.

Script checksum and **Script size** are displayed after the template with uploaded script is saved.


MODIFYING EXISTING SCRIPT TEMPLATES

The **Edit Script Template** dialog allows the template's **Description**, **Script timeout**, and **Script File** to be uploaded. To modify an existing script template:

1. Select **CONFIGURE > CONFIGURATION TEMPLATING > Script Templates**.

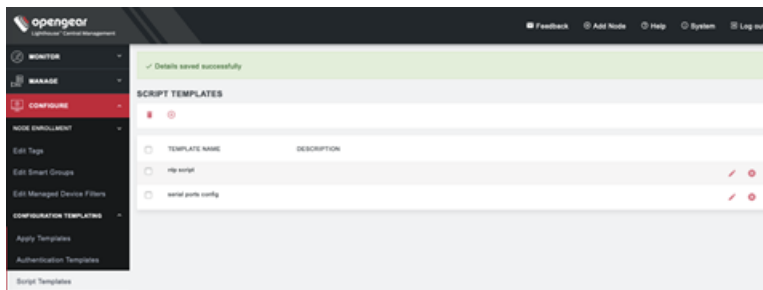

2. Click **Edit** next to the template to be modified. The **Edit Script Template** dialog displays.

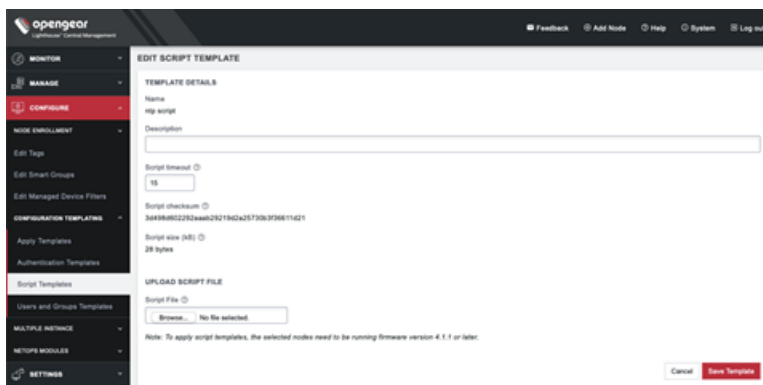

3. Make the required changes.
4. Click **Save Template**.

DELETING SCRIPT TEMPLATES

To delete a script template completely:

1. Select **CONFIGURE > CONFIGURATION TEMPLATING > Script Templates**.
2. Click **Delete** next to the template to be removed. The **Confirmation** dialog displays.
3. Click **Yes** in the **Confirmation** dialog.

The script template is deleted.

USE TEMPLATES

Users with **Lighthouse Administrator** privileges (that is, users with the Lighthouse Administrator role or users who are members of groups with the Lighthouse Administrator role) can access **CONFIGURE > CONFIGURATION TEMPLATING > Apply Templates** and execute templates affecting any node.

Users with Node Administrator privileges (i.e. users with the Node Administrator role or users who are members of groups with the Node Administrator role) can access **CONFIGURE > CONFIGURATION TEMPLATING > Apply Templates** and execute templates affecting nodes in Smart Groups linked to their role.

APPLY TEMPLATES

Users with Node Administrator privileges (that is, users with the Node Administrator role or users who are members of groups with the Node Administrator role) can access **CONFIGURE > CONFIGURATION TEMPLATING > Apply Templates** and execute templates affecting nodes in Smart Groups linked to their role.

The following types of templates can be applied to selected nodes:

- Authentication.
- Users and Groups.
- Script.
- Netops Module Activation.
- Port Logging.
- Smart Management Fabric (SMF).


Apply Templates consists of four stages, each one a step in the overall wizard. The steps are:

1. Select Template.
2. Select Nodes.
3. Preflight. This test run simulates what happens if the template is pushed to the selected nodes.
4. Execution.

To apply a template:


1. Select **CONFIGURE > CONFIGURATION TEMPLATING > Apply Templates**.

2. Select a template from the existing template tree. **Template Details** populates with details from the selected template.

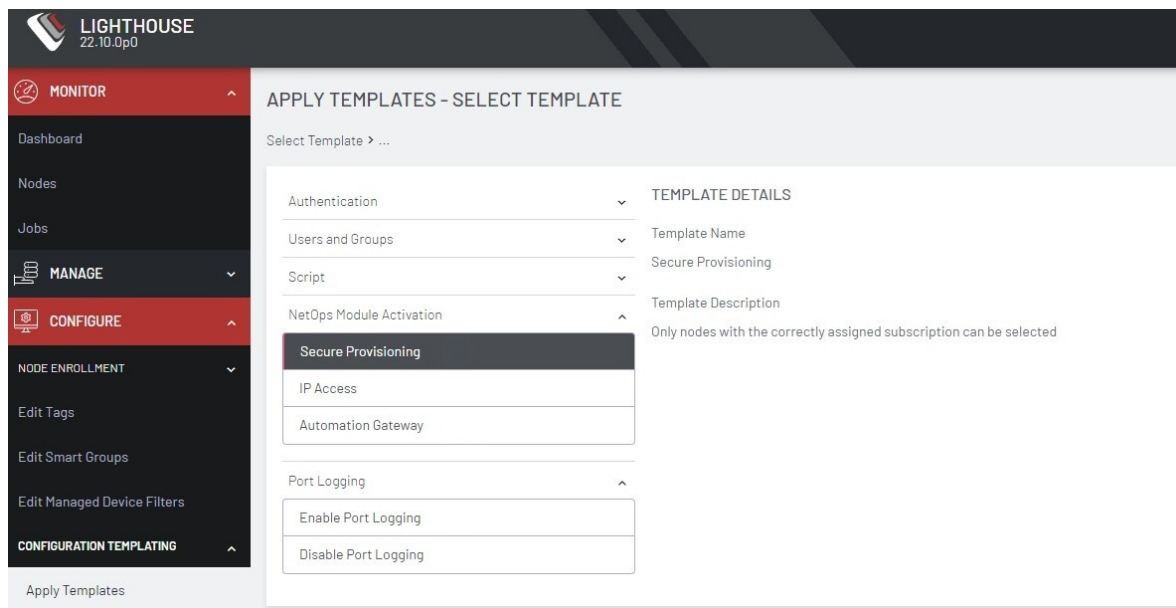


3. Click **Next — Select Nodes**. The **Select Nodes** stage loads.
4. Select nodes from the list of enrolled nodes. **Smart Group Filtering** and **Free Text Search Filtering** can be used to narrow down the results.

Note: Third-party nodes are not supported for template execution.

5. Scroll to the bottom of the page and click **Next — Preflight**. The **Preflight** stage loads. To retrieve updated Preflight results and details, click the  Update icon above the table.

After all nodes finish preflight, a success message displays and the **Next — Push Configuration** button becomes active.


6. Select desired nodes for template execution and click **Next — Push Configuration**. The **Configuration Status** stage loads. To retrieve Push results and details, click the  Update icon above the table.

After all nodes finish the template push, a success message displays.

MANUALLY ACTIVATE NETOPS MODULES VIA TEMPLATE

Lighthouse Administrators can manually apply the Secure Provisioning, Automation Gateway, or IP Access to the suitable Opengear Console Server node.


1. Select **CONFIGURE > CONFIGURATION TEMPLATING > Apply Templates**
2. Click **Secure Provisioning** or **IP Access** or **Automation Gateway** under **NetOps Module Activation**.

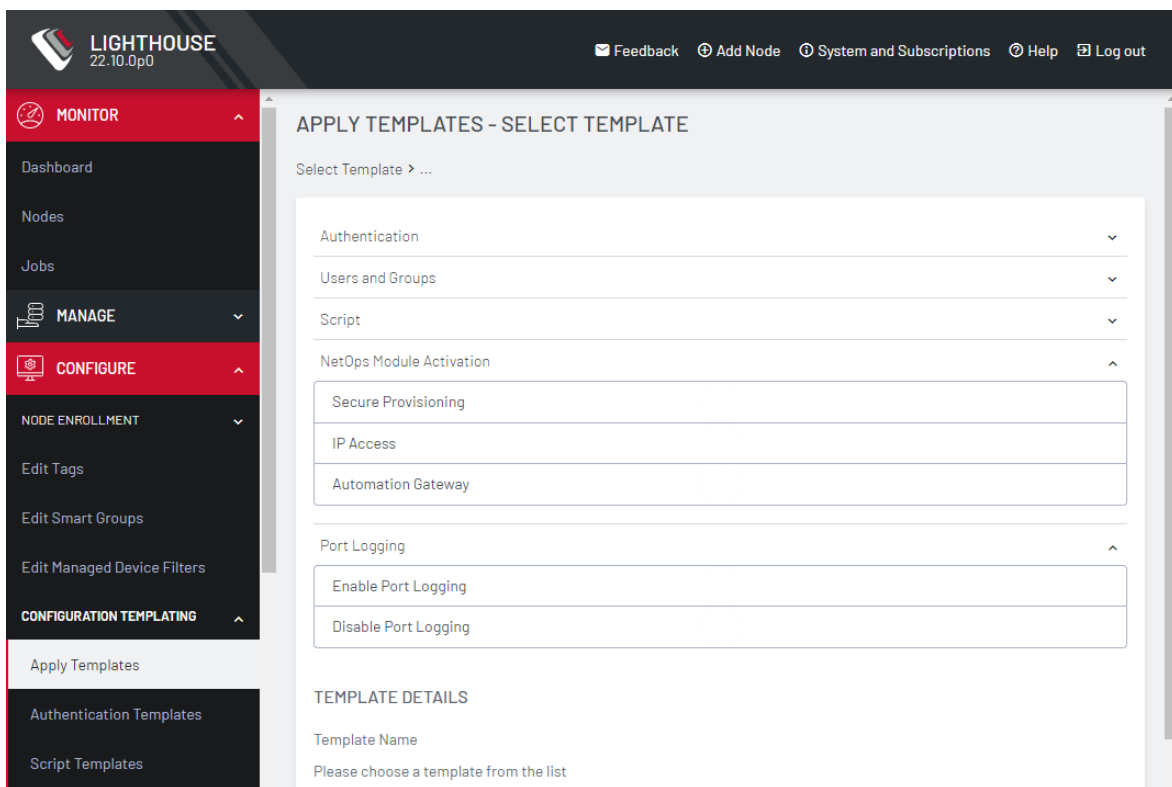

3. Click **Next – Select Nodes**
4. Choose the desired **NetOps Console Server** nodes by clicking the check boxes next to them.

Note: Only applicable Console Servers for the module display during this node selection step.



5. Click **Next – Preflight**. To ensure the preflight check has succeeded click the  *Update* icon above the table.
6. When preflight is complete, click **Next - Push Configuration**.

CONFIGURATION & TECHNICAL SUPPORT REPORTS

Lighthouse can generate a technical support report that includes Lighthouse configuration information and the current system log for the Lighthouse VM.

The support technician may ask for this report if you contact Opendgear Technical Support.

GENERATE A SUPPORT REPORT VIA THE LIGHTHOUSE INTERFACE

To generate a complete configuration and status report regarding a given Lighthouse VM:

1. Select **Help > Technical Support Report**

Lighthouse generates this support report on demand and the report includes the current system log. This process can take several minutes.

2. Click **Download support report**.

This downloads a PKZIP archive to the local system. The archive's filename is structured as follows:

```
support-[host-name]-[iso-8601-order-date-and-time-stamp].zip
```

It contains two files:

- `system.txt` — the configuration information also presented in the Technical Support Report window.
- `messages` — the current Lighthouse VM system log.

The two files are also presented in the Support Report text box below the Download support report link. Because the report includes the current system log, this is a long but scrollable presentation and is searchable using the web browser's built-in search function.

GENERATE A SUPPORT REPORT VIA THE LOCAL TERMINAL

To generate a complete configuration and status report regarding a given Lighthouse VM:

1. Select **MANAGE > LIGHTHOUSE > Local Terminal**.
2. At the [hostname] login: prompt, enter an administrator username and press Return.
3. At the password: prompt, enter the administrator's password and press Return.
4. At the bash shell prompt, enter

```
support-report -z > /tmp/support.zip
```

and press Return

The `-z` switch generates the same combined file produced by the Download support report link noted in the Lighthouse UI-specific procedure.

Note: In the example above, the redirect saves the generated PKZIP file to `/tmp/support.zip`. However, be aware that the `/tmp` directory is deleted during a reboot, so the file might be saved to a different location.

Here are two options for copying the file from Lighthouse:

- Use `scp` from a Mac or Windows client. As `scp` only requires `ssh` access, no additional configuration is required on Lighthouse for this to work.

```
$ scp root@192.168.0.2:/tmp/support.zip .  
root@192.168.0.2's password:  
support.zip 100% 321 604.0KB/s 00:00
```

For Windows users, WinSCP on Win10 also works.

- Use the FTP client on Lighthouse to copy the file to an FTP server. Passive mode must be used for this to work. Example:

```
root@LH5-UK-Lab:/tmp# ftp ftp> open 192.168.0.216  
Connected to 192.168.0.216.  
220 im7200-demo-uk FTP server (GNU inetutils 1.4.1) ready. Name  
(192.168.0.216:root): fred  
331 Password required for fred. Password:  
230- *** Opengear UK Demo IM7216 ***  
230 User fred logged in. Remote system type is UNIX.  
Using binary mode to transfer files. ftp> passive  
Passive mode on. ftp> bin  
200 Type set to I. ftp> put support.zip  
227 Entering Passive Mode (192,168,0,216,208,166)  
150 Opening BINARY mode data connection for 'support.zip'.  
226 Transfer complete.  
4132664 bytes sent in 0.128 seconds (32262492 bytes/s) ftp> quit  
221 Goodbye.
```

LIGHTHOUSE CLI, SERIAL PORT AND REST API LOGGING

Lighthouse offers command line interface (CLI) and REST API logs.

Note: Logging is disabled by default.

Once enabled, CLI and REST API logs can be found in `/var/log/messages`. All passwords are masked in the logs so that sensitive information is not stored in plain text or leaked.

When you enable logging, you do not need to restart or log out and in again. There are a few caveats:

- CLI logging only works for interactive (human-controlled) terminals. Commands generated by automated scripts will be not be logged.
- Commands such as `ssh` or `telnet` do not produce logs for the commands sent over the connection.
- Requests can be logged for all endpoints, however, only endpoints implemented in Lipy can have responses logged.

Note: These logs are not intended to be used as a definitive record of all commands that have ever been run. A malicious user with full root access can circumvent anything.

For more details see:

<https://ftp.opengear.com/download/documentation/api/lighthouse/og-rest-api-specification-v3-7.html>

USING OGCONFIG-CLI TO ENABLE LOGGING

Logging should be enabled using `ogconfig-cli`. Use the following commands in a Lighthouse terminal to view, enable or disable logging:

- `system.logging_cli_enabled` - Enable/disable logging commands entered in the Lighthouse Terminal.
- `system.logging_rest_enabled` - Enable/disable basic logging for the REST API. These logs report the following information about every REST API call:

- Time
- Request type (GET/POST/PUT/DELETE)
- HTTP status code
- Username
- Source IP Address
- Endpoint

`system.logging_rest_request_enabled` - Enable/disable request logging for every REST API call. In addition to the basic logging, also logs the request body that was provided by the client, if any.

Requires `system.logging_rest_enabled` to be enabled.

CONFIG SEARCHES USING OGCONFIG-CLI

Simple `config` searches can be performed from inside `ogconfig-cli` with the `find` command.

Note: The element being searched must be a list, otherwise the command returns an error.

The syntax is:

```
find <path of list to search> <element to search for> <value  
to search for>
```

For example, to find enabled users use:

```
ogcfg > find users enabled true
```

Or to find the enabled ports on a particular node set:

```
ogcfg> find nodes[0].ports mode 'ConsoleServer'
```

ADD NODE AND PORT TO LIGHTHOUSE LOGS

Node and port logs will log all access to nodes via Lighthouse using the `pmshell` function, including which console, and which port was accessed by the user when logged in.

When system logging is enabled, user and node selection and user and Port selection is logged. To enable node and port logging on Lighthouse:

1. Navigate to **Lighthouse > Manage > Lighthouse > Local Terminal**.
2. Login to a user that has rights to use CLI and `ogconfig-cli`.
3. Node and port logging can only be enabled through `ogconfig-cli` as follows

```
root@lighthouse:~# ogconfig-cli
ogcfg> set system.logging_cli_enabled true
root-1-system_logging_cli_enabled: Integer <True> ogcfg> push
OK
ogcfg> exit
```

After node and port logging is enabled, you can view any logs recorded in your Lighthouse's `syslog`, located at `/var/log/messages`.

EXAMPLE LOGS

Here is an example of logs without request or response logging:

```
2020-03-17 15:29:37,237 INFO [root:117][waitress] POST 400 (root |  
192.168.1.1) - /api/v3.4/system/licenses/file  
2020-03-17 15:30:23,034 INFO [root:117][waitress] GET 200 (root |  
192.168.1.1) - /api/v3.4/users?page=1&per_page=10
```

Here is an example of logs with request or response logging

Note: These logs differ slightly due to being logged with different systems:

```
2020-05-11T05:45:09.567214+00:00 lighthouse rest_api_log[2465]: PUT  
200 (root | fd07:2218:1350:4b:a438:f8ff:fe4f:65fc) -  
/api/v3.4/system/cli_session_timeout REQUEST={"system_cli_session_  
timeout":{"timeout":0}}  
2020-05-11 05:45:18,999 INFO [lipy.logging.rest_api:62][waitress] GET  
200 (root | fd07:2218:1350:4b:a438:f8ff:fe4f:65fc) -  
/api/v3.4/users?page=1&per_page=10 RESPONSE={'users': [{'username':  
'root', 'description': 'System wide SuperUser account', 'enabled':  
True, 'id': 'users-1', 'no_password': False, 'expired': False,  
'locked_out': False, 'rights': {'delete': True, 'modify': True},  
'groups': ['groups-2']}], 'meta': {'total_pages': 1}}
```


ENABLE LOGGING

To enable logging, run these commands on the Lighthouse local terminal:

```
root@lighthouse:~# ogconfig-cli
ogcfg> set <value> true
root-1-<value>: Integer <True>
ogcfg> push
OK
ogcfg> exit
```

Replace `<value>` with the desired setting:

- `system.logging_cli_enabled`
- `system.logging_rest_enabled`
- `system.logging_rest_request_enabled` (requires `system.logging_rest_enabled`)
- `system.logging_rest_response_enabled` (requires `system.logging_rest_enabled`)
- **To check if logging is enabled:**

To establish if logging is enabled run these commands on the Lighthouse local terminal:

```
root@lighthouse:~# ogconfig-cli ogcfg> print system
```

This will produce output with Boolean values:

```
system.logging_cli_enabled (bool): false
```

- `system.logging_rest_enabled (bool): false`



- `system.logging_rest_request_enabled (bool): false`
- `system.logging_rest_response_enabled (bool): false`

DISABLE LOGGING

```
root@lighthouse:~# ogconfig-cli ogcfg> set <value> false
root-1-<value>: Integer <False>
ogcfg> push OK
ogcfg> exit
```


Replace **<value>** with the desired setting:

- `system.logging_cli_enabled`
- `system.logging_rest_enabled`
- `system.logging_rest_request_enabled`
- `system.logging_rest_response_enabled`

SYSLOG EXPORT

Administrative users can specify multiple external servers to export the syslog to via TCP or UDP.

Select **SETTINGS > SERVICES > Syslog**.

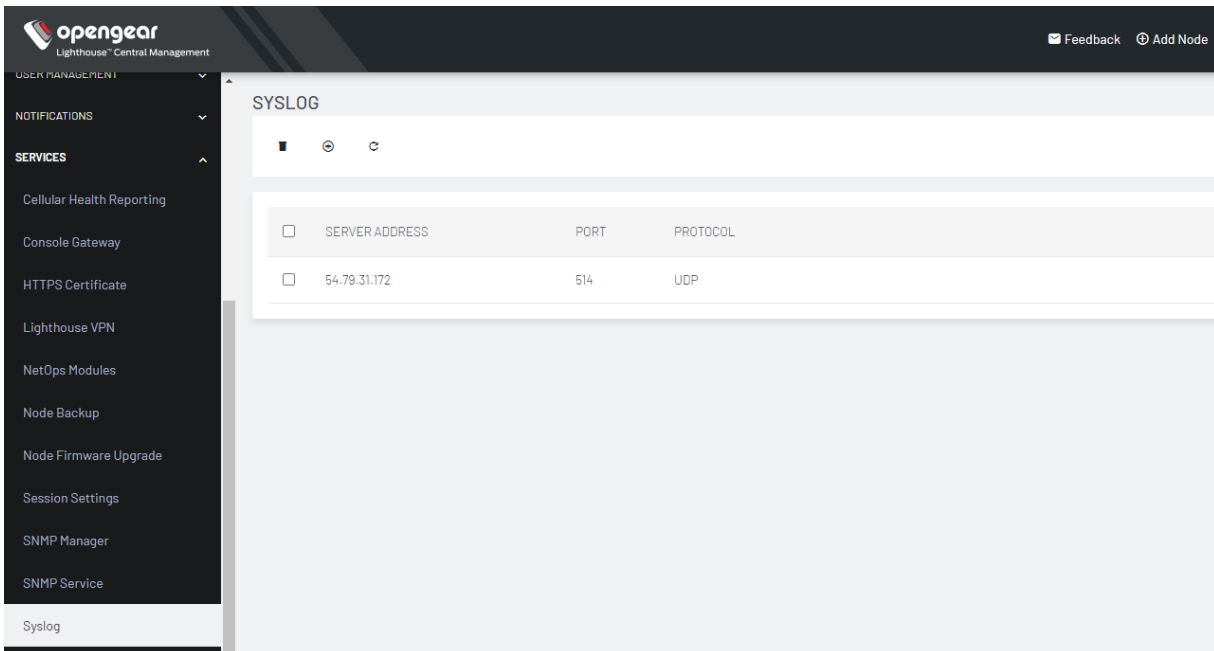

The Syslog page lists any previously added external syslog servers. To add a new one,

1. Click the + symbol. The **Add External Syslog Server** dialog displays.

ADD EXTERNAL SYSLOG SERVER

Server Address ?

Protocol ?

Port ?

Cancel


Apply

2. Enter the **Server Address**.
3. Enter the **Protocol**, either UDP or TCP.
4. Enter the correct **Port**. If no port is entered, UDP defaults to port 514 and TCP defaults to 601.
5. Click **Apply**.

To edit an existing syslog server, click the **Edit** button. Delete a server by clicking the **x** button.

CONFIGURING LIGHTHOUSE FOR NETWORK TRAFFIC MIRRORING

Lighthouse can be integrated with a user's enterprise Intrusion Detection System (IDS) for real-time detection of security events in their network infrastructure.

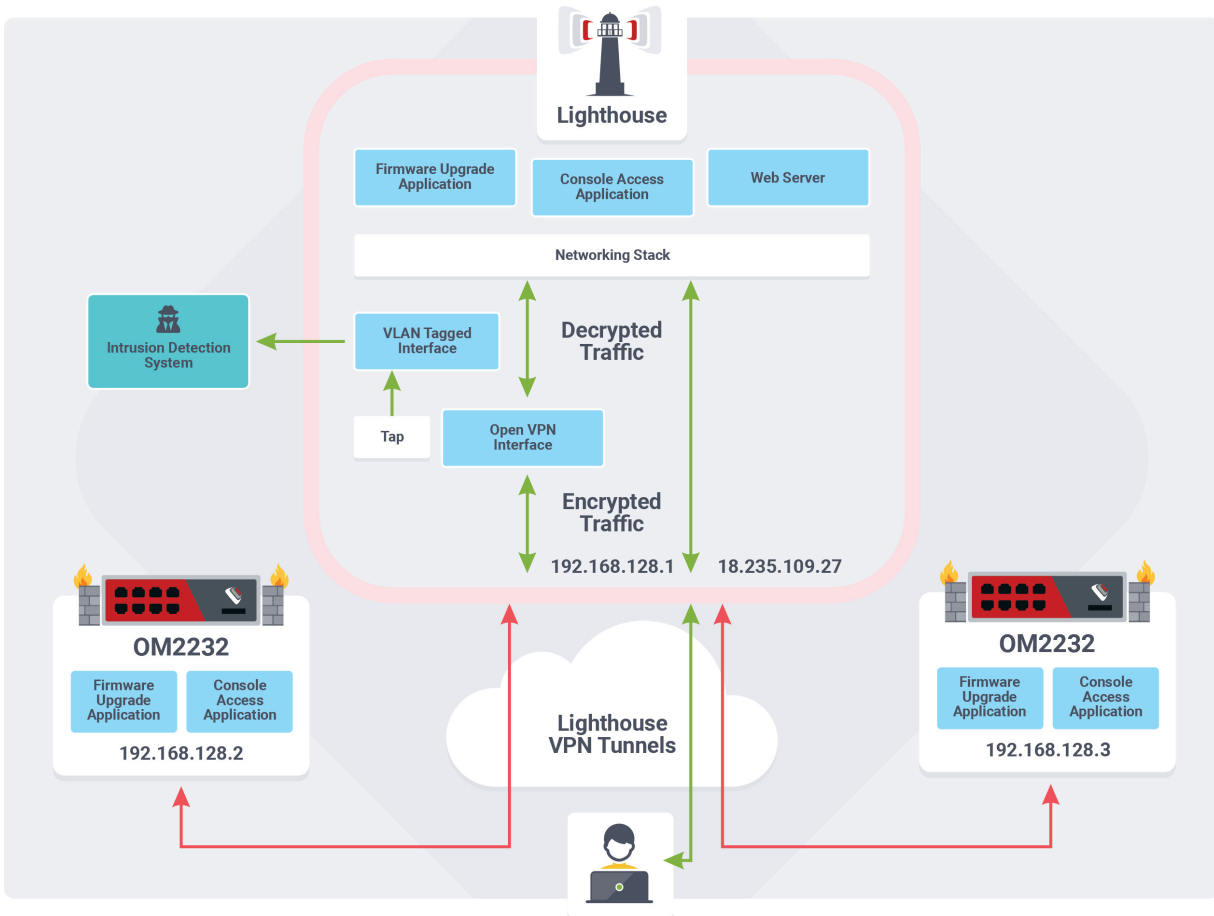

Lighthouse allows users to configure the network traffic tap feature via the command line interface. The `traffic_mirroring` command:

- Mirrors all network traffic over the encrypted OpenVPN tunnel between Lighthouse and the Opengeared supported appliances, and forwards all network traffic as decrypted packets to a configurable endpoint. The endpoint is expected

to be a “gateway” IP address of an external device that is routable from Lighthouse.

- Preserves the original UDP and TCP/IP header information while mirroring (so that the IDS can reassemble TCP streams and inspect the payload).

Note: Traffic mirroring is only supported on TCP and UDP.

- Provides an option to add a configurable VLAN tag to the Ethernet header.
- Works with multiple instances.

Only users with `sudo` access on the primary Lighthouse CLI (for example, via the admin group) can enable or disable traffic mirroring.

Users must:

- Ensure that the traffic is routed to the required destination in their enterprise network
- Ensure that their firewall rules allow traffic mirroring.

Note: All functionality is available only via the Lighthouse CLI. There is no UI or REST API interface for network traffic mirroring feature. For detailed CLI usage see `traffic_mirroring --help`.

CONFIGURING NETWORK TRAFFIC MIRRORING FOR MULTIPLE INSTANCES

Network traffic mirroring can be configured for multiple instances of Lighthouse. It can mirror traffic between Lighthouses, and between a node and a dependent Lighthouse.

If new dependent Lighthouses are added to a network that is mirroring traffic, they must be re-configured for network traffic mirroring.

Note:All CLI configuration, including enabling and disabling, must be run on the primary Lighthouse. A dependent Lighthouse can only run the `--test` and `--status` arguments.

Users can specify different settings for each Lighthouse. For example:

- A dependent Lighthouse can have a different VLAN ID (or no VLAN ID), and a different destination IP
- A dependent Lighthouse can be set to only mirror node traffic, and not multi-instance traffic. This is useful because the primary is already mirroring that traffic
- You can enable or disable network traffic mirroring per instance.

Note:All newly enrolled secondary Lighthouse instances have network traffic mirroring disabled by default.

TROUBLESHOOTING NETWORK TRAFFIC MIRRORING

It is possible that there may be momentary periods of up to a few seconds where traffic is not being mirrored. For example mirroring outages of a few seconds can occur during:

- Configuration if changes are being made to the VPN subnet or firewall
- The Lighthouse boot process.

To ensure that traffic monitoring is uninterrupted, avoid rapid changes to configuration and repeated reboots of Lighthouse.

MANAGING LIGHTHOUSE USERS

Lighthouse supports locally defined users, and remote users who are authenticated and authorized by Authentication Authorization Accounting (AAA) systems such as LDAP, Radius and TACACs+.

Role Description

Users must be members of one or more groups. Each group has a role assigned to it which controls the level of access that group members have to the system. These roles are:

Role	Description
Lighthouse Administrator	The Lighthouse Administrator role is assigned to groups whose members need to manage and maintain the Lighthouse appliance. Members have access to all data on the Lighthouse system
Node Administrator	The Node Administrator role is assigned to groups that need to manage and maintain a set of Nodes. Each group with the Node Administrator role must have an associated Smart Group which is evaluated to define the set of nodes that the group members have access to.
Node User	The Node User role is assigned to groups that need to access a set of nodes. Each group with the Node User role must have an associated Smart Group which is evaluated to define the set of nodes that the group members

	have access to. Optionally, access to the managed devices can be limited by associating the saved Managed Device Filter with the Node User role.
--	---

Group membership can either be defined locally for local users or defined on the AAA server. Groups that are assigned by the AAA servers must still exist locally.

WORK WITH GROUPS

User groups are used to organize user accounts and their associated privileges. A user group is associated with a set of nodes, its managed devices and ports, and users who are members of the group will have access to those devices through Lighthouse.

For example, administrators can configure port access, and ensure that devices are only accessible to users with the appropriate permissions.

A group may also be associated with one or more roles, which provide permissions to access operational features in Lighthouse.

A user may be a member of multiple groups.

ABOUT GROUPS

THE NETGRP GROUP

The `netgrp` group exists as a convenient way to set the permissions of all users that only exist on the [AAA] server rather than having to manage the permissions of every remote-only user.

Below are some points on how the `netgrp` group operates:

- The `netgrp` group exists on all lighthouses but is disabled by default
- The `netgrp` group must be configured to provide the required privileges before it is enabled.
- If a user authenticates remotely using a [AAA] server and that user doesn't yet exist locally on the lighthouse, then the user is automatically added to the `netgrp` group. Note that a user can exist in the Lighthouse Linux system but not in the Lighthouse configuration.

There is no hard requirement for a remotely authenticated user to be a member of the `netgrp` group when logging in. However, if the `netgrp` group is the only way the user gains the required permissions to log in, then they do need to be a member of the `netgrp` group and the `netgrp` group needs to be enabled.

REMOTE GROUPS

When a user authenticates using a [AAA] server, any groups that the server returns are added to a list of groups that the user becomes a member of. If any of those groups match a local group on the Lighthouse, then the user becomes a member of that group and gains any permissions provided by that group.

For example, if a user authenticates remotely and the [AAA] server returns the following groups:

- `my_group1`
- `my_group2`

If the lighthouse has a group called `my_group1` but it does not have a group `my_group2` then the authenticated user will gain the privileges provided by `my_group1` and the remote group `my_group2` will simply be ignored.

Note: If the user is a member of any other groups locally on the lighthouse, the user will also gain any permissions provided by those groups.

To summarise, a user will be a member of

- the local groups that the user is locally configured to be a member of AND
- any remote groups returned by the [AAA] server that match groups on the lighthouse.

If the authenticated user doesn't yet exist on the lighthouse, the user will be:

- a member of any remote groups that match groups on the Lighthouse AND
- a member of the `netgrp` group,

Note: The `netgrp` group is disabled by default.

If a group is disabled, the user does not get the permissions from that group.

REMOTE GROUP NAME CONVERSION

To further align Lighthouse remote authentication with legacy console servers such as ACM 7000, remote groups from the [AAA] server are applied as they are returned but in addition, the remote groups are converted such that:

- uppercase characters are converted to lowercase
- any character that is not a number, a letter, an underscore or a hyphen is converted to an underscore
- These converted group names are added to the unconverted group names

Some legacy console servers only use the converted group names but Lighthouse uses both the unconverted and converted remote group names.

If a converted group name is the same as the unconverted group name, the converted group name is simply ignored.

Below are examples of a remote group name and its corresponding converted group name:

My Group : my_group

My-Group# : my-group_

my@group: my_group

my#odd@\$group : my_odd__group

CREATING NEW GROUPS AND ROLES

User groups and roles allow you to control access to nodes, managed devices and ports by creating filters that specify permissions.

CREATE A NEW GROUP

1. Select **SETTINGS > USER MANAGEMENT > Groups and Roles**. Select the **User Groups** tab.
2. Click **+ Add User Group**. The **New Group** page opens.
3. Click **Enabled** to enable group.

4. Enter a **Group Name** and **Group Description**.

Note: **Group Name** is case sensitive. It can contain numbers and some alphanumeric characters. When using remote authentication, characters from a user's remote groups that are not allowed on Lighthouse are converted to underscores during authentication. Local groups can be created that take that into account, allowing the authentication to continue.

5. If desired, you can select a **Linked Port Filter** and **Linked Smart Group** to associate with this group.

The **Linked Port Filter** can be used to restrict groups and users to only view ports that are explicitly tagged for their use.

6. The **CLI Permissions** section displays Command Line Interface(CLI) permissions based on the roles you have assigned to this group. To change the permissions, you can edit or add new roles with the desired CLI Permissions. See [Create a new Role](#).

7. Add one or more roles by clicking **Add Role** and checking the desired roles.

Each role has specific operation permissions associated with it and **CLI (Command Line Interface)** access levels for **console shell**, **shell**, and **PM shell**. Click view details to see the information for each group.

8. You can also control the new group's permissions independently of the roles you add to your group. Scroll to the bottom of the page to specify Full Access, Read Only, or Deny. Click to the right of each Operation row to see all options.

Note: See [Available Operations Permissions](#) for a list of all options.

9. Click **Save Group**.

AVAILABLE ROLES:

- **Lighthouse Administrator:** Members of groups with this role have **Full** access to all nodes and managed devices.
- **NodeAdmin:** Has no shell access. Has **Read Only** access to Netops Modules, all Nodes & Configuration Operations, Cell Health, Smart Groups, Tags, and Jobs.
- **NodeUser:** Has **PM Shell** access. Has **Read Only** access to Nodes & Devices (Base) and Tags.
- **Lighthouse Reporter:** Has no shell access. Has **Read Only** access to all Operations.

You can also create a custom role that allows you to modify **CLI Permissions** and **Operations Permissions** by clicking [Create a new Role](#) on the **New Group** page.

A new role can also be based on an existing role with the **Use as template** link on the upper right of a role's detail page.

AVAILABLE OPERATIONS PERMISSIONS:

- **Logging**
 - Port Logging – Manage port logging settings.
 - Syslog – Manage system syslog settings.
- **Netops**
 - Netops Modules

- **Nodes & Configuration**

Nodes & Devices (Base) – Access to dashboard, nodes, managed devices, node Enrollment, console gateway, and Node web UI.

Nodes & Devices (Advanced) – Access to jobs, pending nodes, smart groups, and managed device filters.

Nodes Firmware Management

Template Push – Manage templates and push templates to nodes.

- **Service Settings**

LHVPN

Cell Health

Console Gateway

Date & Time

HTTPS

Netops – Install Netops modules and manage local Netops repositories.

Node Backup.

Smart Management Fabric - Set up Smart Management Fabric (SMF) addresses and access Session Settings. Due to dependencies, this permission requires Multiple instance permission to be set at the same level.

SNMP

SSH

Syslog

- **Smartgroups & Tags**

Bundles – Manage and use bundles.

Smart Groups – Manage and use smart groups.

Tags – Manage and use tags.

- **System**

Admin & Licensing – Manage access settings for Lighthouse and license settings.

Backup & Restore

Jobs

Multi-instance – Manage multi-instance settings and control state of instances.

Network Interfaces – Manage network interface settings.

System Upgrade & Reset.

- **Users & Permissions**

Authentication – Manage authentication settings including methods, policies, and restrictions.

Groups & Roles – Create and edit groups and roles. May not assign them to users.

Users – View, manage, create, and delete users.


Note: When a new group is given the **Lighthouse Administrator** role, members of the group have access to the `sudo` command. Groups or users with the **Lighthouse Administrator** role are added to the admin group, which is in the list of allowed `sudoers`.

For non-Azure deployments, on first boot of a new Lighthouse instance, the `root` user is the only member of the admin group and the only user with `sudo` access. However, for Azure, `root` is disabled and there is another admin user created as part of the deployment process.

MODIFYING EXISTING GROUPS

To modify an existing group:

1. Select **SETTINGS > Groups and Roles**. If necessary, click on the **USER GROUPS** tab.
2. Click the name of the group to be modified.
3. Click the **Edit** icon on the upper right and make desired changes.
4. Click **Save Group**.

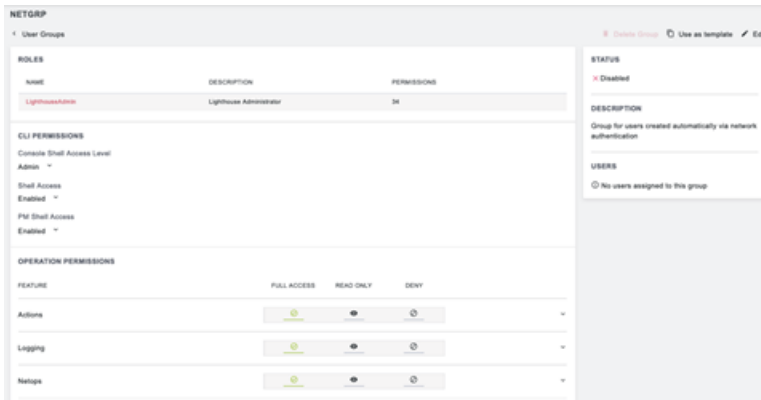

The screenshot shows the 'Edit' page for the 'Lighthouse Administrator' group. The page is divided into several sections:

- ROLES:** A table with columns NAME, DESCRIPTION, and PERMISSIONS. The 'Lighthouse Administrator' role is listed with the description 'Lighthouse Administrator' and permissions 'IN'.
- CLI PERMISSIONS:** A section with a table for permissions. The 'Console Shell Access Level' is set to 'Admin', 'Shell Access' is 'Enabled', and 'FW Shell Access' is 'Enabled'.
- OPERATION PERMISSIONS:** A table with columns FEATURE, FULL ACCESS, READ ONLY, and DENY. The 'Actions' feature has 'FULL ACCESS' checked, 'READ ONLY' and 'DENY' are unchecked. The 'Logging' feature has 'FULL ACCESS' checked, 'READ ONLY' and 'DENY' are unchecked. The 'Networks' feature has 'FULL ACCESS' checked, 'READ ONLY' and 'DENY' are unchecked.
- STATUS:** A section with a 'Status' dropdown set to 'Disabled' and a 'Description' field containing 'Group for users created automatically via network authentication'.
- USERS:** A section with a message 'No users assigned to this group'.

The group details page allows the group's **Description**, **Access Controls**, **Roles**, **Linked Smart Group**, and **Port Filter** to be set and changed.

If a Group's **Role** is **Lighthouse Administrator**, the group's **Smart Group** is **All Nodes** and **Port Filter** is **All Ports**. This cannot be changed. If a Group has a **Smart Group** other than **All Nodes** or a **Port Filter** other than **All Ports**, the group's Role cannot be set to **Lighthouse Administrator**.

The **Groups** page also allows you to delete groups. All users who were members of the deleted group lose any access and administrative rights inherited from the group.

Note: The **netgrp** group is inherited as the primary group for all remote AAA users who are not defined locally on Lighthouse. By default, **netgrp** has the **Lighthouse Administrator** role and is disabled - it must be enabled to take effect for remote AAA users.

USE AN EXISTING GROUP AS A TEMPLATE FOR A NEW GROUP

To use an existing group as a template for a new group:


1. Select **SETTINGS > USER MANAGEMENT > Groups and Roles**. If necessary, click on the **USER GROUPS** tab.
2. Click the name of the group to be used as a template.
3. Click the **Use as Template** icon on the upper right. This opens a new group page with the settings from the group you selected as a template.
4. Change the **Group Name** and make and other desired changes.
5. Click **Save Group**.

CREATE A NEW ROLE

You can create a new role in two ways, either from the Roles tab or by using an existing role as a template.

To create a new role from the Roles tab:

1. Select **SETTINGS > USER MANAGEMENT > Groups and Roles**

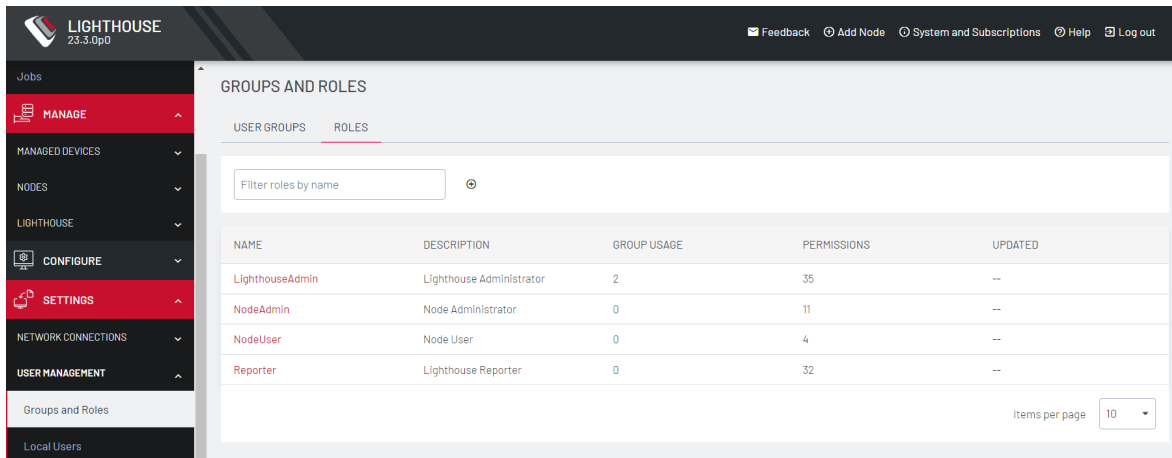

2. Click the **ROLES** tab.
3. Click **+ Add Role**. The **Create Role** page displays.
4. Enter a **Role Name** and **Role Description**.
5. Modify the **CLI Permissions** as desired. Click Enabled or Disabled for each of the following:
 - Console Shell Access:** Ability to connect to nodes' command lines via Lighthouse's SSH.
 - Shell Access:** Ability to access Lighthouse's command line as administrator.
 - PM Shell Access:** Ability to connect to serial ports via SSH.
6. You can also control the **Operation Permissions** for the new role independently. Specify
 - Full Access,**

Read Only, or

Deny.

Click to the right of each Operation row to see all options.


Note: See ["Create a new group" on page 316](#) for a list of all options.

7. Click **Save Role**.

To create a new role from an existing role:

A new role can also be based on an existing role with the **Use as template** link on the upper right of a role's detail page.

1. Select **SETTINGS > USER MANAGEMENT > Groups and Roles**.
2. Click the **ROLES** tab.
3. Select the role you wish to copy from the list.

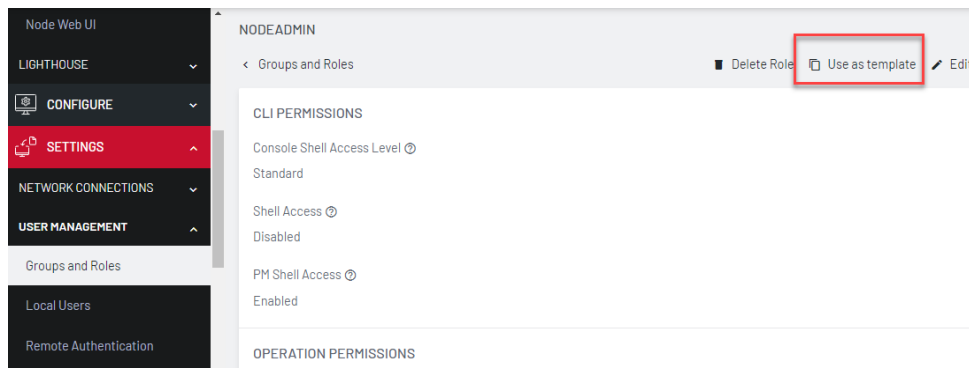

4. Click **Use as template**. The **Create Role** tab displays with all the settings of the existing role. Make changes if necessary.
5. Click **Save Role** to create the new role.

WORK WITH USERS

You can create new users, edit existing users, delete users and alter groups and permissions. Users can be either local users or remote users, in both instances you must understand how users must be authenticated. Lighthouse allows users to use the following authentication modes:

- LDAP
- RADIUS
- TACAS

The root user can be authenticated by AAA but it will always try local auth for the root user first.

AAA MODE COMPARISON

Name	Password And Group Source	Extra Notes
Local	Authentication: Local only Groups: Local	All users must exist locally before they can log in.
[AAA] (RADIUS, TACAS+, LDAP)	Authentication: the user-name/password provided by the user is ONLY tested against the [AAA] server. Groups: Union of the user's local groups and their [AAA] groups. If the user didn't exist locally and successfully authenticated via [AAA], the user is also added to the <code>netgrp</code> group.	If there is a local user with the same username as the [AAA] user and that user tries to login with the local password, login will be denied UNLESS the local password is the SAME as the remote password, that is, the remote password is used to login. If the [AAA] server is unreachable, the only user that can authenticate locally is <code>root</code> .

Name	Password And Group Source	Extra Notes
Local[AAA] (LocalRadius, LocalTacacs+, LocalLdap)	<p>Authentication: The username/password provided by the user is first tested locally and if local authentication fails then the [AAA] server is used.</p> <p>Groups: Union of the user's local groups and their [AAA] groups. If the user didn't exist locally and successfully authenticated via [AAA], then the user is also added to the netgrp group.</p>	<p>Basically, the user can log in with either their local password (if the user exists locally) or their [AAA] password (if the user exists in the [AAA] server). The main point is that the username/password is tested locally first and if it fails, [AAA] auth is attempted with the same username and password.</p>
[AAA]Local (RadiusLocal, Tacacs+Local, LdapLocal)	<p>Authentication: The username/password provided by the user is first tested by the [AAA] server and if [AAA] authentication fails then the credentials are tested locally. Groups: Union of the user's local groups and their [AAA] groups.</p>	<p>Basically, the user can log in with either their local password (if the user exists locally) or their [AAA] password (if the user exists in the [AAA] server).</p> <p>The main point is that the username/password is</p>

Name	Password And Group Source	Extra Notes
	If the user didn't exist locally and successfully authenticated via [AAA], then the user is also added to the netgrp group.	tested by [AAA] first and if it fails, local auth is attempted with the same username and password.
[AAA]DownLocal (RadiusDownLocal, Tacacs+DownLocal, LdapDownLocal)	Authentication: Local authentication is ONLY used if the [AAA] server is unreachable. Otherwise [AAA] authentication is always used. Groups: Union of the user's local groups and their [AAA] groups. If the user didn't exist locally and successfully authenticated via [AAA], then the user is also added to the netgrp group.	This should behave exactly the same as the [AAA] mode until the [AAA] server is unreachable at which point, local authentication is attempted.

ABOUT NON-SYSTEM USERS

There are two main types of non-system users in Lighthouse (non-system users include users other than root and users that exist for the purpose of providing services on the Lighthouse):

1. Users added via the UI/REST API or Lighthouse config: These users are added by using the UI or the REST API (or even the `ogadduser` CLI command).
 - These users exist in the Lighthouse config/database and are visible in the UI and REST API
 - The users are added as standard Linux users and can be seen in `/etc/passwd` and `/etc/shadow`
2. Users added via [AAA] authentication: These users are created in the Lighthouse Linux system when the user doesn't already exist locally and the user has successfully authenticated remotely via [AAA]
 - These users are simply added to the Linux OS and can be seen in `/etc/passwd`.
 - These users are NOT visible in the Lighthouse config/database or UI and REST API

LOCAL USERS ADDED BY AAA AUTHENTICATION

If a user does not exist locally on the Lighthouse when the user authenticates remotely via [AAA], then the user is added to the Linux system but NOT into the lighthouse configuration/database. This means:

- These users are not visible in the UI or config/database
- These users are visible in `/etc/passwd`



Also, a user that is created locally after authenticating via [AAA] is automatically added to the `netgrp` group, even though that group may be disabled (which it is by default). ["About Groups" on page 312.](#)


CREATING NEW LOCAL USERS

To create a new local user:

1. Select **SETTINGS > USER MANAGEMENT > LOCAL USERS**.

By default, the root user is the only user listed.

2. Click the **+** button. The **New User** page displays

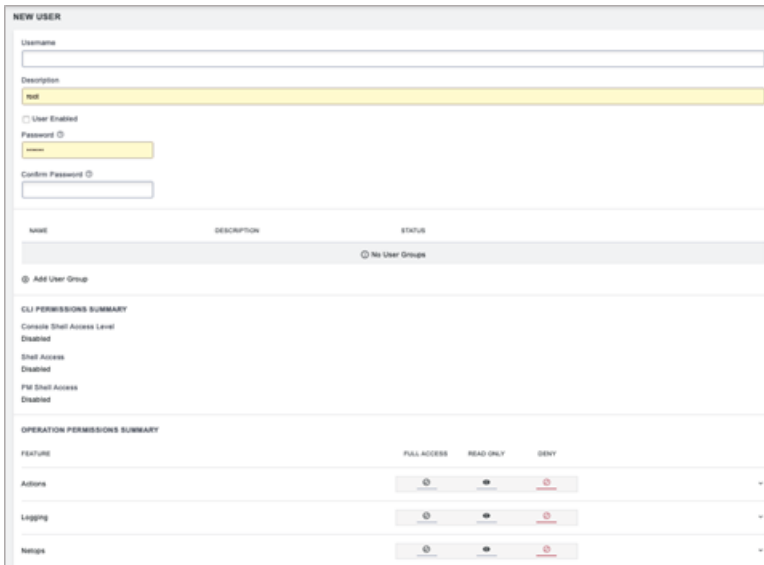

3. Enter a **Username**, **Description**, and **Password**.
4. Re-enter the **Password** in the **Confirm Password** field.
5. Select the **User Enabled** checkbox.
6. Click on **Add User Group** to add this user to any existing User Groups.
7. Choose which **CLI** options this user should have.
8. Select any **Operation Permissions** this user should have. See ["Create a new group"](#)
9. Click **Save User**.

Note: When a new user is created, an entry is added to the syslog, indicating the new user's name, the user that performed the operation, database queries, and the time that it occurred:

```
2020-05-22T16:22:46.490627+01:00 localhost rest_api_log[62]: GET 200
(root | 192.168.1.230) - /api/v3.5/users?page=1&per_page=10 RESPONSE=
{'users': [{'username': 'root', 'description': 'System wide SuperUser
account', 'enabled': True, 'id': 'users-1', 'no_password': False,
'expired': False, 'locked_out': False, 'rights': {'delete': True,
'modify': True}, 'groups': ['groups-2']}, {'username': 'fred',
'description': 'fred', 'enabled': True, 'id': 'users-2', 'no_
password': False, 'expired': False, 'locked_out': False, 'rights':
{'delete': True, 'modify': True}, 'groups': ['groups-2']}], 'meta':
{'total_pages': 1}}
```


If the created user is set to disabled, the `configurator_users` message does not appear as they have not been added to the passwords file.

The syslog can be accessed from Lighthouse by clicking Help > Technical Support Report.

CREATE NEW LOCAL USERS FOR REMOTE AUTHENTICATION

To create a new user without a password which causes them to fail back to remote authentication:

1. Select **SETTINGS > USER MANAGEMENT > Remote Authentication**

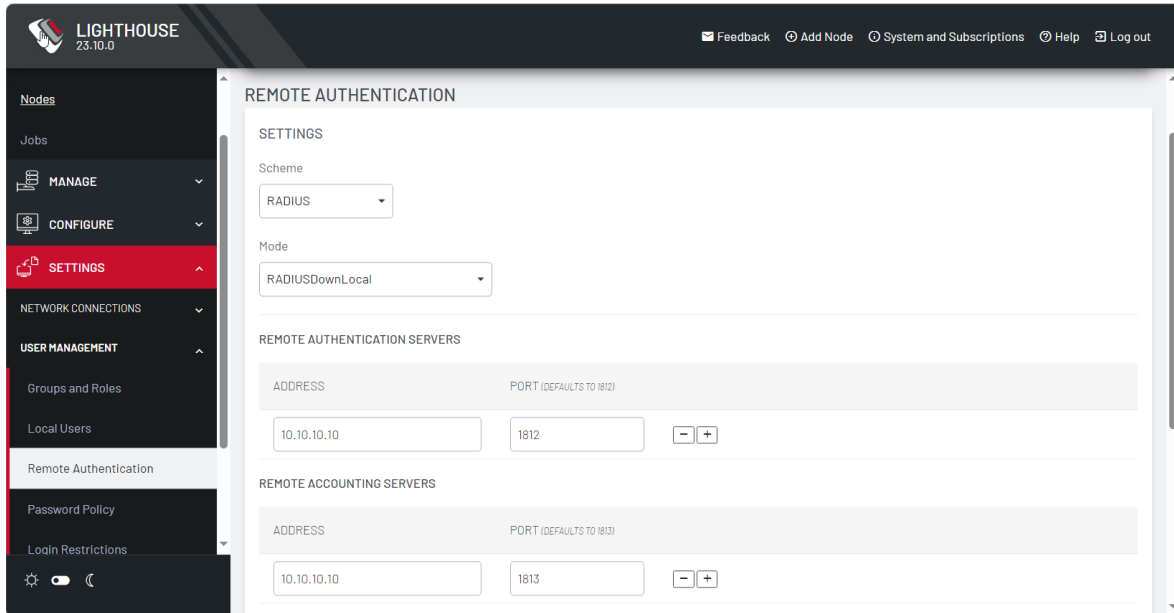

The screenshot shows the Lighthouse 23.10.0 web interface. The left sidebar contains a navigation menu with options: Nodes, Jobs, MANAGE, CONFIGURE, SETTINGS (highlighted in red), NETWORK CONNECTIONS, USER MANAGEMENT, Groups and Roles, Local Users, Remote Authentication, Password Policy, and Login Restrictions. The main content area is titled 'REMOTE AUTHENTICATION' and contains the following sections:


- SETTINGS**
 - Scheme:** A dropdown menu with 'RADIUS' selected.
 - Mode:** A dropdown menu with 'RADIUSDownLocal' selected.
- REMOTE AUTHENTICATION SERVERS**

ADDRESS	PORT (DEFAULTS TO 1812)	
10.10.10.10	1812	- +
- REMOTE ACCOUNTING SERVERS**

ADDRESS	PORT (DEFAULTS TO 1813)	
10.10.10.10	1813	- +

2. Choose a remote Authentication **Scheme** and enter appropriate settings.
3. Click **Apply**.
4. Select **SETTINGS > USER MANAGEMENT > Local Users**

- Click the **+** button. The **New User** dialog loads.

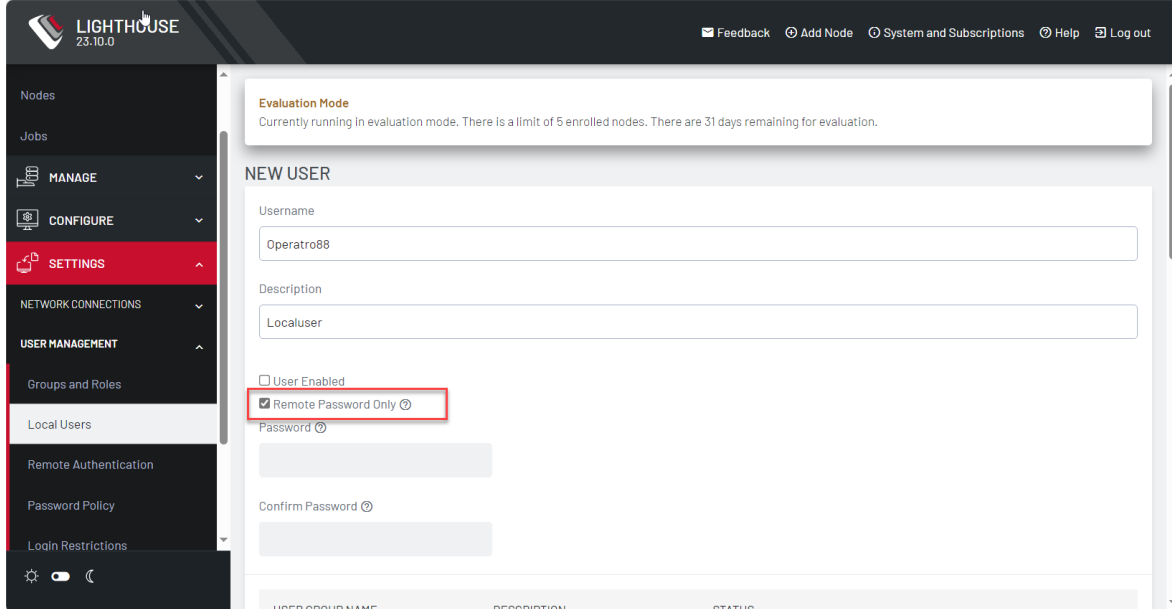

Evaluation Mode
Currently running in evaluation mode. There is a limit of 5 enrolled nodes. There are 31 days remaining for evaluation.

NEW USER

Username
Operatro88

Description
Localuser

☐ User Enabled
☒ Remote Password Only ⓘ

Password ⓘ
[Disabled]

Confirm Password ⓘ
[Disabled]

USER GROUP NAME	DESCRIPTION	STATUS
-----------------	-------------	--------

- Enter a **Username** and **Description**.
- Select the **Remote Password Only** checkbox. The **Remote Password Only** checkbox only displays if you set up the Scheme correctly in Step 2.
- Select the **Enabled** checkbox. The **Password** and **Confirm Password** fields are disabled.
- Select the **Remote Password Only** checkbox. The **Password** and **Confirm Password** fields are disabled.
- Click **Save User**.

Note: When a new user is created, an entry is added to the syslog, indicating the new user's name, the user that performed the operation, database queries, and the time that it occurred:

```
2020-05-22T16:22:46.490627+01:00 localhost rest_api_log[62]: GET 200
(root | 192.168.1.230) - /api/v3.5/users?page=1&per_page=10 RESPONSE=
{'users': [{ 'username': 'root', 'description': 'System wide SuperUser
account', 'enabled': True, 'id': 'users-1', 'no_password': False,
'expired': False, 'locked_out': False, 'rights': {'delete': True,
'modify': True}, 'groups': ['groups-2']}, {'username': 'fred',
'description': 'fred', 'enabled': True, 'id': 'users-2', 'no_
password': False, 'expired': False, 'locked_out': False, 'rights':
{'delete': True, 'modify': True}, 'groups': ['groups-2']}], 'meta':
{'total_pages': 1}}
```


If the created user is set to disabled, the `configurator_users` message does not appear as they have not been added to the passwords file.

The syslog can be accessed from Lighthouse by clicking Help > Technical Support Report.

MODIFY EXISTING USERS

To edit settings for an existing user:

1. Select **SETTINGS > USER MANAGEMENT > Local Users**
2. Click the **name** of the user to **edit** this user and make desired changes. You may change CLI access and specific access to operations. You may also control which groups this user is a member of.
3. Click **Save User**.

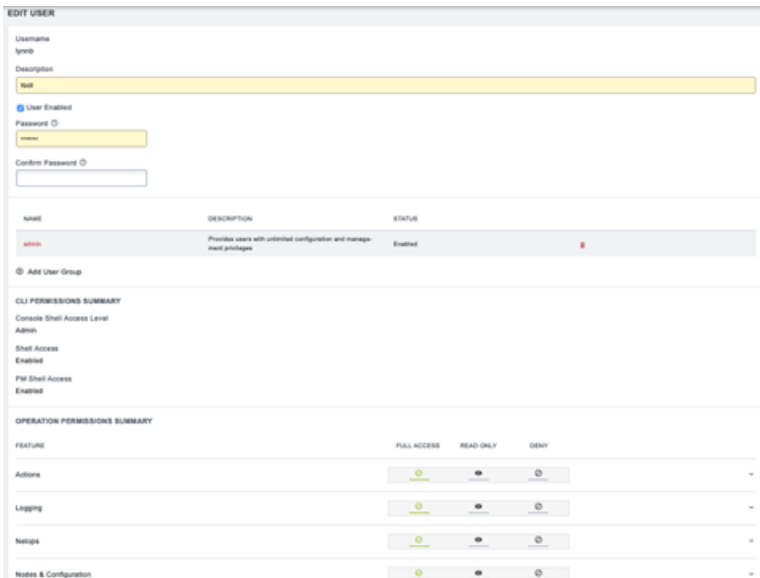

EDIT USER

Username
Name

Description
None

☒ User Enabled

Password
[Redacted]

Confirm Password
[Redacted]

NAME	DESCRIPTION	STATUS
admin	Provides users with unlimited configuration and management privileges	Enabled

CLI PERMISSIONS SUMMARY

Console Shell Access Level
Admin

Shell Access
Enabled

File Shell Access
Enabled

OPERATION PERMISSIONS SUMMARY

FEATURE	FULL ACCESS	READ ONLY	DENY
Actions	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>
Logging	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>
Networks	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>
Networks & Configuration	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>


The **Edit Users** dialog also allows the user's **Description** to be changed and the user's **Password** to be reset. The username cannot be changed. To disable a user, uncheck the **Enabled** checkbox.

Note: Disabled users cannot login to Lighthouse using either the Web-based interface or via shell-based logins (that is `sshusername-disabled@lighthouse-name-or-ip`). The user and the `/home/username-disabled` directory still exist in the Lighthouse VM file system.

EXPIRE USER PASSWORD


You can set user passwords to expire. To ensure a user's password is set to expire:

1. Select **SETTINGS > USER MANAGEMENT > Local Users**.
2. Click the **Expire Password** button in the Actions section of the user to be deleted.

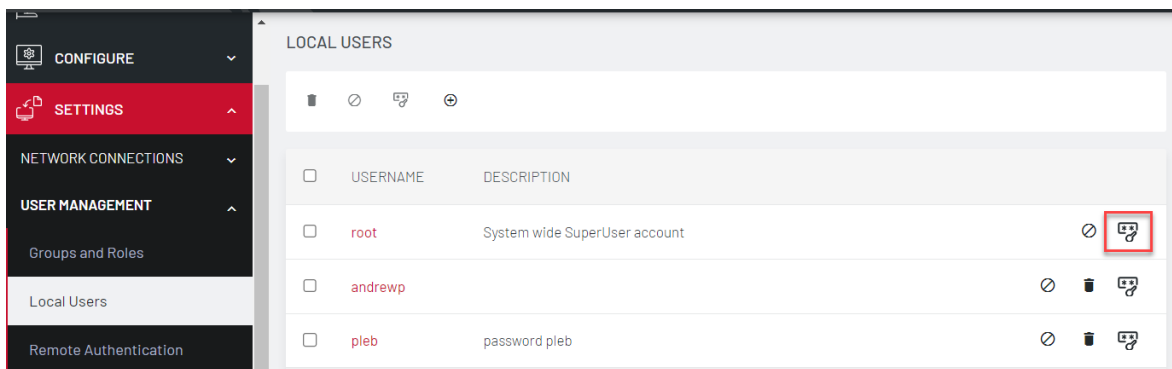

3. Click **Yes** in the Confirmation dialog.

The next time this user logs in, the user will be required to change the password.

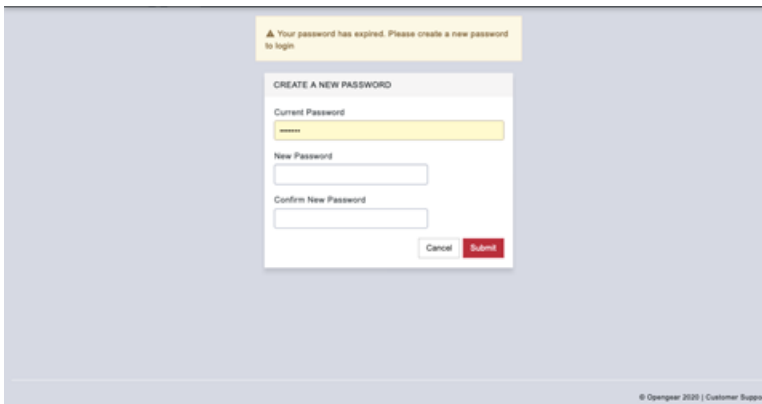


SETTING LOGIN RESTRICTIONS

Login restrictions can be applied by administrator users to prevent unauthorized login attempts via the UI and REST API.

Note: This does not affect SSH or Console logins.

1. Select **SETTINGS > USER MANAGEMENT > Login Restrictions**.

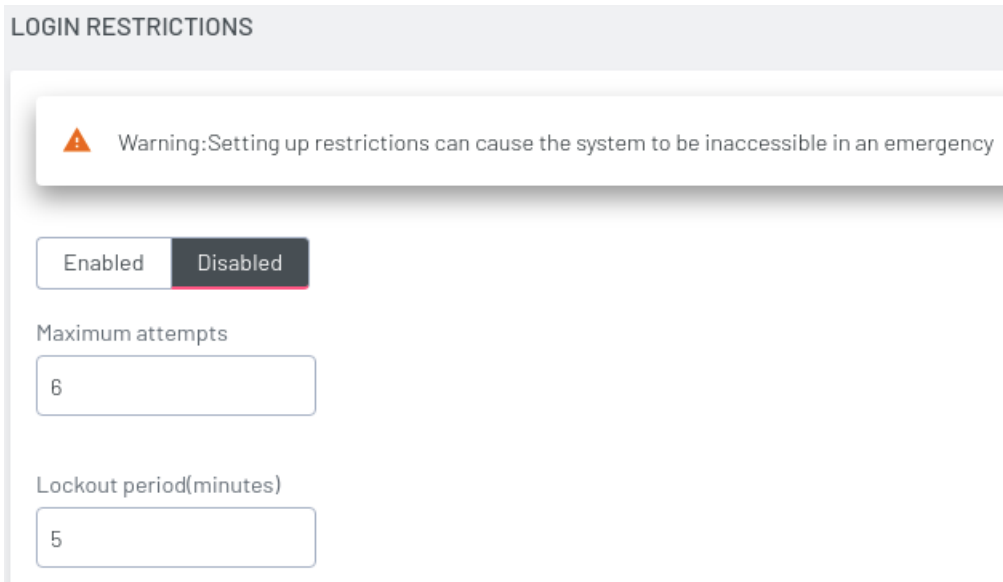

LOGIN RESTRICTIONS

Warning: Setting up restrictions can cause the system to be inaccessible in an emergency

Enabled Disabled

Maximum attempts

6


Lockout period(minutes)

5

2. Enter a value for either or both of the following:
 - **Maximum attempts** – choose a number of attempts a user can enter an incorrect password before being locked out.
 - **Lockout period** – enter a number of minutes until a user can try to login again after reaching maximum incorrect login attempts.

After a user has been locked out, an administrator can unlock the account.

1. Go to **SETTINGS > USER MANAGEMENT > Local Users**.
2. Click the **Unlock** button associated with the locked out user's row in the User table.

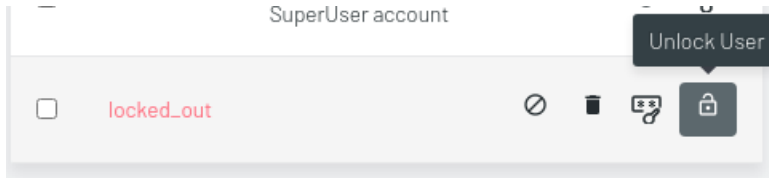

DISABLING A LIGHTHOUSE ROOT USER

To disable a root user:

1. Make sure that another user exists that is in a group that has the **Lighthouse Administrator** role.
2. Select **SETTINGS > USER MANAGEMENT > Local Users**
3. Click **Disable** in the **Actions** section of the root user.
4. Click **Yes** in the **Confirmation** dialog.

To re- enable the root user, login as another user with Lighthouse Administrator role and enable access for root user from Actions section on Users page

An Identity Provider (IdP) stores and manages users' digital identities. An IdP may check user identities via username-password combinations and other factors, or it may simply provide a list of user identities that another service provider (like an SSO) checks. An IdP can authenticate any entity connected to a network or a system, including computers and other devices.

DELETE AND DISABLE USERS

You can delete users and disable root users.

To delete a user:

1. Select **SETTINGS > USER MANAGEMENT > Local Users**
2. Click the **Delete** button in the **Actions** section of the user to be deleted.
3. Click **Yes** in the **Confirmation** dialog.

Disabling a Lighthouse root user

To disable a root user:

Make sure that another user exists that is in a group that has the Lighthouse Administrator role.

1. Select **SETTINGS > USER MANAGEMENT > Local Users**
2. Click **Disable** in the **Actions** section of the root user.
3. Click **Yes** in the **Confirmation** dialog.

To re-enable root user:

1. Log in with an existing user id that is in a group with the Lighthouse Administrator role.
2. Click **Enable** in the **Actions** section of the root user.

An Identity Provider (IdP) stores and manages users' digital identities. An IdP may check user identities via username-password combinations and other factors, or it may simply provide a list of user identities that another service provider (like an SSO) checks. An IdP can authenticate any entity connected to a network or a system, including computers and other devices.

SAML CONFIG FOR SSO

SAML is the framework used to integrate applications with identity providers for single sign-on (SSO). This is mostly (if not completely) reflected when a user logs in and authenticates with their IdP or is already logged in (if they have already authenticated with their identity provider prior to accessing Lighthouse).

Lighthouse supports the independent, concurrent use of both SAML and AAA authentication. SAML authentication is independent of, and does not interact with, other authentication methods.

Note:For release 2024.02 SAML is only supported for authentication to the lighthouse Web GUI.

When SAML is configured and enabled, users can authenticate to the Lighthouse Web GUI either through SAML or another configured authentication mechanism such as Local or AAA. Users can SSH only via the other configured authentication mechanism (Local or AAA) if Remote Authentication is configured.

The default authentication is Local, with Lighthouse using locally defined users and groups. If AAA (TACACS, RADIUS or LDAP) Remote Authentication is configured, this will be used for Web GUI and SSH login authentication to Lighthouse (except for root which is always locally authenticated). Users are authenticated against AAA server(s) with group membership returned to Lighthouse, which is used to determine user roles and permissions. AAA Remote Authentication can support 2FA/MFA, depending on the AAA server capabilities.

Lighthouse's SAML integrates with the following identity providers:

- OKTA
- Azure Active Directory (Azure AD)



- One Login
- Auth0

Note: In the following instructions, any text in braces {} for example, {main lighthouse address} needs to be substituted with the value for your environment.

Common values you will need are:

{main lighthouse address} - The address (without the protocol or path) most users use to connect to your primary lighthouse's web interface. e.g.

lighthouse.example.com or 192.168.1.10

{provider} - Each IdP implements the spec slightly differently lighthouse needs to know which style to expect to handle these differences. If your IdP is not one of our officially supported IdPs, try configuring lighthouse using the `generic` provider option as the most widely applicable. (You could also try using our other explicit IdP options but these often expect provider specific intricacies).

Please also review the ["Limitations of SAML Configuration" on page 366](#).

GENERIC IDP SETUP

This section describes how to integrate Lighthouse with your Generic Identity Provider (IdP) Application.

In case Lighthouse's supported IdPs doesn't include your identity provider, use the Generic IdP setup. This has been made as general as possible to meet expectations of all IdPs in the market today.

Note: You must have your user groups setup in Lighthouse prior creating & assigning them via the IdP. See the example in step 6 of the Okta configuration later in this topic.

Note: The `{provider}` in the steps must exactly match one of our provider strings that is, `generic`, `okta`, `azure_ad`, `onelogin`.

1. Create an application integration for "Lighthouse" in your IdP
2. Set ACS or consumer URL as `https://{main_lighthouse_address}/api/v3.7/sessions/saml/sso/{provider}`
3. Set the **Allowed SSO URLs** or **Allowed redirect URLs** or **ACS URL Validator** to include or match the `/saml/sso/` URL for each address of each of your Lighthouses that you want users to be able to login from.

Example:

```
https://{main_lighthouse_address}/api/v3.7/sessions/saml/sso/  
{provider}  
https://{main_lighthouse_ip_address}/api/v3.7/sessions/saml/sso/
```

```
{provider}  
  
https://{secondary lighthouse address}/api/v3.7/sessions/saml/sso/  
  
{provider}
```

Depending on your IdP you may need to include the `/saml/sp_init/` URLs.

```
https://{main lighthouse address}/api/v3.7/sessions/saml/sso/  
  
{provider}  
  
https://{main lighthouse address}/api/v3.7/sessions/saml/sp_init/  
  
{provider}  
  
https://{main lighthouse ip address}/api/v3.7/sessions/saml/sso/  
  
{provider}  
  
https://{main lighthouse ip address}/api/v3.7/sessions/saml/sp_init/  
  
{provider}  
  
https://{secondary lighthouse address}/api/v3.7/sessions/saml/sso/  
  
{provider}  
  
https://{secondary lighthouse address}/api/v3.7/sessions/saml/sp_  
init/{provider}
```

4. Set the Service Provider EntityID or Audience as `lighthouse-{provider}`
5. If your service provider requires you to configure the Recipient
 - And only allows a single value
 - And you run multiple Lighthouses or access Lighthouse via multiple addresses

Then either:

- Set the recipient as `lighthouse-{provider}` and use the onelogin option as your provider configuration.



- Or if you only access each via a single address you could create a separate application integration per lighthouse.
6. If your IdP has the option then set the initiator to the `Service Provider`
 7. Set your IdP to sign the **Assertion** for SAML

GENERIC IDP SAML ATTRIBUTE

You will also need to configure your IdP to send an additional attribute `LH_Groups` as part of the SAML response.

In most IdPs this is done by adding an Attribute Statement or Parameter configuration in your application integration. This parameter should be set as a multi-value parameter, that is, multiple values should be provided by multiple duplicative either Attribute Value tags or Attribute tags in the SAML assertion.

We recommend setting the value of this attribute to be populated with the names of the user's Roles (or Groups) in your IdP. This method allows you to create roles in your IdP with the same names as the user groups on your lighthouse that can be assigned in your IdP to grant users that level of access to lighthouse.

Alternatively, you can populate the `LH_Groups` attribute with the names of the lighthouse user groups the user should be granted by any other mechanism that your IdP provides, that is, custom user properties

Note: Your IdP can populate the `LH_Groups` attribute to place users in any Lighthouse user group except Lighthouse's default admin group. You can allow users to login with admin privileges by simply creating another user group in lighthouse with the admin role and assigning the matching role/group in your IdP to the user (that is, populate `LH_Groups` to include its value).

LIGHTHOUSE SETUP

You will need to export an IdP metadata `xml` file for your Lighthouse application integration from your IdP. If your IdP requires that requests be signed by the Service Provider then you will also need to provide an x509 certificate & private key in `.pem` format (either exported from your IdP or created locally then configured in your IdP).

1. Upload your IdP metadata XML (and if required certificate & private key) to your primary Lighthouse i.e. `scp`
2. Use the `saml-idp-metadata` command to configure each lighthouse individually. Each Lighthouse is configured individually with the same or a different metadata xml (and certificate + key).

Note: Each of the commands to configure each Lighthouse individually, must be run from your primary Lighthouse.

```
# Example: Configuring a Multi-Instance Lighthouse for Okta IdP
# List initial lighthouse configurations (i.e. none)
saml-idp-metadata list

# Configure Primary lighthouse
saml-idp-metadata create \
--metadata metadata.xml \
--provider okta \
--lh-id 1

#Configure Secondary lighthouse
saml-idp-metadata create \
--metadata metadata.xml \
--provider okta \
```



```
--lh-id 2  
  
# List lighthouse configurations (i.e. both lighthouses configured)  
saml-idp-metadata list
```

Specific examples of IdP setups are available, The following are examples of how you could configure officially supported IdPs. They are based on the above generic step and the IdP's configuration options as of 10/2021.

EXAMPLES OF SPECIFIC IDP SETUPS

The following are examples of how you could configure officially supported IdPs. They are based on the above generic step and the IdP's configuration options as of 10/2021.

OKTA

CREATE AN APPLICATION

You need to create an application that Okta will be doing authentication on behalf of.

Note: You must know the addresses of your Lighthouses before you create the application.

1. In the Okta web console go to **Applications > Applications**
 - a. Click **Create App Integration**
 - b. Select **SAML 2.0**
2. Give the application a name: for example, Lighthouse and click **Next**
3. For the **Single sign on URL** enter
`https://{main lighthouse
address}/api/v3.7/sessions/saml/sso/okta`
 - a. Select:
 - i. Use this for Recipient URL and Destination URL

- b. Fill out the **Other Requestable SSO URLs** with the SSO URLs for every lighthouse address you want to be able to sign in with. i.e. IP addresses and DNS address for both your primary and secondary lighthouses.

Example:

```
https://{main lighthouse ip}/api/v3.7/sessions/saml/sso/okta
https://{dependent lighthouse
address}/api/v3.7/sessions/saml/sso/okta
https://{dependent lighthouse
ip}/api/v3.7/sessions/saml/sso/okta
```

4. For the **Audience URI (SP Entity ID)** enter `lighthouse-okta`
5. Set **Name ID format** to email.
6. Set to email.
7. There are many ways you could configure Okta to populate the `LH_Groups` attribute, our recommended way is to populate it from and manage it via the user's Okta groups:
 - a. Add a Group Attribute Statement
 - i. **Name:** `LH_Groups`
 - ii. **Name Format:** `Basic`
 - iii. **Filter:** `Matches Regex .*`
8. Click **Next** and finish.

IdP Metadata

1. Open your Onelogin application.

2. Go to More Actions > SAML Metadata. This is the metadata xml file that you will need to configure lighthouse.

Configure Lighthouse

1. Copy the Identity Provider metadata XML to your primary lighthouse.
2. Using `saml-idp-metadata` on your primary lighthouse, configure each of your lighthouses to use your IdP

For example:

```
saml-idp-metadata -p {root password} create -m /path/to/okta_
metadata.xml -P okta -n "My Okta display name" -l {LH id number}
```

Groups setup

After this initial setup, you will be able to login as a SAML user.

If you do not already have your own **User groups** setup in lighthouse:

1. Login to Lighthouse as a local user (or any non-SAML user) i.e. root
2. Create the User groups with the Roles and permission that you desire. See ["Creating new user and group templates" on page 261](#).
3. In Okta go to **Directory > Groups**.
4. Click **Add Group**.
5. Enter the Group name that matches a Group name on lighthouse.
6. Open your new group.
7. Go to **Manage Apps**.
8. Search for your lighthouse app and click **Assign**.
9. Click **Done**.

10. Go to **Manage People**
11. Search for and click on the users you wish to add to the group.

The assigned users are now able to login to lighthouse with the permission levels which that group grants them.

ONELOGIN

Create an Application

You need to create an application for which Okta will handle the authentication process.

1. Go to **Applications > Add App > Search for and choose SAML Custom Connector (Advanced)**
2. Name your connector, that is, Lighthouse.
3. In the Configuration tab for your new app
 - a. Set Audience (EntityID) to `lighthouse-onelogin`
 - b. Set Recipient to `lighthouse-onelogin`
 - c. Set ACS (Consumer) URL to: `https://{main lighthouse address}/api/v3.7/sessions/saml/sso/onelogin`
 - d. Set **ACS (Consumer) URL Validator** to a regex expression that matches only all your lighthouses' SSO addresses (IP & DNS for Primary & Secondary lighthouses).
 - i. Ensure it begins with `^` and ends with `$` to match the whole URL.
 - ii. Recommended pattern:
`^https:\\\\ {lighthouse addresses}
\\api\\v3\\.7\\sessions\\saml\\sso\\onelogin$`

iii. For example to allow Onelogin login for lighthouse addresses

192.168.1.10 and lighthouse.example.com , you could use the following: (note the additional () around your hostnames and the | separating them.

```
^https:\\\\/  
(192\\.168\\.1\\.10|lighthouse\\.example\\.com)\\/api\\/v3\\.7\\/sessions\\/saml\\/sso\\/onelogin$
```

e. Set **Login URL** to

```
https://{main lighthouse  
address}/api/v3.7/sessions/saml/sp_init/onelogin
```

f. Set **SAML initiator** to Service Provider

g. Set **SAML signature element** to Assertion

4. The recommended method to populate LH_Groups is with Onelogin Roles.

a. Go to **Parameters** then click Add.

b. Set **Field Name** to LH_Groups

c. Check Include in SAML assertion

d. Check Multi-value parameter

e. Click **Save**.

f. Set Default value to User Roles

g. If you intend on filtering the Roles that are sent to lighthouse (using a Rule) set no transform otherwise set semicolon delimited.

- An example Rule to filter roles:

- “Set LH_Groups in”

- `for each role`
 - with a value that matches `LH_.*`
- h. Save the parameter.
5. Save the connector.

IdP Metadata

1. Open your Onelogin application.
2. Go to **More Actions > SAML Metadata**. This is the metadata xml file that you will need to configure lighthouse.

Configure Lighthouse

1. Copy the metadata xml to your primary lighthouse.
2. Using `saml-idp-metadata` on your primary lighthouse, configure each of your lighthouses to use your IdP., For example

```
saml-idp-metadata -p {root password} create -m  
/path/to/metadata.xml -P onelogin -n "My Onelogin display  
name" -l {LH id number}
```

Roles Setup

After this initial setup, you will be able to login as a SAML user.

If you do not already have your own **Usergroups** setup in lighthouse:

1. Login to Lighthouse as a local user (or any non-SAML user) for example, root.
2. Create the Usergroups with the Roles and permission that you desire. See ["Creating New Groups and Roles" on page 315](#).
3. In Onelogin Go to **Users > Roles**
4. Click **New Role**.

- a. Set the Role's name to match the lighthouse group you want it to map to.
 - b. Select your Lighthouse app to associate the role with.
 - c. Click Save.
5. Open the newly created role.
 6. Go to the **Users** tab on the left.
 7. Search for and add your users or create a mapping to automatically add multiple users.
 8. Click **Save**.
 - a. If you used a mapping then go to **Users > Mappings and run Reapply All Mappings**.
 9. Click **Done**

The assigned users are now able to login to lighthouse with the permission levels that the Onelogin Role/Lighthouse group grants them.

AZURE ACTIVE DIRECTORY

Lighthouse can be added as an **Enterprise application** to Azure Active Directory. This example uses "App roles" to grant users permissions.

To create an Application (Enterprise applications)

1. Go to **Azure Active Directory**.
2. Go to **Enterprise applications**.
3. Click **New Application**.
4. Click **Create your own application**.
5. Select **Integrate any other application you don't find in the gallery (Non-gallery)**.

6. Name your Application, for example, Lighthouse, then click **Create**.
7. Click **Properties**
 - a. Set Assignment required to Yes.
 - b. Set Enabled for users to sign-in to Yes.
 - c. Click Save.
8. Go to **Single sign-on**
 - a. Select SAML
 - b. Edit Basic Configuration
 - i. Add an Entity Id `lighthouse-azure_ad` and set it as default.
 - ii. In Reply URL (Assertion Consumer Service URL) add the SSO URL for each address of each lighthouse that you want to be able to sign in on, that is, IP addresses and DNS address for both your primary and secondary lighthouses.

```
https://{primary lighthouse  
address}/api/v3.7/sessions/saml/sso/azure_ad https://  
{primary lighthouse IP  
address}/api/v3.7/sessions/saml/sso/azure_ad https://  
{secondary lighthouse  
address}/api/v3.7/sessions/saml/sso/azure_ad https://  
{secondary lighthouse IP  
address}/api/v3.7/sessions/saml/sso/azure_ad
```
 - iii. Set **Sign on URL** to `https://{main lighthouse
address}/api/v3.7/sessions/saml/sp_init/azure_ad`
 - iv. Click **Save**.
 - c. Edit Attributes & Claims

- i. Remove the default claims from **Additional claims**.
- ii. Click **Add new claim** and Enter:
 - Name: `LH_Groups`
 - Source Attributes: `user.assignedroles`

IdP Metadata

1. Go to the **Azure Active Directory**.
2. Go to **Enterprise applications** and open your application.
3. Go to **Single sign-on**.
4. Navigate to **3. SAML Signing Certificate** and find and download `Federation Metadata XML`.

Configure Lighthouse

1. Copy the Federation metadata XML to your primary lighthouse.
2. Using `saml-idp-metadata` on your primary lighthouse, configure each of your lighthouses to use your IdP as follows:

For example, `saml-idp-metadata -p {root password} create -m /path/to/metadata.xml -P azure_ad -n "My Azure display name" -l {LH id number}`

App Roles Setup

After this initial setup, you will be able to login as a SAML user. If you do not already have your own Usergroups setup in Lighthouse, you can set them up as follows:

1. Login to Lighthouse as a local user (or any non-SAML user) i.e. root
2. Create the Usergroups with the Roles and permission required. See ["Creating New Groups and Roles" on page 315](#).

See **Add app roles and get them from a token - Microsoft identity platform** for up to date documentation on how to create and assign App Roles.



1. Go to **Azure Active Directory**.
2. Go to **App registrations**.
3. Open your app (Use the **All Applications** tab to see Enterprise apps).
4. Go to **App Roles**.
5. Click **Create App Role**.
 - a. Set the **value** to match your usergroup on Lighthouse.
 - b. Set **Allowed member types** to **Both** (Users/Groups + Applications).
 - c. Set the other fields as required.
6. Go to **Azure Active Directory**.
7. Go to **Enterprise applications**.
8. Open your App, that is, Lighthouse.
9. Go to **Users and groups**.
10. Click **Add user/group**.
11. Select a user and one of your App roles then click **Assign**.

The assigned users are now able to login to lighthouse with the permission levels which that App Role/Lighthouse group grants them.

CONFIGURE AUTH0 FOR IDP

Lighthouse can be added as an **Enterprise application** to AUTH0. This example uses “App roles” to grant users permissions.

CREATE AN APPLICATION (ENTERPRISE APPLICATIONS)

1. Go to **Auth0**.
2. Go to **Applications > Application**.
3. Click **Create application**.
 - a. Select **Regular Web Application**.
 - b. Name the application, for example, Lighthouse.
4. Go to **Settings** tab.
 - a. Select **SAML**.
 - b. Set Application Login URI to

```
https://{main lighthouse address}/api/v3.7/sessions/saml/sp_
init/auth0
```

- c. In **Allowed Callback URLs** add each address for each lighthouse that you wish to allow users to sign-in via. (that is, IP, hostname, dns for both primary and dependent).

```
https://{primary lighthouse
address}/api/v3.7/sessions/saml/sso/auth0
https://{primary lighthouse IP
address}/api/v3.7/sessions/saml/sso/auth0
https://{secondary lighthouse
```

```
address}/api/v3.7/sessions/saml/sso/auth0  
  
https://{secondary lighthouse IP  
address}/api/v3.7/sessions/saml/sso/auth0
```

- d. Click **Save**.
5. Go to the **Addons** tab:
 - a. Click **SAML2**.
 - b. Go to the **SAML settings** tab.
 - c. Set the Settings json to

```
{  
  "audience": "lighthouse-auth0",  
  "mappings": {  
    "roles": "LH_Groups"  
  },  
  "passthroughClaimsWithNoMapping": true,  
  "mapUnknownClaimsAsIs": true,  
  "nameIdentifierFormat": "urn:oasis:names:tc:SAML:1.1:nameid-format:emailAddress",  
  "nameIdentifierProbes": [  
    "http://schemas.xmlsoap.org/ws/2005/05/identity/claims/emailaddresses"  
  ]  
}
```

- d. Click either **Enable** or **Save**.
6. Go to **Auth Pipeline**.
7. Go to **Rules**.

8. Click **Create**.

- a. Select empty rule template.
- b. Name it appropriately, for example, Map roles to SAML user property.
- c. Set the script to

```
function mapSamlAttributes(user, context, callback) {  
  user.roles = (context.authorization || {}).roles;  
  callback(null, user, context);  
}
```

9. Click **Save**.

CONFIGURE AUTH0 METADATA FOR IDP

To setup the IDP metadata:

1. Go to **Auth0**.
2. Go to **Application > Applications**.
3. Open your Lighthouse application.
4. Go to **Addons**.
5. Go to **SAML**.
6. Go to **Usage**.
7. Click the **Identity Provider Metadata** download.

A file named `metadata.xml` downloads to your preferred directory

CONFIGURE LIGHTHOUSES FOR AUTH0 FOR IDP

In this step you will use the downloaded file to configure each of your lighthouses to use your Auth0 IdP.

1. Copy the downloaded metadata.XML file to your primary lighthouse. See ["Configure AUTH0 Metadata for IdP" on the previous page.](#)
2. Use the `saml-idp-metadata` file on your primary lighthouse, configure each of your lighthouses to use your IdP with this command:

```
saml-idp-metadata -p {root password} create -m  
/path/to/metadata.xml -P auth0 -n "My Auth0 display name" -  
l {LH id number}
```

See ["SAML Config for SSO" on page 342](#)

CONFIGURE AUTH0 FOR IDP

After you have added Lighthouse as an **Enterprise application** to AUTH0, you need to use the App roles feature to grant users permissions to use IdP.

After this initial setup, you will be able to login as a SAML user.

1. If you do not already have your own Usergroups setup in Lighthouse:
 - a. Login to Lighthouse as a local user (or any non-SAML user) for example, root.
 - b. Create the Usergroups with the required Roles and permission.
2. Go to **Auth0**.
3. Go to **User Management**.
4. Go to **Roles**.
5. Click **Create Role**.
6. Enter the Role name that matches a Lighthouse group name.
7. Open your Role.
8. Go to the **Users** tab.
9. Click **Add Users**.
 - a. Assign the role to the appropriate users.
10. The assigned users are now able to login to Lighthouse with the permission levels granted by the Auth0 Role/Lighthouse group.

LIMITATIONS OF SAML CONFIGURATION

IDP METADATA CERTIFICATE EXPIRY

The Identity Provider (IdP) metadata XML file that you exported to configure Lighthouse contains a certificate that is used to authenticate that the SAML response came from your IdP.

Different IdPs have different expiry periods for these certificates, consult your IdP's documentation to find their expiry period. When your IdP's certificate expires you will need to regenerate it then re-export your IdP metadata and update your Lighthouse configurations. If your IdP supports sending expiry notifications to your admin, we recommend you enable these notifications.

MAKING CHANGES TO USER PERMISSIONS

When you change the permissions assigned to a Lighthouse user in your IdP (via **LH_Groups** SAML attribute), the changes will not take effect until the user logs out and back into Lighthouse.

If you need to quickly restrict a user's access, consider altering the permissions of or deleting that user's usergroups on Lighthouse, see ["Modifying existing groups" on page 320](#). You can also set a low Web Session Timeout. See Examine or modify Lighthouse Session Settings.

SAML SSO USERGROUPS

The **LH_Groups** attribute can be used to place SSO users in any Lighthouse usergroup except Lighthouse's default admin group. You can allow users to login with admin privileges by simply creating another usergroup in Lighthouse with the



admin role and assigning the matching role/group in your IdP to the user (i.e. populate **LH_Groups** to include its value).

SAML SSO USERS

SAML Users can only be managed in your IdP and will not appear under Lighthouse User Management.

Note: SAML users have no access to either Web terminal or SSH functionality via the Lighthouse web interface.

CONFIGURING AAA

Lighthouse supports three Authentication Authorization and Accounting (AAA) systems:

- LDAP (Active Directory and OpenLDAP)
- RADIUS
- TACACS+

Authentication works much the same with each, but group membership retrieval varies. The following sections detail the configuration settings for each provider and explain how group membership retrieval works.

LDAP CONFIGURATION

To begin, select **SETTINGS > USER MANAGEMENT > Remote Authentication**.

REMOTE AUTHENTICATION

SETTINGS

Scheme: **LDAP**

Mode: **LDAPDownLocal**

Remote authentication servers

ADDRESS	PORT (DEFAULTS TO LDAP/LDAPS STANDARD PORTS)
<input type="text"/>	<input type="text"/> - <input type="text"/>

LDAP base DN ⓘ

LDAP bind DN ⓘ

Bind DN password

Confirm password

LDAP username attribute ⓘ

LDAP group membership attribute ⓘ

☐ Ignore referrals ⓘ

SSL

Server protocol ⓘ **LDAP over SSL preferred**

☐ Ignore SSL certificate errors ⓘ

CA certificate ⓘ
 No file selected.

1. Select **LDAP** from the **Scheme** drop-down menu.
2. Choose the desired **Mode** from the drop-down menu.
 - LDAPDownLocal
 - LDAP: Default behavior

- LDAP/Local
- Local/LDAP

Note: See the Glossary for more information about these modes.

3. Add the **Address** and optionally the **Port** of the LDAP server to query.
4. Add the **LDAP Base DN** that corresponds to the LDAP system being queried.
For example, if a user's distinguished name is **cn=John Doe, dc=Users, dc=ACME, dc=com**, the **LDAP Base DN** is **dc=ACME, dc=com**
5. Add the **LDAP Bind DN**. This is the distinguished name of a user with privileges on the LDAP system to perform the lookups required for retrieving the username of the users, and a list of the groups they are members of.
6. Add and confirm a password for the binding user.
7. Add the **LDAP username** attribute. This depends on the underlying LDAP system. Use **sAMAccountName** for Active Directory systems, and **uid** for OpenLDAP based systems.
8. Add the **LDAP group membership** attribute. This is only needed for Active Directory and is generally **memberOf**.
9. If desired, check **Ignore referrals** option. When checked, LDAP will not follow referrals to other remote authentication servers when logging users in to Lighthouse. If multiple remote authentication servers exist on the network, checking this option may improve login times.
10. Under the **SSL** section, choose the desired **Server protocol**.
 - a. **LDAP over SSL preferred**: this will attempt LDAPS before trying LDAP without SSL

- b. **LDAP (no SSL) only**: non-SSL LDAP is always used
 - c. **LDAP over SSL only**: LDAP over SSL is always used
11. If desired, check **Ignore SSL certificate** errors to ignore any SSL certificate errors.
 12. **CA Certificate** is used to upload an SSL Certificate which will verify any LDAP servers you specify on the page.

Note: The certificate will be uploaded but will not be used if you've chosen to ignore certificate errors.


13. Install the **CA certificate** by clicking the **Browse...** button and locating the appropriate file.
14. Click **Apply**.

Note: Multiple servers can be added. The LDAP subsystem queries them in a round-robin fashion.

RADIUS CONFIGURATION

To configure RADIUS:

1. Select **SETTINGS > USER MANAGEMENT > Remote Authentication**.

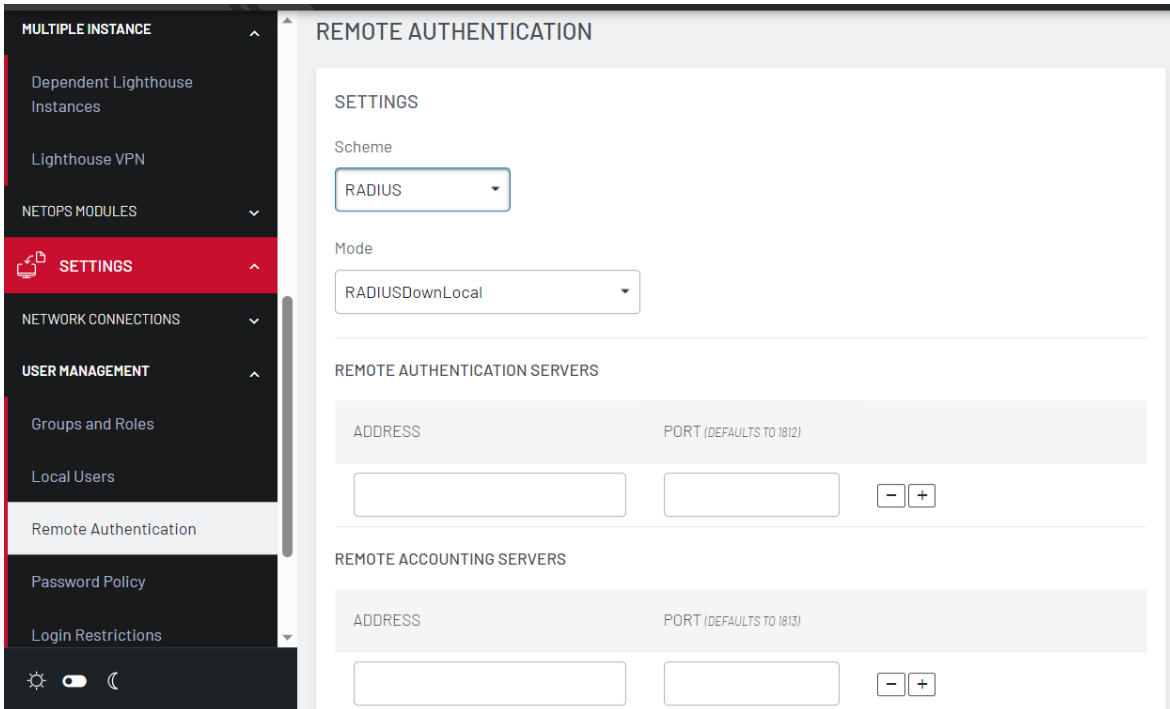

REMOTE AUTHENTICATION

SETTINGS

Scheme
RADIUS

Mode
RADIUSDownLocal

REMOTE AUTHENTICATION SERVERS

ADDRESS	PORT (DEFAULTS TO 1812)
<input type="text"/>	<input type="text"/> <input type="button" value="-"/> <input type="button" value="+"/>

REMOTE ACCOUNTING SERVERS

ADDRESS	PORT (DEFAULTS TO 1813)
<input type="text"/>	<input type="text"/> <input type="button" value="-"/> <input type="button" value="+"/>

1. In the **Settings** section, select **RADIUS** from the **Scheme** drop-down menu.
2. Choose the desired **Mode** from the drop-down menu.
 - RADIUSDownLocal
 - Radius
 - RADIUS/Local
 - Local/RADIUS

Note: See the Glossary for more information about these modes.

3. Add the **Address** and optionally the **Port** of the RADIUS authentication server to query.
4. Add the **Address** and optionally the **Port** of the RADIUS accounting server to send accounting information to.
5. Add the **Server password**, also known as the RADIUS Secret.

Note: Multiple servers can be added. The RADIUS subsystem queries them in a round-robin fashion.

To provide group membership, RADIUS needs to be configured to provide a list of group names via the Framed-Filter-Id attribute. The following configuration snippet shows how this can be configured for FreeRADIUS:


```
operator1 Auth-Type := System Framed-Filter-ID = ":group_  
name=west_coast_admin,east_coast_user:"
```

Note: The **Framed-Filter-ID** attribute must be delimited by the colon character.

TACACS+ CONFIGURATION

To configure TACACS+:

1. Select **SETTINGS > USER MANAGEMENT > Remote Authentication**.

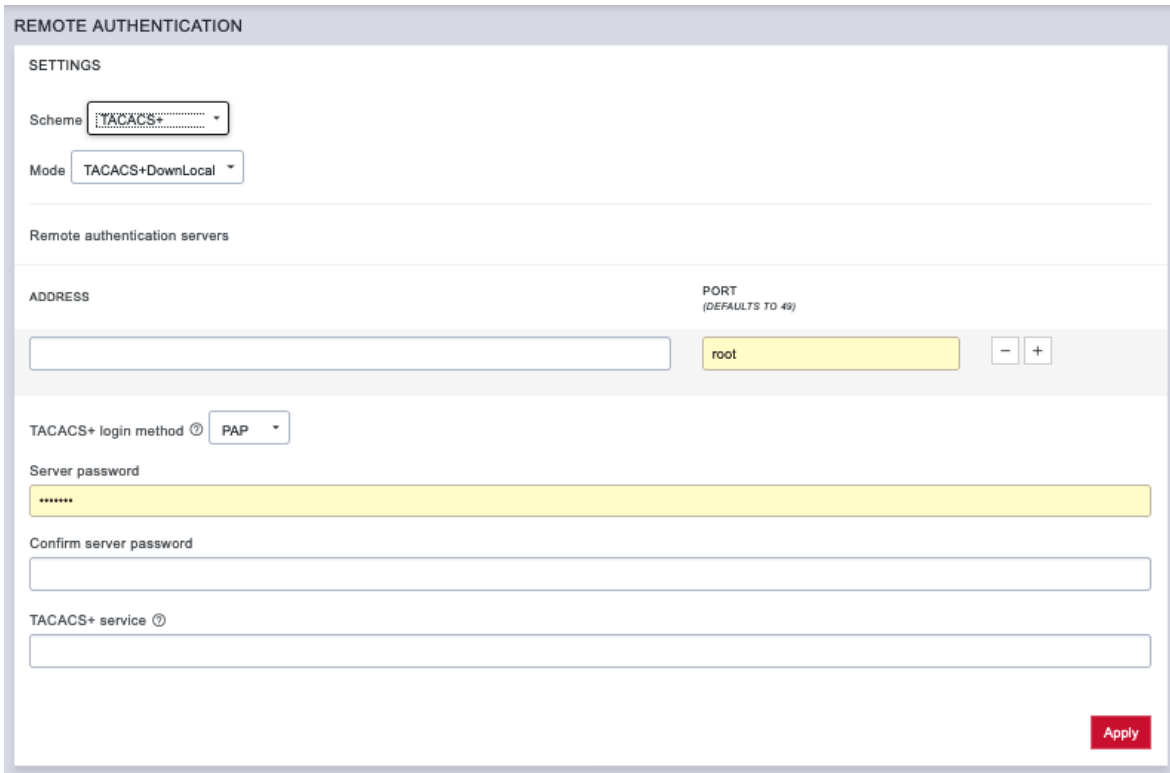

REMOTE AUTHENTICATION

SETTINGS

Scheme **TACACS+**

Mode **TACACS+DownLocal**

Remote authentication servers

ADDRESS	PORT (DEFAULTS TO 49)
	root

TACACS+ login method **PAP**

Server password

Confirm server password

TACACS+ service

Apply

2. Select **TACACS+** from the **Scheme** drop-down menu.
3. Choose the required **Mode** from the drop-down menu.
 - TACACSDownLocal:
 - TACACS: Default behavior
 - TACACS/Local
 - Local/TACACS

Note: See the Glossary for more information about these modes.

4. Add the **Address** and optionally the **Port** of the TACACS+ authentication server to query.
5. Select the **Login Method**. **PAP** is the default method. However, if the server uses DES-encrypted passwords, select **Login**.
6. Add the **Server password**, also known as the TACACS+ Secret.
7. Add the **Service**. This determines the set of attributes sent back by the TACACS+ server

Note: Multiple servers can be added. The TACACS+ subsystem queries them in a round-robin fashion.

To provide group membership, TACACS+ needs to be configured to provide a list of group names This following configuration snippet shows how this can be configured for a `tac_plus` server:

```
user = operator1 {  
  service = raccess {  
    groupname = west_coast_admin, east_cost_user  
  }  
}
```


To do this with Cisco ACS, see [Setting up permissions with Cisco ACS 5 and TACACS+ on the Opendgear Help Desk](#).

SETTING PASSWORD POLICY

An Identity Provider (IdP) stores and manages users' digital identities. An IdP may check user identities via username-password combinations and other factors, or it may simply provide a list of user identities that another service provider (like an SSO) checks. An IdP can authenticate any entity connected to a network or a system, including computers and other devices. Lighthouse Administrators can set Password Policies to ensure that users set secure passwords.

To set a password policy:

1. Select **SETTINGS > USER MANAGEMENT > Login Restrictions**,
2. Choose **Enabled**, and
3. Click **Save**. Click **Password Policy**.

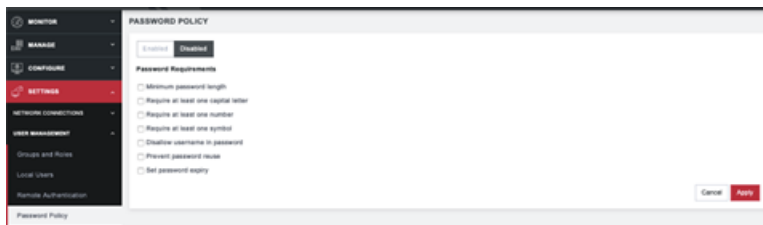

Choose one or more options from the following:

- Minimum password length – from 1 to 128
- Require at least one capital letter
- Require at least one number
- Require at least one symbol
- Disallow username in password
- Prevent password reuse – choose a number of days or select Always



- Set password expiry – select a number of days until passwords expire. At next login, the user will need to reset the password.



PASSWORD FIELDS IN LIGHTHOUSE

All password fields in Lighthouse are write-only. They accept data from the clipboard or pasteboard but do not pass data out.

ENABLING ADVANCED FUNCTIONALITY

This section describes how to use the advanced functionality that the Netops modules of IP Access, Secure Provisioning and Automation Gateway modules provide.

The Smart Management Fabric (SMF) feature can be used with the following NetOps features with some caveats:

- IP Access.
- Secure Provisioning.

See ["Smart Management Fabric and NetOps Interactions"](#) on page 122

INTRODUCTION

NetOps modules leverage Opendgear's remote presence and proximity to infrastructure by allowing software applications to run directly on top of the out-of-band management fabric. The NetOps modules enable automation of the configuration and operation of network infrastructure in data center and remote edge locations.

The platform comprises the following:

- **Opendgear Lighthouse** software: The central management interface and automation controller.
- **Managed Devices:** Target infrastructure, for example, network switches from Cisco or Cumulus.
- **Opendgear Nodes:** OM, CM, ACM and IM appliances, connected to managed device management NICs via Ethernet (and optionally managed device consoles via RS-232 or USB serial).
- **NetOps Modules:** Software components that enable automation of specific operational scenarios (for example, network device provisioning), deployed as Docker containers – modules become active on Lighthouse when a module license is installed, they can then be manually or automatically activated on nodes.

ABOUT NETOPS

NetOps modules require a Lighthouse with appropriate licensing and modules to be uploaded and active. You will also need at least one node enrolled and able to use these modules.

Lighthouse Enterprise contains the IP Access module, whereas, Lighthouse Enterprise: Automation Edition contains IP Access, Secure Provisioning and Automation Gateway.

The NetOps modules are built as Docker containers and accessed through the Lighthouse GUI.

NETOPS PLATFORM SECURITY

The NetOps Automation platform uses a combination of advanced hardware and software security features to provide end-to-end security and resilience against network breach, fault or failure.

All communications between Lighthouse and nodes are tunnelled inside Lighthouse VPN, using strong ciphers and automated certificate authentication and revocation.

Nodes such as the OM and CM8100 contain a TPM chip, which verifies the authenticity of the OM system software, its configuration, and NetOps Module code and data – any unauthorized tampering will render the appliance inoperable. These nodes are physically hardened to resist tampering – attempts to physically to access storage media will render the appliance inoperable

With a built-in cellular capability nodes with the TPM chip provide a secure WAN uplink in the event of network outage, DOS, or during initial network turn-up at a remote location.

CHANGING DOCKER IP RANGES

Docker powers the NetOps platform within Lighthouse. By default, Docker and NetOps utilize the 172.17.0.0/16 and 172.18.0.0/16 subnets. This has the potential to cause collisions inside of some networks.

To avoid this, you can change these settings.

To update Docker's subnet, you need to alter 2 parameters, Docker's default subnet and the NetOps modules subnet. To do so:

Login to the Lighthouse shell CLI as a Lighthouse Administrator or the root user

Ascertain the number of running containers to ensure you select an appropriate subnet size

```
sudo docker ps -q | wc -l
```

Open a config CLI session on the Lighthouse Server and run the following to enter configuration management

```
ogconfig-cli
```

Set the IP Range of the Docker subnet in CIDR format

```
set services.nom.default_subnet "10.123.17.1/24"
```

Set the IP Range of the NetOps subnet in CIDR format

```
set services.nom.netops_subnet "10.123.18.0/24"
```

Push the config to become the running config

```
push
```

Exit the configuration management

```
exit
```

Restart Docker

```
sudo /etc/init.d/docker.init restart
```

Restart the NetOps Module(s)

```
sudo /etc/init.d/docker.init reset
```

Note: The network mask selected for these subnets limits the maximum number of containers that can run on Lighthouse. NetOps currently runs up to approximately 10 containers.

NETOPS MODULE MANAGEMENT

The NetOps modules, IP Access and Secure Provisioning, Automation Gateway, are stored in a private repository. Periodically, module updates and new modules may become available.

Note: You can upgrade NetOps Modules without upgrading Lighthouse software.

UPGRADE MODULES FROM THE UI

1. Launch an HTTPS browser session to Lighthouse Login using root and the secure password set earlier.
2. You may also log in as a Lighthouse Administrator user, if you have configured one.
3. From the menu, select **SETTINGS -> Services -> NetOps Modules**.
4. Click the **Synchronize** widget.
5. From the menu, select **CONFIGURE -> NetOps Modules -> Manage Modules**.
6. Click the **Redeploy** icon.

UPGRADE MODULES FROM THE CLI

Log in to the Lighthouse CLI as root.

Or

Log in as a Lighthouse Administrator and become root with: `sudo -i`

Replace default with your root password and run:

PROCEDURE for Lighthouse CLI



Replace **root** and **default** with a Lighthouse Administrator or root credentials, then run the following:


```
USERNAME=root
PASSWORD=default
/etc/scripts/netops_sync_handler
token=$(curl -k -L -d '{
  "username":"'$USERNAME'",
  "password":"'$PASSWORD'"
}'
  "https://127.0.0.1/api/v3.0/sessions/" | python -c 'import sys, json;
  print json.load(sys.stdin)["session"]')
curl -k -L -H "Content-Type: application/json" -H "Authorization:
  Token $token"
  "https://127.0.0.1/api/v3.0/netops/modules/dop/redeploy"
```

UPDATE NETOPS MODULES WITHOUT DOCKER ACCESS

If Lighthouse is deployed on a network where outbound access to the Docker Hub repository is not permitted or not available, use the NetOps offline installer script. This script has a built-in payload with everything required to update NetOps Modules on Lighthouse.

USE A PRE-BUILT OFFLINE INSTALLER (VIA GUI)

1. Download the offline installer file (*named `netops_modules_*.tar.gz`*) from this link:
[offline installer file](#)
2. Browse to **Settings > Services > NetOps Modules** and click **Offline**.

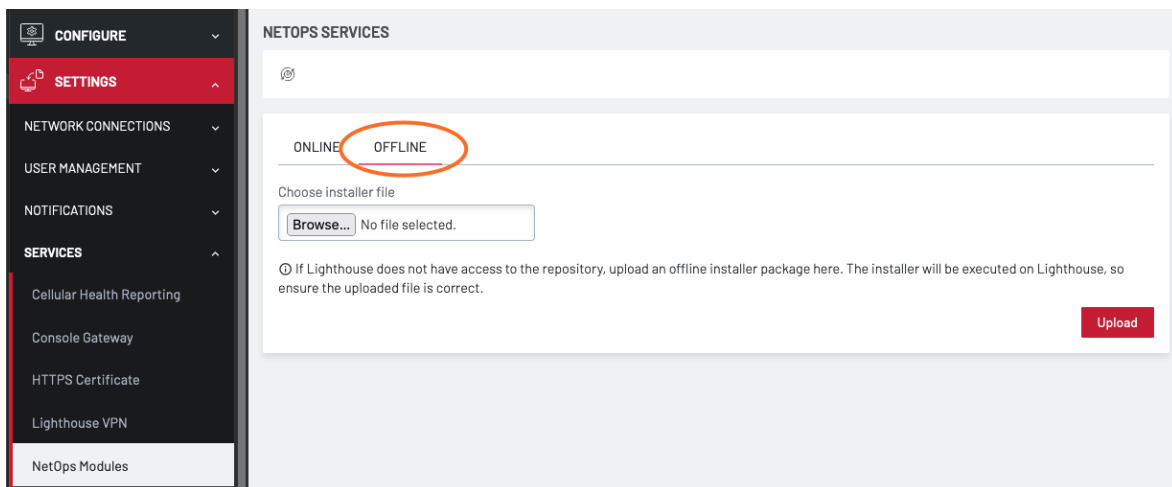

3. Click **Browse** and select the downloaded file.
4. Click **Upload**.

Note: This process can take up to 15 minutes. There are notifications detailing the process steps in the lower right hand corner as well as log entries in the system log.



USE A PRE-BUILT OFFLINE INSTALLER (VIA CLI)

1. Download the offline installer file (*named netops_modules_*.tar.gz*) from this link: [offline installer file](#).
2. Copy the offline installer to Lighthouse using scp, WinScp or similar, into the **/mnt/nvram** directory.
3. Log in to Lighthouse shell CLI as a Lighthouse Administrator and run:

```
gzip -d </mnt/nvram/netops_modules_*.tar.gz | nom update && rm  
/mnt/nvram/netops_modules_*.tar.gz
```

4. Deploy the upgrade to nodes:
 - a. Log in to the Lighthouse web UI as a Lighthouse Administrator or the root user
 - b. From the menu, select **CONFIGURE NODES > NetOps Modules > Manage Modules**.
 - c. In the **Status** column, confirm the module versions now match the latest release versions.
 - d. Click the **Redeploy** icon.

Note:Note: Using the offline install requires 8GB of free space in the **/mnt/data** partition.

UPGRADE NETOPS MODULES


NetOps Modules are released independently of Lighthouse software or Operations Manager firmware.

NetOps releases are uploaded to Opengear's file server, where they can be fetched by Lighthouse then deployed to all activated nodes by Lighthouse.


Node upgrades may be carried out through either the Lighthouse UI or the CLI.

PROCEDURE for Lighthouse UI

1. Log in to the Lighthouse web UI as a Lighthouse Administrator or the root user.
2. From the menu, select **SETTINGS > Services > NetOps Modules**. Select either Online or Offline.

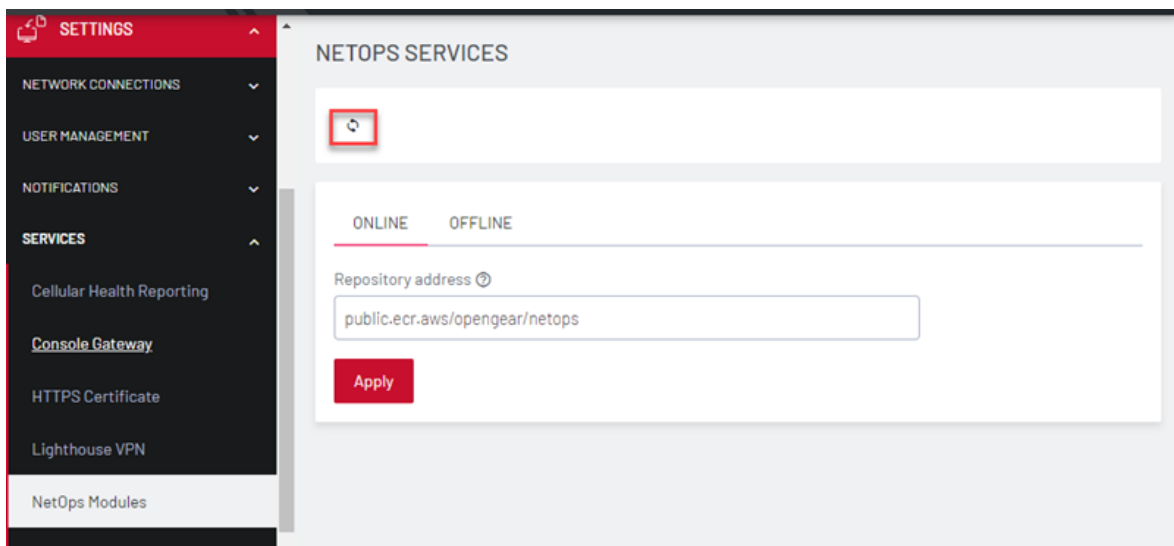

- Click the  **Synchronize** icon. A message displays with the status.

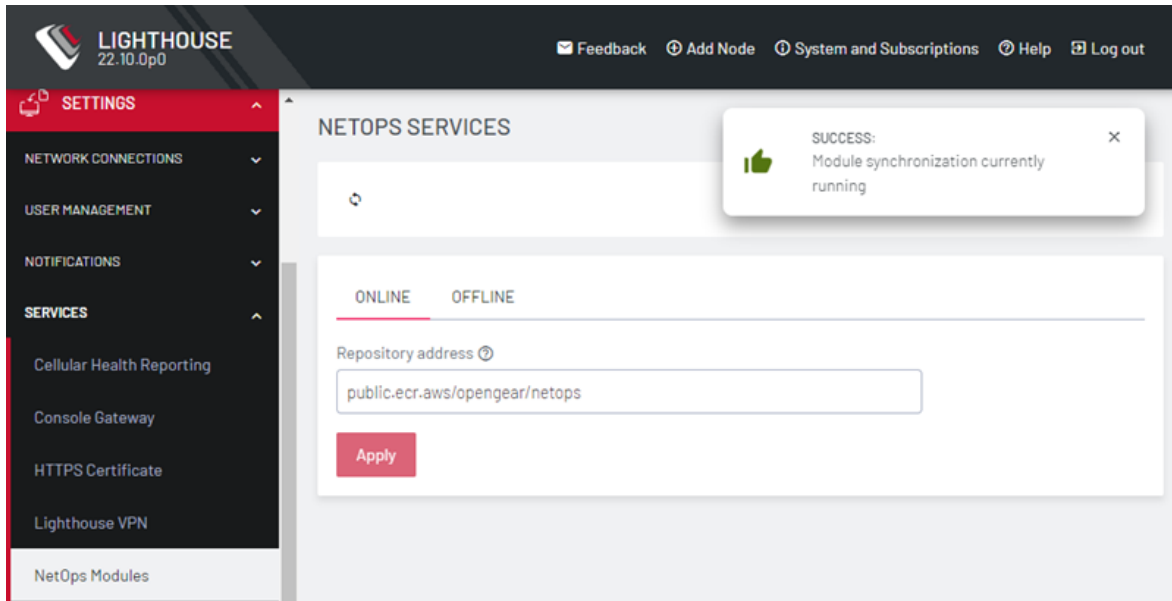

- From the menu, select **CONFIGURE NODES > NetOps Modules > Manage Modules**.
- Click the **Redeploy** icon.

PROCEDURE for Lighthouse CLI

Replace **root** and **default** with a Lighthouse Administrator or root credentials, then run the following:

```
USERNAME=root
PASSWORD=default
/etc/scripts/netops_sync_handler
token=$(curl -k -L -d '{
  "username":"'$USERNAME'",
  "password":"'$PASSWORD'"
}'
  "https://127.0.0.1/api/v3.0/sessions/" | python -c 'import sys, json;
  print json.load(sys.stdin)["session"]')
```



```
curl -k -L -H "Content-Type: application/json" -H "Authorization:  
Token $token"  
"https://127.0.0.1/api/v3.0/netops/modules/dop/redeploy"
```

ACTIVATE A NETOPS MODULE

IP Access is activated for both Enterprise Edition and Automation Editions.

Secure Provisioning and Automation Gateway are activated from the Automation Edition license.

The NetOps module license is installed on Lighthouse and contains a preset number of available node activations. Each supported node that is activated for the NetOps module provisioning, consumes an available activation; Lighthouse itself does not consume an activation.

Installing the NetOps module license automatically activates the module on Lighthouse, at which point the NetOps Automation platform deploys the central module software components, including the module's UI, to Lighthouse.

The process of automatically or manually activating a NetOps Module on a node deploys the remote module software components to that node, securely over Lighthouse VPN.

ACTIVATE THE NETOPS MODULE ON LIGHTHOUSE


PREPARATION

1. Install the Lighthouse VM and ensure it is running.
2. Login to the Lighthouse web UI as root or a Lighthouse Administrator.
3. Install the Lighthouse node subscription (SKU OGLH) under **SETTINGS > System > Subscriptions**.

PROCEDURE

1. Ensure you have a valid NetOps Module licence installed under **SETTINGS > System > Subscriptions**.

Note: The Enterprise Edition license includes the IP Access module.
The Automation Edition license includes IP Access, Secure Provisioning, and Automation Gateway.

2. It will take a few minutes for the module to activate on Lighthouse, view progress under **CONFIGURE NODES > NetOps Modules > Manage Modules**.
3. Click the  *Update* icon and note new module-specific menu items are now available under **CONFIGURE NODES**, for example, **Secure Provisioning** or **IP Access**.

Nodes may now be automatically activated for the module as they enroll, or manually activated after enrollment.

ALWAYS ACTIVATE MODE ON ALL NODES (AUTOMATIC)

In the Always Activate mode, NetOps automatically activates the NetOps Module on all nodes, provided a license is present and activations are available. All nodes are activated for the module as they enroll.

PROCEDURE

1. Check and apply **CONFIGURE NODES > NetOps Modules > Manage Modules > Module Name > Always Activate**.
2. To activate a new node, enroll the node into Lighthouse, see ["Activate the Secure Provisioning Module on Lighthouse" on page 440](#)

ACTIVATE NETOPS ON SELECTED NODES (AUTOMATIC)

You may selectively activate the module on a subset of nodes using Enrollment Bundles. Only nodes enrolling using one of these bundles will be automatically activated.

PROCEDURE



1. Navigate to **CONFIGURE NODES > NetOps Modules > Manage Modules > *Module Name* > Always Activate**.
2. Uncheck **Always Activate**.
3. Click **Apply**.
4. Select **CONFIGURE NODES > Node Enrollment > Enrollment Bundles** and add a new bundle (you may also edit an existing bundle).
5. Enter a bundle **Name** and **Token**, and choose whether or not to **Auto-Approve** enrollment, see ["Activate a NetOps Module" on page 392](#).
6. Scroll down to **NetOps Modules** and add the **Module Name**.
7. Enroll the node to Lighthouse, specifying the **Enrollment Bundle Name** and **Token**.

Note: Lighthouse-initiated manual enrollment (for example, clicking the **Add Node** button in the Lighthouse web UI) does not support bundles, you must use a node-initiated enrollment method.

ACTIVATE THE NETOPS MODULE ON NODES (MANUAL)

PROCEDURE

To activate nodes manually after enrollment, use the following steps:

1. Ensure **CONFIGURE NODES > NetOps Modules > Manage Modules > Module Name > Always Activate** is unchecked and applied.
2. Select **CONFIGURE NODES > Configuration Templating > Apply Templates**.
3. Under **NetOps Module Activation**, choose the **Module Name** and click **Next**.
4. Select the nodes to activate, then click **Next**.
5. To ensure the preflight check has succeeded click the  *Update* icon above the table, then click **Next**.
6. Click the  *Update* icon to ensure activation is successful.

Note: Under the NetOps *licensing* arrangement, once a node is activated for the NetOps Module, the activation is consumed by and locked to that node. Unenrolling the node returns the activation to the available pool. Under NetOps *subscription* arrangements, it would be counted towards the node assignment of the subscription.

DEACTIVATE (REMOVE) A NETOPS MODULE

To deactivate and remove a NetOps Module from a given node, use the following API call to Lighthouse:

```
DELETE /api/v3/netops/modules/module_id/nodes/node_id
```

where module_id is one of dop (Secure Provisioning), IP Access, or ag (Automation Gateway), and node_id is the internal node ID, for example, nodes-1.

Follow the procedure below to remove NetOps Modules from a given node:

1. Log in to the Lighthouse CLI shell as root or a Lighthouse Administrator user.
2. Determine the node's node ID by running:

```
node-info --list
```

3. Update the highlighted fields with your username, password, the node ID and modules to deactivate, then run the following:


```
LH_USERNAME="root"
LH_PASSWORD="default"
NODE_ID="nodes-1"
MODULES_TO_DEACTIVATE="dop ag sdi"

token=$(curl -k -L -d '{"username":"'${LH_USERNAME}',"password":"'${LH_PASSWORD}'"}' https://127.0.0.1/api/v1/sessions/ | cut -f10 -d'')

for module_id in $MODULES_TO_DEACTIVATE; do
    curl -k -L -X DELETE -H "Authorization: Token $token"
    https://127.0.0.1/api/v3/netops/modules/${module_id}/nodes/${NODE_ID}
done
```

AUTOMATION GATEWAY

Opengear allows you to set up your network using automation tools.

Automation Gateway allows Lighthouse users and automation code to discover and manage IP-based management interfaces via the Opengear management system, with the same level of simplicity and efficiency as if they were serial consoles.

Managed devices like firewalls and servers may present an IP-based management interface in addition to (or sometimes instead of) the traditional serial or USB console port. This interface may serve a web-based GUI, VNC or RDP based KVM, SSH-based CLI and/or a programmable network API like RESTful HTTPS. The device itself may be physical or virtual.

By their nature, the IP-based management interfaces are more dynamic (for example, they may change IP address), varied (for example, protocols vary from device to device) and harder to reach (for example, on an un-routable private network).

The Automation Gateway module addresses the challenges of discovering, auditing and connecting to IP-based management services in a distributed, heterogeneous network. It is available on Operations Manager product lines, OM120x and OM22xx.

DIFFERENCES BETWEEN IP ACCESS AND AUTOMATION GATEWAY

The **IP Access** module provides the **IP Access** feature and the **Automation Gateway** module provides the **Automation Gateway** feature.

These two features are similar in that they both allow Lighthouse users to access network services on remote managed devices, however they accomplish this in different ways. One way to think about it is that **IP Access** transports the user to the remote network, whereas **Automation Gateway** transports a specific remote network service to user.

IP ACCESS

Using **IP Access**, the user must establish a VPN tunnel from their computer to Lighthouse, which then provides them with a routed connection to the entire network(s) connected to the remote node. Once the tunnel is up, the user can access any network service on any network device by their standard management IP addresses.

AUTOMATION GATEWAY

Using the Automation Gateway feature, the user clicks through their existing Lighthouse browser session to access HTTP/HTTPS web GUI services of specific devices that have been discovered by the remote node. Access is limited to these services only, and the connections are proxied via Lighthouse's central address – so no client or network reconfiguration is required.

HOW TO USE AUTOMATION GATEWAY

Using Automation Gateway, Lighthouse users can connect to the web UI of a remote physical & virtual managed device such as a firewall, lights-out server or SD-WAN appliance.

Access is proxied via Lighthouse VPN via a remote node, allowing simply, point & click access to what may be an otherwise unreachable remote device.


PROCEDURE

The basic steps to setup and use this feature are as follows:

1. Activate the **Automation Gateway** NetOps Module on an enrolled node, that is on the same network as the remote device that you wish to reach.
2. Log in to the Lighthouse web UI as a user with at least **NetOps Modules: Read Only** permission, and at least **Nodes & Devices (Base): Read Only** permission for the activated node.
3. Click **CONFIGURE > AUTOMATION GATEWAY > Devices**.
4. In the **FILTER BY** menu, select *HTTPS* or *HTTP* from the **Services** drop down.
5. Locate the remote device by hostname or IP address.

Tip: If many remote devices have been discovered, use the FILTER BY menu to search by full or partial device hostname or IP address.

- To initiate an Automation Gateway session, click the device's web UI icon.

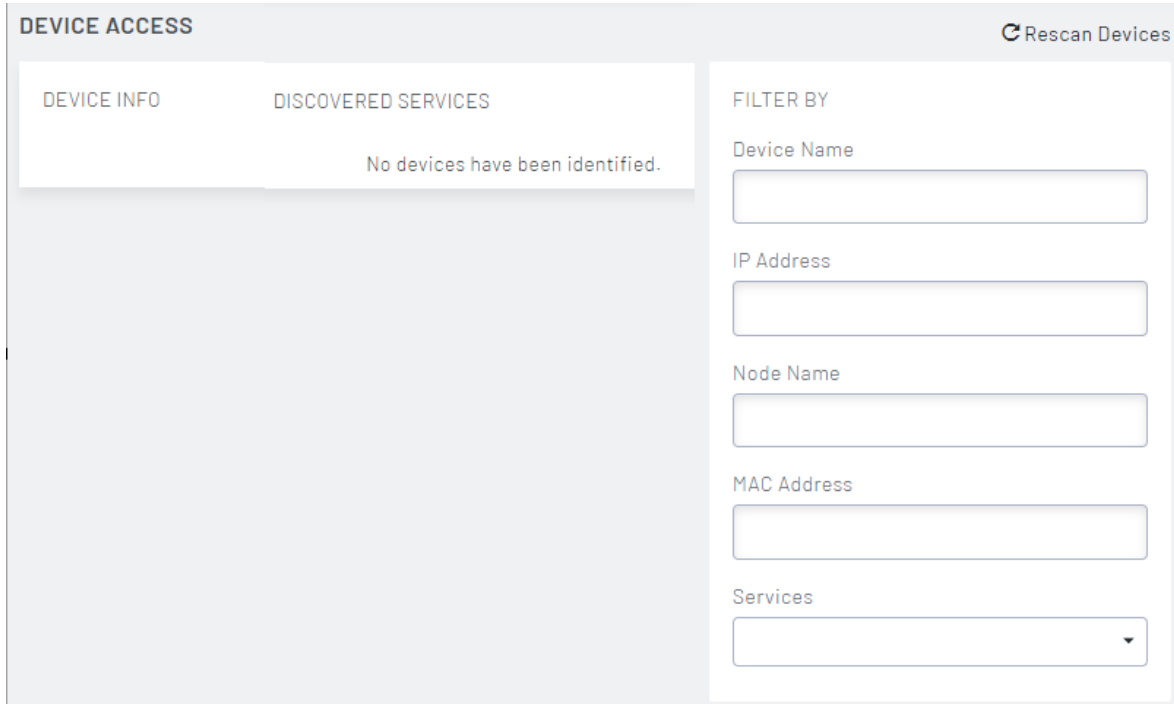

- You are now connected the web UI of the remote device

Note: While an Automation Gateway session is active, all new browser tabs and windows that connect to Lighthouse are proxied through to the remote device web UI.

- To close the Automation Gateway session, click the link at the bottom of the device web UI:

This system is being accessed via Lighthouse - click here to return to Lighthouse

CONNECT WITH REST/HTTP/HTTPS APIS

Automation Gateway allows central automation code to reach the HTTP/S API services running on devices on remote networks.

For more details see:

<https://ftp.opengear.com/download/documentation/api/lighthouse/og-rest-api-specification-v3-7.html>

This is accomplished by modifying the request to add the X-Ip-Access-Auth HTTP header to your API request, and substituting the device's remote IP with Lighthouse's central IP. Requests containing the header are reverse proxied via Lighthouse then via an Operations Manager node that is local to the remote device.

The example Python (3.5+) code below illustrates this. Note that this code is primarily for illustrative purposes with no error handling or modularity, for clarity & brevity.

The device being accessed in this example is an HP ILO's Redfish REST API service.

```
#!/usr/bin/env python3

# Example code showing how to reach a remote device REST API via Opengear
# Lighthouse Automation Gateway -> Operations Manager node -> device
#
# This code is primarily for illustrative purposes with no error handling
# or modularity, for clarity & brevity

import requests
import json
import base64
```

```
# Authenticate to Lighthouse

lighthouse_address = '192.168.67.20'

lighthouse_account = 'root'

lighthouse_password = 'default'

data = { 'username': lighthouse_account, 'password': lighthouse_password }

r = requests.post('https://%s/api/v3.7/sessions/' %
    lighthouse_address, data=json.dumps(data), verify=False)

lh_token = json.loads(r.text)['session']

print('Authenticated to Lighthouse, token %s' % lh_token)

lh_headers = { 'Authorization': 'Token ' + lh_token }

# Find the node that is local to the remote device's API service

device_address = '10.0.0.71' # Equivalent to the UI fields under CONFIGURE >
device_service = 'https' # AUTOMATION GATEWAY > Devices > Filter By

r = requests.get('https://%s/api/v3.7/nom/ag/devices?ip=%s&service=%s' %
    (lighthouse_address, device_address, device_service),
    headers=lh_headers, verify=False)

j = json.loads(r.text)

print(json.dumps(j, indent=4))

for _device in j['devices']:
    for _host in _device['hosts']:
```

```
for _service in _host['services']:
    if _service['nmap']['name'] != device_service:
        continue

    for _avail in _service['availability']:
        node_id = _avail['id']

        print('Service available via %s' % node_id)

        break

# Generate Automation Gateway token

data = { 'session': lh_token, 'request_type': 'new',
        'url': 'https://%s' % device_address, 'node': node_id }

r = requests.post('https://%s/api/v3.7/nom/ag/auth_tokens' %
        lighthouse_address, data=json.dumps(data), headers=lh_headers,
        verify=False)

j = json.loads(r.text)

ag_token = j['token']

print('Automation Gateway token is %s' % ag_token)

ag_headers = { 'X-Ip-Access-Auth': ag_token }

# Now we can query the device API using the Lighthouse address, by including
# the access token in the request headers

# The remaining code is specific to the device being accessed. this example
# hits a Redfish-compliant REST API

device_username = 'baz'
```



```
device_password = 'foobarfoobar'

device_auth = base64.b64encode('%s:%s' %
    (device_username, device_password)).encode('utf-8')).decode('utf-8')

device_headers = { 'Authorization': 'Basic %s' %
    device_auth, 'Content-Type': 'application/json' }

# Add the access token to whatever headers you'd usually use to talk to the
# device's native API -- this header will be stripped by Automation Gateway

_headers = { **ag_headers, **device_headers }

r = requests.get('https://%s/redfish/v1/systems/1/' %
    lighthouse_address, headers=_headers, verify=False)
j = json.loads(r.text)
print(json.dumps(j, indent=4))
```

AUTOMATION GATEWAY SERVICE DISCOVERY

Automation Gateway discovery process can take varied amount of time to complete, entirely based on the size of your scannable network.

Services discovered by Automation Gateway are listed in the Lighthouse web UI, under **CONFIGURE > Automation Gateway > Devices**. The discovery process can be restarted using the "Rescan" button on the **Automation Gateway > Devices** page.

When an HTTP or HTTPS service has been discovered, it may also be accessed via this page.

When a node has been activated for Automation Gateway, it begins to discover remote services. The discovery process is initiated by Lighthouse, and runs every 10 minutes.

Each time the discovery process is initiated, the node runs an nmap script scan against all IPv4 connections belonging to the node's LAN firewall zone.

Note: Large logical networks with address space larger than 254 hosts (i.e. with a minimum netmask of /24 or 255.255.255.0) are excluded from the scan.

The nmap scan runs the *default* (non-intrusive) suite of nmap NSE scripts. These can be listed by running the following command on a node that has been activated for Automation Gateway:

```
sudo docker exec ag-remote cat /usr/share/nmap/scripts/script.db |  
awk -F\" ' /"default"/ { print $2 }'
```

IP ACCESS

The Lighthouse IP Access feature allows an engineer to reach hosts on a remote site via an OpenVPN client through Lighthouse, over the Lighthouse VPN fabric, without physically traveling to the site. If IP Access is enabled for Lighthouse, it can be managed from using the **Configure > IP Access** menu option on the Lighthouse web UI.


Note:For the Smart Management Fabric feature, see "[Smart Management Fabric and NetOps Interactions](#)" on page 122

IP Access adds client VPN capability to Lighthouse. Network engineers, firewall and server administrators can launch a VPN client connection to Lighthouse, be authenticated, then automatically connected to the remote site management network. The client PC has a secure VPN tunnel to the remote equipment the user needs to work on, providing the same TCP/IP access they would get if they traveled to the site and plugged into the management LAN.

The client can then access target devices on the remote network directly by their usual IP addresses and network ports. Requests from the client are masqueraded behind the node's IP address, so no additional routing configuration is required on the target devices.

CONNECTIVITY

By default, IP Access connects the client to the Management LAN of the Opengear appliance, or the interfaces in the LAN zone for the OM Series. A route for the directly attached subnet, plus any static routes configured on that interface (but never the default route) are also pushed automatically to the OpenVPN client.

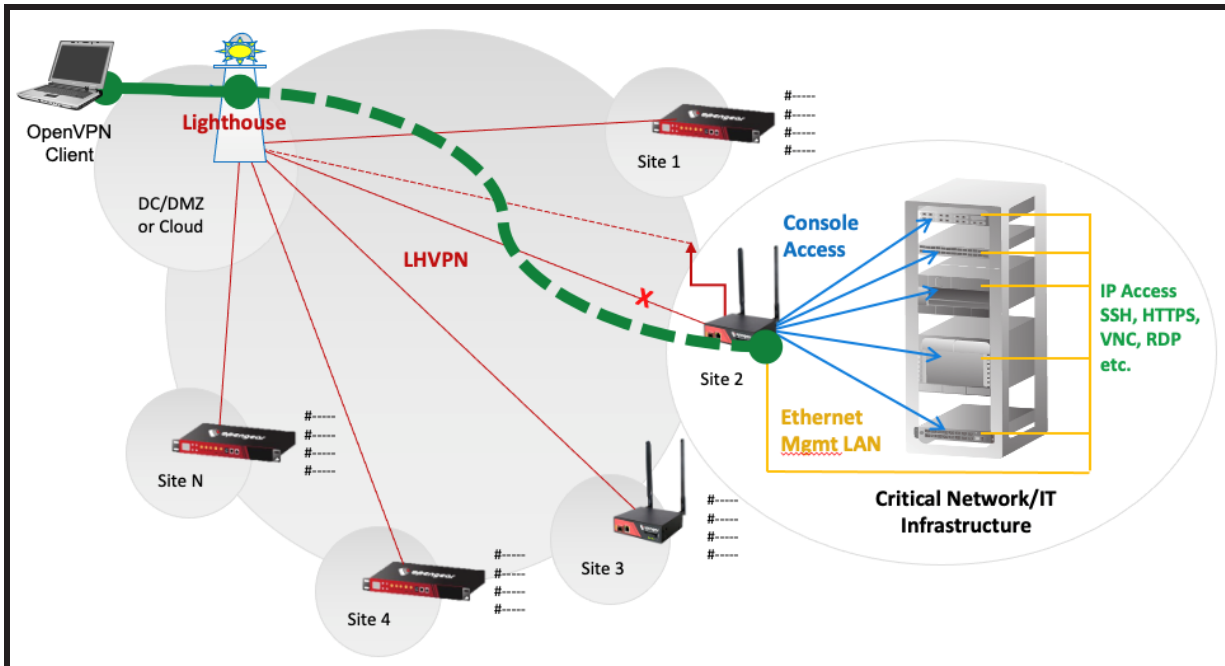

In the diagram, the client PC has a virtual tunnel interface with a route to the yellow management network, and the user can access any target IP devices on the yellow network using their real IP addresses.

The basic configuration of this feature is:

- Activate the IP Access NetOps module – this starts the OpenVPN service in a Docker container on Lighthouse.
- Activate the IP Access NetOps module on each node you wish to use for IP Access – this installs a remote connector service to allow the IP Access bridge to be created.
- Generate a certificate and export an associated OpenVPN client configuration file.
- Import the configuration into your preferred OpenVPN client.

The basic operation of this feature is:



- Connect the tunnel – this starts a connection to Lighthouse on UDP port 8194.
- Authenticate when prompted using your Lighthouse credentials, appending the node name to your Lighthouse username – client certificate authentication is automatic, this is a second factor of authentication.
- Wait a moment for the connection to complete – this builds the GRE bridge between the client and pushes routes to the node's remote network(s).

While connected, the client can access IP addresses on the node's remote network (s) LAN directly, for example, by using the ping command or by typing them into the browser address bar.

NODES SUPPORTED BY IP ACCESS

Opengear OM1200, OM2200, CM8100, ACM7000 and IM7200 nodes may be activated as IP Access nodes, to allow IP Access to their directly connected remote networks via Lighthouse.

Other vendors/models are not currently supported.

Select **Configure > IP Access** to view the available nodes in Lighthouse. The **Node Access** page displays.

Smart Group Filtering

Select Smart Group...

Free Text Search

NAME	NODE ID	STATUS	ACTIONS
SPT-Management-IM7248	nodes-6	Enabled	⊘
SPT-IM7216	nodes-7	Enabled	⊘
SPT-CM7148	nodes-8	Enabled	⊘
Im7216-2	nodes-9	Enabled	⊘

Note

ENABLE IP ACCESS IN LIGHTHOUSE

This topic walks through the steps required to activate and enable the IP Access feature.

ENABLE NETOPS AUTOMATION

After deploying the Lighthouse, sync the latest NetOps Modules from Docker Hub:

1. Log in to the Lighthouse web UI as a Lighthouse Administrator or the root user.
2. From the menu, select **SETTINGS > Services > NetOps Modules**.
3. Click the **Synchronize** icon.

Note: If Lighthouse cannot contact the Docker Hub, you may be able to use the offline installer.


ACTIVATE THE IP ACCESS MODULE

NetOps Modules must be activated on Lighthouse and a per-node basis.

1. Log in to the Lighthouse web UI as root or a Lighthouse Administrator, and upload the Enterprise Edition or Enterprise Automation Edition licence file under **SETTINGS > System > Subscriptions > Add**.
2. Click **CONFIGURE > NetOps Modules > Manage Modules** and wait until Lighthouse activation is complete.

To activate on the node you wish to access IP networks via, use the following steps:

1. Ensure **CONFIGURE > NetOps Modules > Manage Modules > IP Access > Always Activate** is unchecked and applied.
2. Select **CONFIGURE > Configuration Templating > Apply Templates**.
3. Under **NetOps Module Activation** select **IP Access** and click **Next**.

4. Select the nodes to activate and click **Next**.
5. To ensure the preflight check has succeeded click the  *Update* icon above the table, then click **Next**.

Note: Any locally attached subnet and any static routes configured on the Management LAN (OGCS) or interfaces in the LAN zone will get pushed to the client.

See also: ["Activate a NetOps Module" on page 392](#).

NETWORK PORTS USED FOR IP ACCESS

IP Access OpenVPN clients connect on UDP port 8194, inbound to Lighthouse.

The remainder of the connection is bridged over the existing Lighthouse VPN between the node and Lighthouse, therefore no additional ports are utilized.

GENERATE A CERTIFICATE AND EXPORT CLIENT CONFIGURATION

Clients connect to Lighthouse via an OpenVPN client, which in turn connects them to the Management LAN network of a particular node. IP Access provides a convenient means to configure the OpenVPN client by generating the configuration files that may be imported directly into your OpenVPN client of choice.

1. Log in to the Lighthouse web UI as root or a Lighthouse Administrator, and click **CONFIGURE > IP Access > Client Certificates**. Enter a **Certificate Name** and click **Create**.
2. When the certificate is created, download an associated OpenVPN client configuration by clicking **Export**.

Note:Deleting a client configuration file from Lighthouse revokes that client certificate and any associated client configurations using that certificate will no longer be permitted to connect.

CONNECT THE VPN CLIENT

The final step is to establish the VPN connection that allows IP Access to the Management LAN (and optionally other networks) behind a node.

1. Import the client configuration from the previous step into your preferred OpenVPN client and start the VPN connection.
2. When prompted to authenticate the VPN connection, you must also specify your Lighthouse credentials and the node that you want to establish IP access via.
3. Specify the node by adding *:node-name* to your Lighthouse username, for example, authenticating with the username *james:my-acm7004-5* will authenticate as Lighthouse user *james* and connect the VPN to the IP network(s) behind *my-acm7004-5*.

Note:To be permitted connection, the Lighthouse user must have at least Node User rights for the specified node.

Note:The IP Access NetOps module creates a Layer 2 TAP mode tunnel which is not supported by Android or iOS operating systems.

PASSWORD AUTHENTICATION DURING VPN CONNECTION

During VPN connection, the client is prompted to enter a username and password. These credentials are used to authenticate the user, and also to specify the remote node to establish IP access through.



Specify the node by adding *:node-name* to your Lighthouse username, for example, authenticating with the username *james:my-acm7004-5* will authenticate as Lighthouse user *james* and connect the VPN to the IP network(s) behind *my-acm7004-5*.


For authentication to succeed, the Lighthouse user must be one of:

- Lighthouse Administrator role, or root
- Node Administrator role with access to the node you are connecting through
- Node User role with access to the node you are connecting through

ADVANCED OPTIONS

The Advanced options of the IP Access page enable you to set a number of features, including setting expiry of certificates lifetime, changing default connection routes and enabling policies.

IP Access connects the client to the Management LAN or LAN zone by default, which is intended for deployments where the target devices are connected to those interfaces. If the Opendaylight appliances are deployed into a different or more complex network environment, then there are some advanced options that the Lighthouse administrator can use to control the IP Access connectivity, and these are described below.

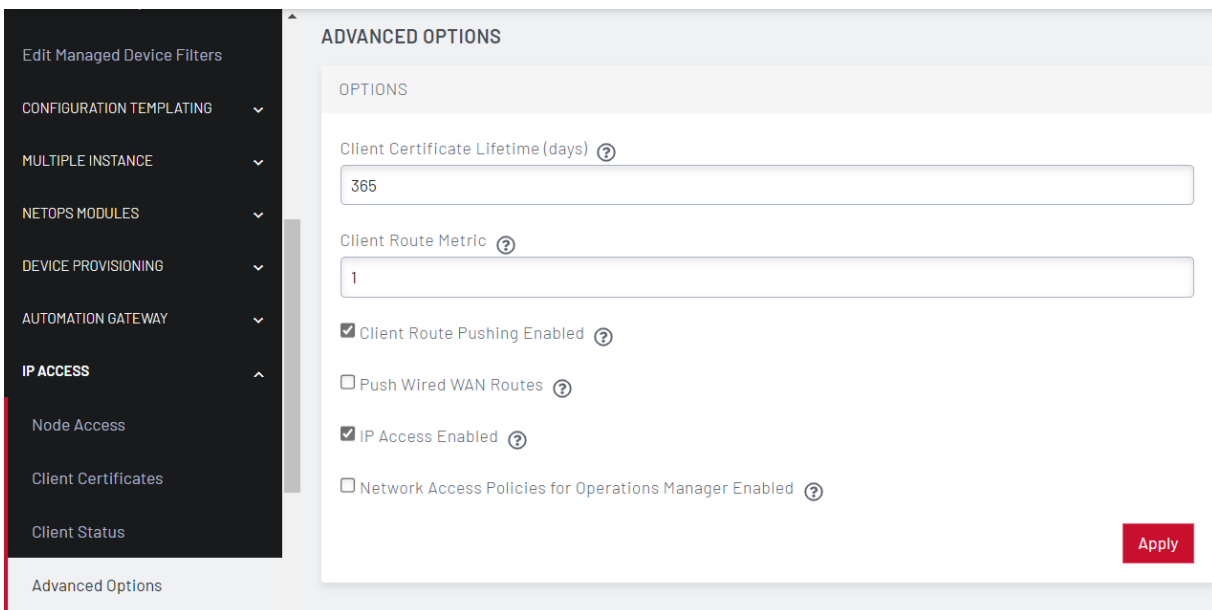

The screenshot shows the 'ADVANCED OPTIONS' configuration page for IP Access. On the left is a dark sidebar with a menu containing: 'Edit Managed Device Filters', 'CONFIGURATION TEMPLATING', 'MULTIPLE INSTANCE', 'NETOPS MODULES', 'DEVICE PROVISIONING', 'AUTOMATION GATEWAY', 'IP ACCESS' (highlighted with a red bar), 'Node Access', 'Client Certificates', 'Client Status', and 'Advanced Options'. The main content area is titled 'ADVANCED OPTIONS' and contains a section labeled 'OPTIONS'. This section includes four configuration items: 'Client Certificate Lifetime (days)' with a text input field containing '365'; 'Client Route Metric' with a text input field containing '1'; 'Client Route Pushing Enabled' with a checked checkbox; 'Push Wired WAN Routes' with an unchecked checkbox; 'IP Access Enabled' with a checked checkbox; and 'Network Access Policies for Operations Manager Enabled' with an unchecked checkbox. Each item has a help icon (question mark in a circle). A red 'Apply' button is located at the bottom right of the configuration area.

CONNECTING TO WAN ZONE

By default, IP access connects the client to the management LAN zone.

If IP Access is required for the WAN zone, select **Configure > IP ACCESS > Advanced Options > Push Wired WAN Routes**. This is a global configuration, and will affect all node that are enabled for IP Access.

In this case, the customer must have deployed Opendgear appliances with the Network Interface (NET1) connected to the management network or facing target devices, and it results in IP Access connecting the client to the WAN (NET1) interface on OGCS.

NETWORK ACCESS POLICIES FOR OPERATIONS MANAGER

In a more complex deployment, Opengear appliances may be connected to multiple networks or virtual networks (VLANs), and in these cases it is often important to be able to control which of these networks each authenticated IP Access user is able to access.

This feature is only supported on Operations Manager or OM Series appliances, which support the zone-based firewall, designed to work with multiple VLANs and the optional built-in Ethernet switch with layer-3 capable ports. This flexibility and control is very useful, especially for customers who have a number of separate management networks (or VLANs) for different administrative teams.

The Network Access Policy mechanism on Lighthouse provides a way to dynamically map IP Access users, based on their group membership, to the firewall zone(s) that they can access on the Nodes. Each firewall zone is a collection of network interfaces which is configured on each Opengear appliance or Node. Firewall zones are used to provide policy abstraction by logical zone names – the physical or virtual interfaces on each Node may vary by site, but the zone names must stay consistent. It is recommended that zones and names are planned out in advance of implementation.

A firewall zone is a collection of network interfaces which is configured on each Opengear appliance or Node in Lighthouse terminology. The Network Access Policy mechanism on Lighthouse provides a way to map users, based on their group membership, to the firewall zone(s) that they can access on the Nodes.

UNDERSTANDING ACCESS POLICIES


Putting it all together, when a user authenticates to Lighthouse, they are mapped into one or more group(s), which map into firewall zone(s), which allow authenticated users to reach the appropriate network interfaces(s), including switch ports or VLANs, via IP Access.

For example, users who belong to the security group may get mapped into the secops (security operations) zone. On each OM appliance, the appropriate switch port(s) and/or VLAN(s) for security operations should be configured to be in the secops zone.

Similarly, users in the server group may get mapped into the serverops zone, and again on the OM appliances the appropriate interfaces can be configured to be part of that zone. The result is that members of the security group get IP Access to the networks in the secops zone, and members of the server group get IP Access to the networks in the serverops zone, for each Node that they connect to.

SETTING UP NETWORK ACCESS POLICIES

To enable this feature, go to **IP Access > Advanced Options** and select “Network Access Policies for Operations Manager Enabled”, then hit **Apply**.

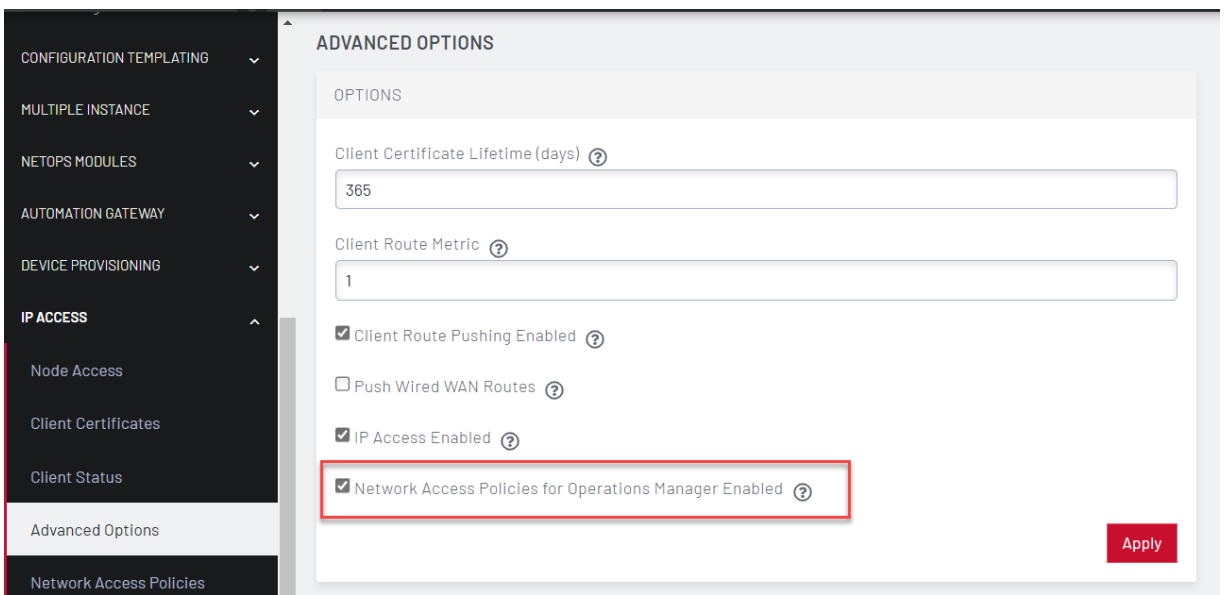

CONFIGURATION TEMPLATING ▾

MULTIPLE INSTANCE ▾

NETOPS MODULES ▾

AUTOMATION GATEWAY ▾

DEVICE PROVISIONING ▾

IP ACCESS ▴

Node Access

Client Certificates

Client Status

Advanced Options

Network Access Policies

ADVANCED OPTIONS

OPTIONS

Client Certificate Lifetime (days) ⓘ

365

Client Route Metric ⓘ

1

☒ Client Route Pushing Enabled ⓘ

☐ Push Wired WAN Routes ⓘ

☒ IP Access Enabled ⓘ


☒ Network Access Policies for Operations Manager Enabled ⓘ

Apply

TO SET ACCESS POLICIES

A policy must be configured for each group whose members will use IP Access.

1. Select **Configure > IP Access > Network Access Policies**. The **Network Access Policies** page displays. The group to zone mapping column names **ZONES** is empty by default.

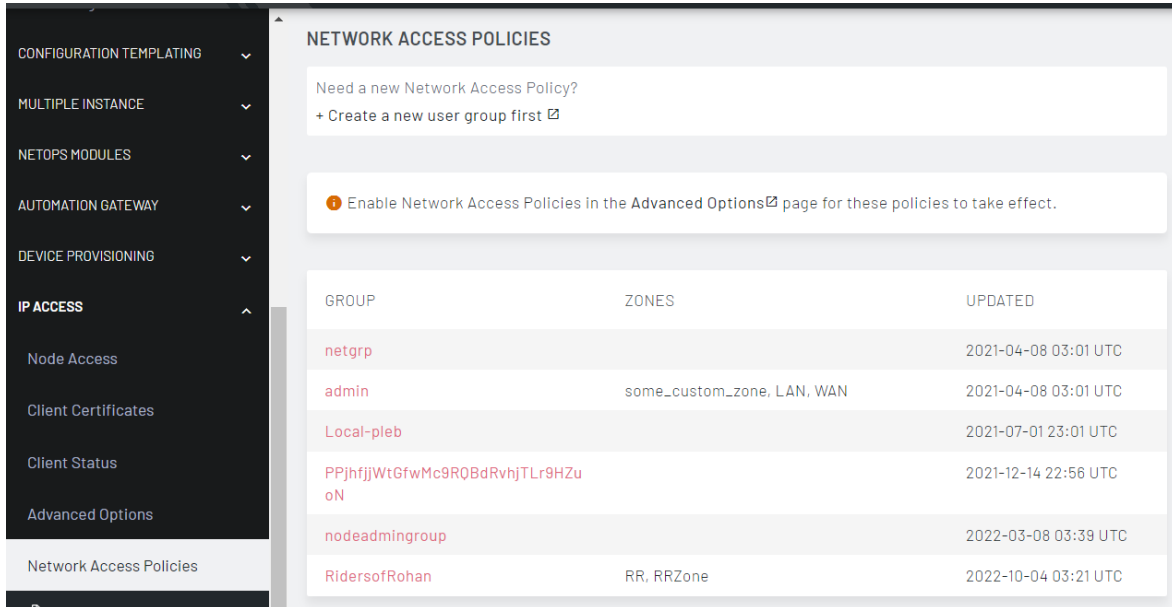

The screenshot shows the 'NETWORK ACCESS POLICIES' page. On the left is a dark sidebar with a menu. The main content area has a header 'NETWORK ACCESS POLICIES' and a message: 'Need a new Network Access Policy? + Create a new user group first'. Below this is a warning: 'Enable Network Access Policies in the Advanced Options page for these policies to take effect.' A table lists existing policies with columns 'GROUP', 'ZONES', and 'UPDATED'.

GROUP	ZONES	UPDATED
netgrp		2021-04-08 03:01 UTC
admin	some_custom_zone, LAN, WAN	2021-04-08 03:01 UTC
Local-pleb		2021-07-01 23:01 UTC
PPjhffjWtGfwMc9RQBdRvhjTLr9HZuoN		2021-12-14 22:56 UTC
nodeadmingroup		2022-03-08 03:39 UTC
RidersofRohan	RR, RRZone	2022-10-04 03:21 UTC

2. Click on the group name to edit the group policy.
3. Click on **+ Add Zone** to add one or more firewall zones for this group.
4. Select the firewall zone and click Add.

ADD FIREWALL ZONE

NAME	NODES	
<input type="checkbox"/> LAN	1	View details
<input type="checkbox"/> Lighthouse VPN	1	View details
<input type="checkbox"/> WAN	1	View details
<input type="checkbox"/> Cellular	0	View details
<input type="checkbox"/> RR	0	View details
<input type="checkbox"/> RRZone	0	View details

+ Manually specify zone

CancelAdd

5. The Network Access Policies page now displays the group with the Firewall zone.

ACCESSING MULTIPLE VLANS OR PORTS

There are several ways a user can access multiple target networks, virtual networks (VLANs) or physical ports.

GROUP MEMBERSHIPS

A user may belong to multiple groups, in which case they will have access to the sum of the zones mapped to those groups, in the same way port access works for Console Gateway and Smart Group matching. Note that this works regardless of Local or Remote user authentication on Lighthouse; user authorization (which determines access to Nodes and managed devices, and now firewall zones) is always derived from group membership.

FIREWALL ZONES

In the **IP Access Network Access Policy** settings, each group can be configured to have access to one or more firewall zones. Some groups can be configured to have access to no zones, some to just one zone, and other groups to have access to multiple zones.

MULTIPLE LAYER 3 NETWORK CONNECTIONS

On each Node a layer 3 network connection or “conn” is required on the OM to communicate with other hosts on a network or VLAN. Multiple conns on each OM can be mapped into the same firewall zone. This may be used to provide access to multiple switch ports, though it is perhaps more likely that those switch ports would be configured in a bridge group if they are all part of the same LAN, and the bridge group only requires a single layer 3 conn. If multiple LANs or virtual LANs (VLANs) are managed by the same team, then it may make sense to combine them into the same firewall zone.

Warning: The supported appliance's firewall will allow traffic to pass between interfaces in the same firewall zone, so to maintain security, multiple “separate” management VLANs should not be configured in the same zone, but should each have its own zone. If required, one of the mechanisms above can be used to allow user access to multiple zones and therefore to multiple “separate” VLANs.

TROUBLESHOOTING IP ACCESS

The most effective way to troubleshoot IP Access is to view the logs.

VIEW THE DOCKER LOGS

run the following command on Lighthouse, either as root or with sudo (for non-root admins):

```
sudo docker logs -t central-sdi
```

The logs for the `central-sdi` Docker container, which controls client IP Access display.

```
2022-10-03T10:03:19.051579136Z INFO:root:[NetOps-SDI node="nodes-36"
username="maverick"] VPN client authenticated
2022-10-03T10:03:19.094313762Z 2.29.37.12:65437 TLS:
Username/Password authentication succeeded for username
'maverick123:OM1208-UK2'
2022-10-03T10:03:19.422971278Z 2.29.37.12:65437 Control Channel:
TLSv1.3, cipher TLSv1.3 TLS_AES_256_GCM_SHA384, peer certificate:
2048 bit RSA, signature: RSA-SHA256
2022-10-03T10:03:19.422999989Z 2.29.37.12:65437 [LH5-UK3-22] Peer
Connection Initiated with [AF_INET]2.29.37.12:65437
2022-10-03T10:03:22.000300953Z INFO:root:[NetOps-SDI node="nodes-36"
username="maverick123"] VPN client connected with IP 172.31.0.8
netmask 255.255.0.0
2022-10-03T10:03:22.084275387Z LH5-UK3-22/2.29.37.12:65437 OPTIONS
IMPORT: reading client specific options from: /tmp/openvpn_cc_
3aa5d19c3ea09b3bbac56f6bacf7b6e.tmp
2022-10-03T10:03:22.084324213Z LH5-UK3-22/2.29.37.12:65437 Data
```

```
Channel: using negotiated cipher 'AES-256-GCM'
2022-10-03T10:03:22.084332293Z LH5-UK3-22/2.29.37.12:65437 Outgoing
Data Channel: Cipher 'AES-256-GCM' initialized with 256 bit key
2022-10-03T10:03:22.084337215Z LH5-UK3-22/2.29.37.12:65437 Incoming
Data Channel: Cipher 'AES-256-GCM' initialized with 256 bit key
2022-10-03T10:03:22.084342034Z LH5-UK3-22/2.29.37.12:65437 SENT
CONTROL [LH5-UK3-22]: 'PUSH_REPLY,ping 10,ping-restart 120,route
192.168.2.0 255.255.255.0 172.31.0.1 1,ifconfig 172.31.0.8
255.255.0.0,peer-id 0,cipher AES-256-GCM' (status=1)
2022-10-03T10:03:22.084950386Z LH5-UK3-22/2.29.37.12:65437 PUSH:
Received control message: 'PUSH_REQUEST'
2022-10-03T10:03:22.085204467Z LH5-UK3-22/2.29.37.12:65437 PUSH:
Received control message: 'PUSH_REQUEST'
2022-10-03T10:03:22.085220316Z LH5-UK3-22/2.29.37.12:65437 PUSH:
Received control message: 'PUSH_REQUEST'
2022-10-03T10:03:22.432350278Z LH5-UK3-22/2.29.37.12:65437 PUSH:
Received control message: 'PUSH_REQUEST'
2022-10-03T10:03:23.120616769Z INFO:root:[NetOps-SDI node="nodes-36"
username="maverick"] VPN client identified by MAC c6:87:ca:4a:3b:2c
```

Note the PUSH_REPLY line above shows that the IP Access client has been pushed the route to the network 192.168.2.0/24 which in this case is the interface on this Node in the firewall zone that the user was mapped into. (Unfortunately, the firewall zones are not listed in this log output). If there are errors with authentication, then they will show up here.

USING THE ROUTING TABLE

When troubleshooting IP Access it is useful to look at the routing table on the target Node to make sure that routes to the target networks are installed. If the interface is down, for example, then the route is not present and will not be pushed to the client.

The following commands can be used to display the routing table on the target OM Series Node:

```
route
ip route
```

The Routing table displays:

```
root@OM1208-UK2:~# route
Kernel IP routing table
Destination Gateway Genmask Flags Metric Ref Use Iface
default _gateway 0.0.0.0 UG 110000001 0 0 net1
5.5.5.0 0.0.0.0 255.255.255.0 U 0 0 0 sw0p8
172.17.0.0 0.0.0.0 255.255.0.0 U 0 0 0 docker0
172.31.0.0 0.0.0.0 255.255.0.0 U 0 0 0 ipa-br0
192.168.0.0 0.0.0.0 255.255.255.0 U 0 0 0 net2
192.168.1.0 0.0.0.0 255.255.255.0 U 0 0 0 net1
192.168.2.0 0.0.0.0 255.255.255.0 U 0 0 0 sw0p2
192.168.128.0 0.0.0.0 255.255.224.0 U 0 0 0 tun0
root@OM1208-UK2:~#
root@OM1208-UK2:~# ip route
default via 192.168.1.1 dev net1 proto static metric 110000001
5.5.5.0/24 dev sw0p8 proto kernel scope link src 5.5.5.5
172.17.0.0/16 dev docker0 proto kernel scope link src 172.17.0.1
linkdown
172.31.0.0/16 dev ipa-br0 proto kernel scope link src 172.31.0.1
192.168.0.0/24 dev net2 proto kernel scope link src 192.168.0.48
```

```
192.168.1.0/24 dev net1 proto kernel scope link src 192.168.1.48
192.168.2.0/24 dev sw0p2 proto kernel scope link src 192.168.2.8
192.168.128.0/19 dev tun0 proto kernel scope link src 192.168.128.6
root@OM1208-UK2:~#
```

The `ip route` command output is useful as it shows the interface IP address of the OM, which should be reachable via IP Access as long as that interface is up.

Other standard network troubleshooting techniques can be used from the Node, for example testing the ability to ping a target device, or using `curl` if it has an http or https interface.

Examples

```
ping 192.168.2.4
curl -k https://192.168.2.4/
```

SECURE PROVISIONING

Secure Provisioning for NetOps is a configuration storage, distribution and provisioning system. It does not generate, test or validate device configuration. Instead, it is focused on provisioning remote managed devices with user-supplied configuration and device OS images – automatically, remotely and securely, no matter where those devices are and no matter what the state of the network is.

Using Secure Provisioning for NetOps, network turn up no longer requires network engineering staff to perform initial configuration tasks on site, even when there is no existing LAN or WAN in place. Remote hands rack, stack and cable the infrastructure, then Secure Provisioning for NetOps Automation automates the rest of the turn up process.

The Secure Provisioning module leverages these technologies:

- **ZTP** (Zero Touch Provisioning): The process by which managed devices in their unconfigured state request and are delivered initial setup resources over the local management network
- Human-readable **YAML** language: Provides simplified configuration of managed device ZTP configuration parameters
- **Git** source control: Managed Device resources such as initial configuration files and OS images are automatically stored in a versioned, auditable repository
- **Ansible** automation framework: Automatically propagates device resources and configures on-site ZTP services

The Secure Provisioning module combines a centrally orchestrated, vendor-neutral ZTP service with on-site node LAN and WAN connectivity, to automate the provisioning process end to end.

SECURE PROVISIONING CONFIGURATION MANAGEMENT

Secure Provisioning always applies device configuration in its entirety and does not support applying config patches or deltas to a provisioned device (for example, adding a few lines to running config, to enable a specific feature).

Note:For the Smart Management Fabric feature, see ["Smart Management Fabric and NetOps Interactions"](#) on page 122

STATELESS FILE MANAGEMENT

Secure Provisioning supports a DevOps-style approach which collapses initial provisioning, disaster recovery and ongoing maintenance workflows into the one workflow:

Using this approach, the config patch is applied in Lighthouse to the central configuration template via git, which renders the configuration file in its entirety and pushes to the OM node. The device is factory reset and pulls the new configuration as if it were being provisioned for the first time.

Pros:

- Eliminates config drift
- Enforces config reproducibility
- Central audit trail of all configuration changes
- Disaster recovery becomes as simple as resetting all devices to reprovision

Cons:



- Requires a longer maintenance window as the device is reset and reboots
- Patches cannot be applied to running configuration

STATEFUL DEVICE MANAGEMENT GATEWAY

The NetOps Automation platform provides a management fabric from remote devices to your central management network via Lighthouse VPN and/or the cellular WWAN.

There are many tools and protocols purpose-built for stateful configuration management, such as Cisco NSO and SolarWinds NCM, and NETCONF and gRPC (OpenConfig).

NetOps can be leveraged by these tools as a secure, resilient management path – both extending their reach to the out-of-band management network, and ensuring reachability during outages.

HOW SECURE PROVISIONING WORKS

The Secure Provisioning feature centrally orchestrates the distribution of managed device configuration files and firmware images, and the node provisioning (ZTP) services required to deliver the files to managed devices.

Secure Provisioning is configured by defining the resources to provision managed devices with, and defining how these resources should be distributed around your network.

- **Device Resource Bundles** contain the files needed to provision one or many managed devices:
 - **Configuration File, Script File** and/or **Image Files**.
 - Each Resource Bundle has a defined **Device Type**.
 - When a Resource Bundle is distributed to a node, any ZTP request matching the Device Type are provisioned with the bundled resources.
 - This may be restricted to specific devices by specifying one or more device **MAC Addresses** (range and reverse match supported) or **Serial Numbers** (not supported by all vendors).
- **Resource Distribution** policies are defined by **Node Inventory Lists**:
 - A **Static Node Inventory List** - a predefined, static list of nodes to distribute to
 - A **Dynamic Node Inventory List** - evaluates a Smart Group each time resources are distributed.

Tip: The Dynamic Node Inventory List allows you automatically tag certain nodes with Enrollment Bundles, for example, by region or site class, to help automate resource distribution to newly enrolled nodes in that region.

Device Resource Bundle and Resource Distribution configuration are supplied to Lighthouse using the web UI or CLI (git) method. The Web UI configuration method creates an underlying YAML configuration the same as created using the git method, it is effectively a front end to the git method.

A *git push* to the Lighthouse repository or clicking the UI **Push Now/Push Resources** button triggers a resource push:

- A git post-commit hook triggers an Ansible playbook on Lighthouse.
- The playbook copies resources down to nodes, securely over Lighthouse VPN.
- The playbook start or restarts ZTP services on nodes.

SUPPORT FOR SECURE PROVISIONING

Opengear OM2200 and OM1200 nodes may be activated as Secure Provisioning nodes.

Opengear ACM7000 or IM7200 nodes may also be activated as provisioning nodes, however not all features are available and there are some caveats to be aware of.

Features that are not available of ACM7000/IM7200 nodes:

- Secure boot and physical tamper resistance.
- Encryption of device resource files at rest.
- Centralized ZTP status logging.
- Device configuration templating.
- Ordered provisioning.
- Post-provisioning scripts.

Other ACM7000/IM7200 caveats:

- Secure Provisioning takes control of node DHCP, NTP, DNS services and overwrites system configuration.
- Secure Provisioning overwrites node Management LAN configuration.

VENDOR MANAGED DEVICES SUPPORTED BY SECURE PROVISIONING

Secure Provisioning is vendor-neutral, with support for a broad range of network devices from multiple vendors.

The ZTP process used to provision devices is not standardized, and each vendor OS implements ZTP differently – for example, using differing DHCP options, or requiring an intermediary script to load files.

With Secure Provisioning, you upload configuration and/or firmware image files to create Resource Bundles, then select the vendor profile for that Resource Bundle. This automatically generates the vendor-appropriate ZTP configuration, simplifying the delivery of resources to target devices.

Secure Provisioning currently has built-in support for provisioning devices from these vendors:

- Cisco (IOS, IOS XR, IOS XE, NX-OS)
- Juniper
- Arista
- HPE/Aruba
- Huawei
- Cumulus
- Pica8
- Opendgear

Advanced users may add support for additional devices using custom DHCP configuration.

LOCAL NETWORK SERVICES PROVIDED BY NODES

In addition to zero touch provisioning (ZTP) services, the local node runs local services required to act as a bootstrap management LAN and secure WAN for managed devices, from day zero onwards.

When responding to a BOOTP/DHCP provisioning request from a device, the Operations Manager node hands out its own local address as:

DEFAULT GATEWAY

Devices trying to reach to destinations on the central LAN that Lighthouse resides on are securely routed over Lighthouse VPN. This allows devices to reach, for example, central NMS for monitoring, and central configuration systems for final service provisioning.

Requests to other remote destinations are masqueraded behind and routed out the node's built-in cellular WWAN, allowing devices to reach cloud provisioning services.

Note that device requests are masqueraded to Lighthouse's central IP and will appear to be originating from Lighthouse to hosts on the central LAN.

All traffic between remote node network and the central Lighthouse network is securely tunneled inside Lighthouse VPN.

DNS SERVER

DNS lookups from devices are securely proxied through Lighthouse VPN to the central DNS server(s) used by Lighthouse, allowing devices to resolve central hosts from day one.

NTP SERVER

The NTP Server allows devices to set accurate time on first boot, for example, for certificate verification and generation. By default, the node's NTP service uses its local hardware clock as time source.

SYSLOG SERVER

The Syslog Server relays messages to a central LogZilla instance (this is an optional extra module). This allows log collection from day zero, and analysis of the device ZTP process itself.

SECURE PROVISIONING CONFIGURATION

All system configuration is performed via Lighthouse. The configuration necessary to provision a device consists two elements. The basic steps to configure Secure Provisioning are:

- Create Device Resource Bundles and upload resource files (for example, configuration files or scripts, firmware images) to Lighthouse.
- Define Node Inventories to distribute the resources to specific nodes, where they will become available for devices to request for provisioning.

DEVICE RESOURCE BUNDLE

A Device Resource Bundle contains the resource files, such as, a configuration file and OS upgrade image, that are loaded via ZTP (DHCP + TFTP/HTTP) onto the managed device. This may be a full, final configuration, or a baseline configuration to allow the managed device to become managed by an upstream configuration service.

As each vendor's ZTP process is slightly different, Device Resource Bundles allow you to select the Device Type. This generates the appropriate ZTP server configuration (DHCP options), any necessary intermediary provisioning scripts and enables device-specific ZTP features, such as serial number matching.

By default, Device Resource Bundles are targeted to all managed devices of the selected Device Type. Bundles may be targeted to specific managed devices by specifying one or more device MAC addresses (including range and reverse match), or in some case by specifying one or more device serial numbers.

NODE INVENTORY

A Node Inventory is a static or dynamic list of nodes and a corresponding list of Device Resource Bundles. This defines how Device Resource Bundles are distributed around your network.

Resource Bundles may be distributed using one of two methods:

- Push to a static list of nodes, selected individually by node ID
- Push to a dynamic list of nodes, linked to a Lighthouse Smart Group of nodes

Note: You may combine distribution methods.

CREATE DEVICE CONFIGURATION

To provision a managed device, you must supply device resources. Device resources consist of an initial configuration file for the device to install, and optionally a operating system image for the device to upgrade itself with.

Device resource file formats are specific to the target vendor. Secure Provisioning for NetOps Automation provisions these files, but does not generate them.

For example, a trivial Arista initial configuration file may look like:

demo_arista.cfg

```
hostname nom-demo-switch
!
interface Management1
  description ZTP_Mgmt_Interface
  ip address 10.0.0.123/24
!
banner login
Welcome to $(hostname)!

      _
     / |
    __\\ \\
   (__)  \.--.   Provisioned by
                Opendgear NetOps Automation
   (__)   |  |
   (__)   |  |
   (__)___.|__|

EOF
!
end
```

A trivial Cisco IOS XR initial configuration may look like:

Cisco IOS XR initial configuration:

```

!! IOS XR
!
hostname nom-demo-router
!
username admin
  group root-lr          I
  group cisco-support
  secret 5 $1$Qk9Y$x/GCXsUPrXYQw1s5GCdW30
!
interface MgmtEth0/RP0/CPU0/0
  description ZTP_Mgmt_Interface
  ip address 10.0.0.200 255.255.255.0
!
banner motd ^Welcome to $(hostname)!

  _
 / |
__\ \
( )  \.---.      Provisioned by
( )   | | |      Opgear NetOps Automation
( )   | | |
( )___.|_|
^
!
end

```


UPDATE SECURE PROVISIONING SUBNET

The network range used for Secure Provisioning subnet can be updated via setting a static IPv4 address on the Node's LAN interface before deploying. This will allow Secure Provisioning to inherit the subnet range from the static address

ACTIVATE THE SECURE PROVISIONING MODULE ON LIGHTHOUSE

The Secure Provisioning license is installed on Lighthouse and contains a preset number of available node activations. Each node activated for Secure Provisioning consumes an available activation; Lighthouse itself does not consume an activation.

Installing the Secure Provisioning license automatically activates Secure Provisioning on Lighthouse, at which point the NetOps Automation platform installs the central Secure Provisioning software components on Lighthouse.

1. Install the Enterprise Automation Edition license under **SETTINGS > System > Subscriptions**.
2. Install an applicable legacy license, or, apply an Automation Edition subscription, to enable Secure Provisioning under **SETTINGS > System > Subscriptions**.
 - It will take a few minutes for the Secure Provisioning to activate on Lighthouse, view progress under **CONFIGURE > NetOps Modules > Manage Modules**.
3. Click the  *Update* icon and note new menu items are now available under **CONFIGURE > Secure Provisioning**.

Secure Provisioning may now be selectively activated on nodes automatically as they enroll, or activated on nodes manually after enrollment.

INSTALL THE NODE

1. Connect the NET1 Ethernet to a network port via which node can reach the Lighthouse VM Connect power to the node.
2. By default, the node requests a DHCP address and has a static address of 192.168.0.1/24.

3. Test you can reach the node address via ping, SSH and HTTPS, and note this address for the following step.

CONFIGURE A PER-NODE MODULE ACTIVATION POLICY

The process of automatically or manually activating Secure Provisioning on a node prepares it to become a Secure Provisioning server, securely over Lighthouse VPN.

Activating a node for Secure Provisioning consumes an activation from the license. Deactivation returns the activation to the available pool. To deactivate and remove a NetOps Module from a given node, see ["Deactivate \(remove\) a NetOps Module" on page 396](#).

Note: Operations Manager activation deploys the Secure Provisioning container to the node, which may take several minutes.

OPTION A. AUTOMATICALLY ACTIVATE ALL NODES UPON ENROLLMENT

This is the default policy. When a license is present and activations are available, all nodes are activated for Secure Provisioning as they enroll. Nodes that have been previously enrolled must be manually activated.

1. Ensure CONFIGURE > NetOps Modules > Manage Modules > Secure Provisioning > Always Activate is checked and applied.
2. To activate a node, enroll it into Lighthouse.



OPTION B. AUTOMATICALLY ACTIVATE SELECT NODES UPON ENROLLMENT

You may selectively activate Secure Provisioning on a subset of nodes using Enrollment Bundles. Only nodes enrolling using one of these bundles will be automatically activated.

1. Uncheck **CONFIGURE > NetOps Modules > Manage Modules > Secure Provisioning > Always Activate** and click **Apply**.
2. Select **CONFIGURE > Node Enrollment > Enrollment Bundles** and add a new bundle (you may also edit an existing bundle) Enter a bundle **Name** and **Token**, and choose whether or not to **Auto-Approve** enrollment.
3. Scroll down to **NetOps Modules** and add **Secure Provisioning** then **Apply**.
4. When enrolling the node to Lighthouse, specify the **Enrollment Bundle Name** and **Token**.

Note: Lighthouse-initiated manual enrollment (i.e. clicking the **Add Node** button in the Lighthouse web UI) does not support bundles, you must use a node-initiated enrollment method.


OPTION C. MANUALLY ACTIVATE NODES AFTER ENROLLMENT

1. Select **CONFIGURE > Configuration Templating > Apply Templates**.
2. Under **NetOps Module Activation**, select **Secure Provisioning** and click **Next**. Select the nodes to activate and click **Next**.
3. To ensure the preflight check has succeeded click the  *Update* icon above the table, then click **Next**.
4. Click the  *Update* icon, to ensure activation is successful.

ENROLL THE NODE INTO LIGHTHOUSE

1. Launch an HTTPS browser session to Lighthouse.
2. Login using root and the secure password set earlier.

Tip: You may also login as a Lighthouse Administrator user, if you have configured one.

3. At the top of the UI, click **Add Node**.
4. Select An Opendgear appliance, the second option in the **Product** dropdown list.
5. Enter the Operations Manager's Network Address, Username (root) and Password (default) **Check Auto-approve node** then **Apply**.
6. From menu, select **CONFIGURE -> Node Enrollment -> Enrolled Nodes** then click the  *Update* icon to check enrollment has completed.
7. If you are using the Automatically activate select nodes upon enrollment policy, you must manually activate the node after enrollment.

The node now has a secure Lighthouse VPN (OpenVPN) tunnel back to Lighthouse, over which all communications are now secured.

CONNECT TARGET DEVICE

Secure Provisioning currently supports provisioning devices from these vendors:

- Cisco
- Juniper
- Arista
- HPE/Aruba
- Huawei
- Cumulus
- Pica8
- Opendgear

Note: Additional devices may be supported using custom DHCP configuration. To request built-in support for additional devices, contact customer support.

PROCEDURE

1. Connect a supported managed device's management NIC directly to the node.
2. If the node has a built-in Ethernet switch, connect the device to any switch port.
3. Otherwise, connect the device directly to the node's NET2 Ethernet, or via an intermediary management switch.
4. Power on the managed device.
5. Ensure the managed device is in ZTP mode, this typically requires the device to have its configuration erased/reset to factory defaults.

UI-BASED WORKFLOW

Each NetOps Module provides a simple web UI for configuration and status monitoring. This UI is designed primarily for manual operation, evaluation and testing. For comprehensive automation, refer to the CLI-based workflow section that follows. It may be useful to familiarize yourself with the system using the UI before adopting a CLI-based workflow.

Note: Changes pushed to nodes via the Lighthouse UI or API will override those made by direct repository access, therefore UI- based or CLI-based workflows should be considered mutually exclusive modes of operation.

USING THE WORKFLOW

Launch an HTTPS browser session to Lighthouse.

Login using root and the secure password set earlier.

Tip: You may also login as a Lighthouse Administrator user, if you have one configured.

CREATE DEVICE RESOURCE BUNDLE

1. In the menu, navigate to **CONFIGURE > Secure Provisioning > Device Resources**.

2. Click the **Add (+)** button. The **Modify Device Resource** page opens.

MODIFY DEVICE RESOURCE

DEVICE RESOURCE DETAILS

Name

example_router

Device Type

Cisco IOS XR

Configuration File ?

demo_xrv.cfg

Choose File No file chosen

Image File ?

Choose File No file chosen

MAC Addresses ?

36:B4:76:25:AD:D8 -

+

Serial Numbers ?

-

+

ADVANCED

Advanced features are only available on Operations Manager nodes.

3. Choose a **Name** to identify this bundle, for example, demo_bundle1.
4. Select the **Device Type** corresponding to a target managed device.

Note:Each device type may display different resource fields documented below, this is dependent on the device-specific ZTP feature set.

5. The **Configuration File** is the initial configuration file for the device to load via ZTP. Select a previously uploaded file or click the **Browse** button to upload a new file.
6. The **Image File** is the initial software image for the device loaded via ZTP. Select a previously uploaded **Image File** or click the **Browse** button to upload a new file.
7. Optionally, target this bundle at devices matching the specified MAC Addresses, click the **Add** and **Remove** buttons when specifying multiples.

Note:Each MAC address is specified in full, using a wildcard (for example, 00:10:FA:C2:BF:*), or negated to exclude from the match (for example, !01:23:45:67:89:AB)

8. Optionally, target this bundle at devices matching specified **Serial Numbers**, click the **Add** and **Remove** icons when specifying multiples.
9. Click **Save**.



LIGHTHOUSE

See the Node Inventory section earlier in this document for an overview of available distribution methods.

DEFINE A STATIC NODE INVENTORY

1. Navigate to **CONFIGURE > Secure Provisioning > Resource Distribution**.
2. Under **Static Node Inventory List** click the **Add +** button. The **New Node Inventory** window opens, displaying inventory details.
3. Choose, and enter a Name to identify this bundle, for example, `branchinventory_`
4. From the Resource Distribution list, select the bundles to distribute.

NEW NODE INVENTORY

INVENTORY DETAILS

Name

Enter name

Resource Distribution

<input type="checkbox"/>	NAME	DEVICE TYPE	RESOURCES
<input type="checkbox"/>	example_router	cisco_xr	Configuration File: demo_xrv.cfg
<input type="checkbox"/>	example_switch	arista	Configuration File: demo_arista.cfg

FILTERING

Smart Group Filtering

Select Smart Group...

Free Text Search

5. Select the **Nodes** to which these bundles are to be distributed.

Note:The **Free Text Search** and **Smart Group** filter options are to help locate nodes for inclusion in the static inventory, these filters are *not* applied dynamically to the inventory going forward.

6. Click **Apply**.

DEFINE A DYNAMIC NODE INVENTORY

1. Create a Lighthouse Smart Group. See ["Creating Smart Groups" on page 208](#)
2. In the Lighthouse UI, navigate to **CONFIGURE > Secure Provisioning > Resource Distribution**.
3. Under **Dynamic Node Inventory List** click the **Add +** button. The **Modify Node Inventory** window opens, displaying inventory details.
4. Choose, and enter a Name to identify this bundle, for example, LabInventory_
5. Select the **Smart Group** to link to this inventory,

Note:this **Smart Group** search is dynamically evaluated to a list of nodes each time resources are pushed.


6. Select the bundles to distribute, listed in the **Resource Distribution** table.
7. Click **Apply**.

Note:Changes to resource bundle or distribution configuration are not applied to nodes immediately, they must be explicitly pushed to nodes.

PUSH RESOURCES

Any changes to the resource bundle or distribution configuration made in the previous steps are not applied to nodes immediately, they must be explicitly pushed to nodes.

When changes are detected, a **Push now** button is displayed above the Secure Provisioning UI pages.

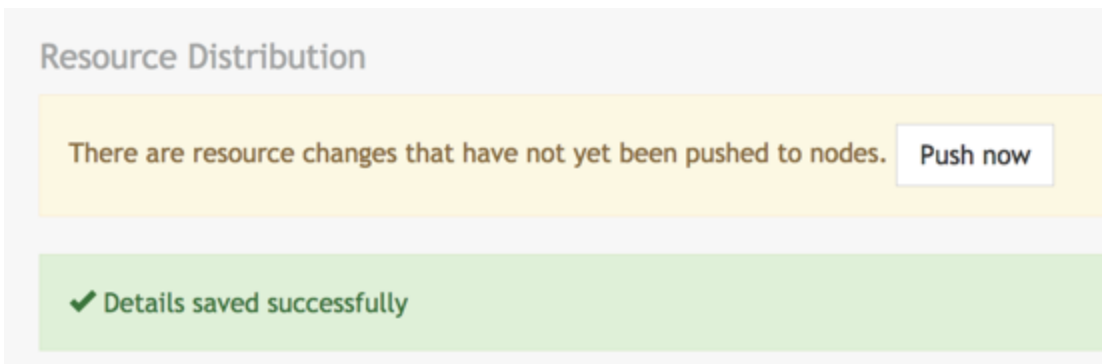

Resources may always be resynchronized by clicking **CONFIGURE > Secure Provisioning > Resource Distribution > Push Resources**.

The push operation distributes resource bundles as configured, then as needed restarts DHCP services on remote nodes. Push status is displayed above the Secure Provisioning UI pages.

You may also monitor the syslog output on Lighthouse for low-level output from the Ansible playbook.

CLI BASED WORKFLOW

Advanced automation users may choose to manage device resources and resource distribution with direct access to the central file repository on Lighthouse.

All necessary resource and configuration files are uploaded to Lighthouse using the Secure Copy protocol such as scp, WinScp or similar - or advanced users may prefer to use git directly.

If you have adopted DevOps-style configuration management using your own source repository (such as git, Mercurial or Subversion) and/or configuration deployment using continuous integration (such as Jenkins or GitLab), this interface also provides a convenient way to hook the Opengear system into these tools and workflows. For example, a configuration commit in the upstream system could automatically proliferate to the Lighthouse file repository, and then in turn to the downstream nodes.

Note that changes pushed to nodes via the Lighthouse UI or API will override those made by direct repository access, therefore UI- based or CLI-based workflows should be considered mutually exclusive modes of operation.

CREATE CONFIGURATION YAML

The first step is to assign resource files to specific device types (collectively known as device resources), and to assign device resources to be deployed to specific nodes.

Tip: The web UI provides a convenient way to start provisioning managed devices without needing to be fully familiar with YAML or git. The generated YAML files that controls resource bundling and distributions is located on Lighthouse, inside the central-dop container. You can view it by running the

following command:

```
sudo docker exec -it central-dop cat /srv/central-  
ui/root/config.yml | less
```

Use a YAML file to bundle device resources, and control the distribution of device resources from Lighthouse to the nodes.

PROCEDURE

1. Create a new directory or folder of your choosing, for example: *nom-prov*
2. Inside the *nom-prov* directory, create a new directory or folder called: *downloads*.
3. In the *nom-prov* directory, create a file with the .yml or .yaml extension, using the following format:

nom-prov.yml

```
device_resources:  
  demo_arista:  
    device_type: arista  
    config_file: 'demo_arista.cfg'  
    image_file: 'arista_eos.swi'  
  
node_inventory:  
  MyNodes:  
    static:  
      - nodes-1  
  
deployment:  
  MyNodes:  
    - demo_arista
```


Note: Note that indentation is meaningful in YAML, and you must use space characters not tabs to indent.

The **device_resources** list groups and assigns resource files to particular device types (i.e. resource bundles).

4. Choose an identifier for each resource bundle item, for example: *demo_arista*.
5. For each item, you must provide the **device_type**, as well as one or more resources, ie. *config_file* or *image_file*.
 - **device_type** matches this device resource item to all devices from the specified vendor – it may be one of the following: Cisco, Cisco_xe, Cisco_xr, Cisco_nx, Juniper, Arista, Aruba, Huawei, Cumulus, Pica, Opengear.
 - **config_file** is the initial configuration file for the device to load via ZTP, as present in the *downloads* directory.
 - **image_file** is the initial software image for the device to load via ZTP, as present in the *downloads* directory.

Note: HPE/Aruba devices do not support the image upgrade via ZTP.

The Cisco Autoinstall process does not support image upgrade via ZTP, to automate image upgrade you must supply a TCL script file rather than a configuration file.

- **mac_address** optionally target this bundle at the listed MAC address(es), which may be specified in full, using a wildcard (for example, 00:10:FA:C2:BF:*), or negated to exclude from the match (for example, !01:23:45:67:89:AB)
- **serial_number** optionally target this bundle at the listed serial number(s)



Device resource items are then assigned to nodes using the **deployment** and optionally the **node_inventory** lists. See *Node Inventory* for an overview of available distribution methods.

The **node_inventory list** defines groups of nodes.

Choose an identifier for each inventory, for example: *branchinventory_* or *labinventory_*

DEFINE A STATIC INVENTORY:

1. Create a list named **static**.
2. List nodes by node ID, for example, *nodes-1*.
3. You can view node IDs by running the following command on Lighthouse: `node-info --all`

DEFINE A DYNAMIC INVENTORY:

1. Create a Lighthouse Smart Group, as documented in the *Creating Smart Groups* section of the *Lighthouse User Guide*.
2. Create a key named **smartgroup** with a value of the Smart Group name, this Smart Group search is dynamically evaluated to a list of nodes each time resources are pushed

The **deployment** list assigns device resources to the node inventories defined above, or all nodes.

- Deployment identifiers correspond to **node_inventory** identifiers, for example, *branchinventory_*.
- Assign device resources by listing device resource items, for example, *demo_arista*.
- You may have multiple device resources per deployment.

A more comprehensive YAML file may look like:

more-devices.yml

```
device_resources:
  access_switch:
    device_type: juniper
    config_file: 'jn-switch35.config'
    image_file: 'jinstall-ex-4200-13.2R1.1-domestic-signed.tgz'
    mac_address:
      - '00:00:0c:15:c0:*'
      - '!00:00:0c:15:c0:99'
  branch_router:
    serial_number:
      - 'SAD15300D4W'
      - 'FOC1749N1BD'
      - 'AVJ18163A52'
    config_file: 'branch_xr.cfg'
    device_type: cisco_xr
  demo_arista:
    device_type: arista
    config_file: 'demo_arista.cfg'
    image_file: 'arista_eos.swi'

node_inventory:
  branch_inventory:
    static:
      - nodes-1
      - nodes-2
      - nodes-10

  lab_inventory:
```

```
smartgroup: LabNodes

deployment:
  lab_inventory:
    - demo_arista
    - access_switch
  branch_inventory:
    - branch_router
    - access_switch
```

HOW UI FIELDS CORRESPOND TO THE YAML FILE (EXAMPLE)

The following example YAML file contains line-by-line comments (blue text) denoting the UI page or field above each corresponding YAML element:

```
# CONFIGURE NODES > Secure Provisioning > Device Resources
device_resources:
  # Device Resource Details > Name
  access_switch:
    # Device Resource Details > Device Type
    device_type: juniper
    # Device Resource Details > Configuration File
    config_file: 'jn-switch35.config'
    # Device Resource Details > Image File
    image_file: 'jinstall-ex-4200-13.2R1.1-domestic-signed.tgz'
    # Device Resource Details > MAC Addresses
    mac_address:
      - '00:00:0c:15:c0:*'
      - '!00:00:0c:15:c0:99'
    # Device Resource Details > Provision After
    provision_after:
```

```
- branch_router

# Device Resource Details > Name
branch_router:
# Device Resource Details > Device Type
device_type: cisco_xr
# Device Resource Details > Serial Numbers
serial_number:
- 'SAD15300D4W'
- 'FOC1749N1BD'
- 'AVJ18163A52'
# Device Resource Details > Configuration File
config_file: 'branch_xr.cfg'

# Device Resource Details > Name
demo_arista:
# Device Resource Details > Device Type
device_type: arista
# Device Resource Details > Configuration File
config_file: 'demo_arista.cfg.j2'
# Device Resource Details > Image File
image_file: 'arista_eos.swi'
# Device Resource Details > Post-Provisioning Script
post_provision_script: arista_fixups_over_ssh.py
post_provision_script_timeout: 900
# CONFIGURE NODES > Secure Provisioning > Resource Distribution
node_inventory:
# Static Node Inventory List > Inventory Details > Name
BranchInventory:
```

```
# Inventory Details > Select Nodes

static:

- nodes-1

- nodes-2

- nodes-10


# Dynamic Node Inventory List > Inventory Details > Name

LabInventory:

# Inventory Details > Smart Group

smartgroup: LabNodes


# CONFIGURE NODES > Secure Provisioning > Resource Distribution

(mostly!)

deployment:


# CONFIGURE NODES > Secure Provisioning > Resource Distribution

Inventory Details > Resource Push

LabInventory:

- demo_arista

- branch_router

- access_switch


# CONFIGURE NODES > Secure Provisioning > Resource Distribution >

Inventory Details > Resource Distribution

BranchInventory:

- branch_router

- access_switch
```

UPLOAD CONFIGURATION AND RESOURCES

1. Assemble device resources on your PC or laptop in preparation for upload.
2. Locate the *nom-prov* directory created in the previous section
3. Copy device resources into *nom-prov/downloads*.

Your locally assembled files will now look similar to that below:

```
.
└─ nom-prov
    ├── nom-prov.yml
    └─ downloads
        ├── arista_eos.swi
        └─ demo_arista.cfg
```

You must now choose how you will upload files to the central Secure Provisioning repository, using Secure Copy or git.

OPTION A. SECURE COPY METHOD

Secure copy the entire *nom-prov* directory to Lighthouse port 2222, to the **/srv/central-auto/** directory and authenticating as root, for example, using the `scp` command:

```
cd nom-prov
scp -P 2222 -rp ./* root@192.168.0.1:/srv/central-auto/
```

.. where 192.168.0.1 is the IP address of Lighthouse.

Secure Provisioning now automatically propagates the device resources to the nodes specified by the YAML, it automatically configures and starts or restarts ZTP services on the nodes.

At this point, target device will begin the ZTP process and become provisioned.



OPTION B. GIT METHOD

Advanced users may choose to access the Secure Provisioning git repository on Lighthouse directly, rather than using scp. This has the advantage of supporting commit messages and integrate with upstream git or other continuous integration systems.

Example commands to initialize the repository for the first time:

```
ssh-copy-id root@192.168.0.1
cd nom-prov
git init
git remote add origin ssh://root@192.168.0.1:2222/srv/central
git add -A
git commit -a -m "Initial commit of ZTP resources"
git push origin master
```

.. where 192.168.0.1 is the IP address of Lighthouse.

Once the repository has been initialized, subsequent users can operate on it using the clone command:

```
ssh-copy-id root@192.168.0.1
git clone ssh://root@192.168.0.1:2222/srv/central nom-prov
cd nom-prov
echo >> nom-prov.yml
git commit -a -m "Whitespace change for testing, please ignore"
git push origin master
```

.. where 192.168.0.1 is the IP address of Lighthouse.

ADDITIONAL RESOURCE FILES AND DEVICE TYPE FILES

You may also provide additional resource files that are not explicitly part of Device Resource Bundles, for example, final configuration files that may be conditionally fetched and applied by the device's primary ZTP script.

You may also extend Secure Provisioning to support additional device types by providing ISC DHCP configuration snippets, for example:

new-vendor.conf

```
class "new-vendor-class" {  
    match if (option vendor-class-identifier = "new-vendor";  
    option bootfile-name "new-vendor.cfg";  
}
```

Additional files must be placed in the subdirectory named after the Node Inventory they will be deployed to. Within this subdirectory, files must be placed in the following:

- Resource files such as device configuration or image files are placed in the **downloads** directory.
- Advanced: DHCP snippets may be placed in the **dhcpcd** directory.

Directly added files are pushed together with YAML-generated files to the nodes. An example local directory structure is shown below with a YAML config file from the earlier example, as well as manual new-vendor files added to the **my_inventory** directory:

```
.  
├── nom-prov  
├── nom-prov.yml  
├── downloads  
└── | └── demo_arista.cfg
```



```
|   ├── cumulus_interfaces
|   ├── cumulus_setup.sh
|   └── arista_eos.swi
└── my_inventory
    ├── downloads
    |   └── new-vendor.cfg
    ├── dhcpd
    |   └── new-vendor.conf
```

The files are uploaded to the central Secure Provisioning repository, using Secure Copy or git, in the same way as the earlier example.

CONFIGURE DEVICE RESOURCES VIA ZTP

There are two factors that determine which resources are delivered to which devices via ZTP:

DEVICE RESOURCE BUNDLE MATCHING

As well as containing resource files themselves, each Resource Bundle itself has a few extra parameters: device vendor, device MAC address(es) and device serial number(s) (not supported by all vendors). Of these, only the device vendor is mandatory.

When a managed device broadcasts a BOOTP/DHCP request to initiate ZTP, it advertises its vendor ID string, MAC address, and in some cases serial number. These values are compared to the values in each Resource Bundle contained on the local node.

If there's a match, the local node provisions the device with the resource files in the matching bundle.

RESOURCE DISTRIBUTION

Node Inventories are used to selectively control which Resource Bundles are pushed to which nodes.

A node will only respond to a BOOTP/DHCP request on its local network if a matched Resource Bundle has been pushed to it.

Note that resources are not distributed any nodes by default.

BASELINE VS FINAL DEVICE CONFIGURATION

Broadly speaking, there are two approaches to secure provisioning using ZTP.

You may use strict matching and distribution settings to provision specific devices with unique, final configurations.

Alternatively, you may use laxer matching and wider distribution settings to provision many devices with a baseline configuration, for example, "just enough configuration" to route to a central production configuration system for final configuration and service provisioning.

You may also combine the two approaches, for example, use a reverse MAC address match to opt a specific device or devices out of an otherwise general, baseline configuration.

RUN A SCRIPT ON A NEWLY PROVISIONED DEVICE

Note: Post-provisioning scripting is an advanced feature only supported by Operations Manager nodes.

It is possible to upload a script and associated with a device Resource Bundle, to be run by remote Operations Manager node once a Managed Device is considered provisioned. A device is considered to be in a provisioned state once has downloaded all of the files in the Resource Bundle it is being provisioned with.

The script may be uploaded and associated via the UI during Resource Bundle creation using the **Post-Provisioning Script** option, or via **git/scp** and the ["CLI based WorkFlow"](#) on page 451.

Scripts may be implemented in bash, Python 2 or Python 3, and must start with a shebang – i.e. the first line must be one of:

```
#!/bin/bash
```

```
#!/usr/bin/env python2
```

```
#!/usr/bin/env python3
```

- Scripts are run in a monitored background processes in the Secure Provisioning container (remote-dop) on the node.
- Scripts have a default 15 minute timeout, this can be manually configured in the YAML config (post_provision_script_timeout).



- Scripts may login to target device via the network using SSH key auth where `nom_remote_ssh_pub_key` has been injected into the device config, or using username/password with the **sshpas** command.

MONITOR THE ZTP PROGRESS OF A MANAGED DEVICE

The current provisioning state of managed devices can be monitored via syslog on the Operations Manager (local devices only) or Lighthouse (all devices).

Each Secure Provisioning syslog message contains a prefix identifying the MAC address of the device being provisioned, similar to:

```
[NetOps-DOP device="01:23:45:67:89:AB"]
```

For example, here are sample messages showing an Opendgear ACM7004 device being provisioned:

```
[NetOps-DOP device="00:13:C6:EF:00:08"] Received DHCP request from  
device with vendor ID Opendgear/ACM7004-5-LMR  
[NetOps-DOP device="00:13:C6:EF:00:08"] Assigned DHCP address of  
10.0.0.2 to device  
[NetOps-DOP device="00:13:C6:EF:00:08"] Provisioning device with  
resource bundle my\_acm7004  
[NetOps-DOP device="00:13:C6:EF:00:08"] Device retrieved resource  
file /files/acm7004-5-4.3.1.flash via HTTP/HTTPS
```

Syslog can be viewed from the CLI by running:

```
tail -F /var/log/messages | grep NetOps-DOP
```


WAN GATEWAY SERVICES

In addition to LAN provisioning, the node can utilize its built-in cellular connection to act as a WAN gateway and provide a proxy to essential services for devices on day one.

The node's DHCP server hands out the node's address as:

- NTP server
 - This is a local service, synced to the node's system clock
- DNS server
 - DNS lookups by devices are relayed via Lighthouse VPN, to the DNS server that Lighthouse is configured to use
- Syslog server
 - Note that incoming syslog messages are dropped unless LogZilla for NetOps Automation has been activated
- Default gateway
 - When the node is configured in cellular router mode (i.e. with forwarding and masquerading enabled), devices can route to external services, for example, to enroll with third-party management systems for additional configuration.

ADVANCED OPTIONS

USING VARIABLES IN CONFIGURATION FILE TEMPLATES

In addition to static files, you may create templated ZTP configuration or script files. This is useful if your file needs to reference site- specific values such as an assigned IP addresses.

Any file uploaded via the web UI, or into the downloads directly with a file suffix of .j2 (Jinja2) will be automatically templated. The .j2 suffix is stripped when serving templated files to devices.

Available variables:

- `{{ nom_remote_server }}`
 - Address of provisioning interface on the node
 - Example: 10.0.0.1
- `{{ nom_remote_interface }}`
 - Name of provisioning interface on the node
 - Example: net2
- `{{ nom_remote_netmask }}`
 - Netmask of provisioning interface on the node (and netmask assigned in DHCP offers)
 - Example: 255.255.255.0
- `{{ nomremotenetmaskcidr }}`
 - CIDR format netmask (prefix length) of provisioning interface on the node
 - Example: 24

- `{{ nom_remote_ntp_server }}`
 - Address of NTP server assigned in DHCP offers (same as `nom_remote_server`)
 - Example: 10.0.0.1
- `{{ nom_remote_dns_server }}`
 - Address of DNS server assigned in DHCP offers (same as `nom_remote_server`)
 - Example: 10.0.0.1
- `{{ nom_device_ipv4_address }}`
 - This feature is only supported by Operations Manager nodes.
 - DHCP address assigned to target device
 - Example: 10.0.0.13
- `{{ nomremotesshpubkey }}`
 - Public part of an auto-generated SSH keypair on the remote node, which may be injected into device config to pre- authenticate the node for any post-provisioning activities.
 - Example: ssh-rsa
AAAAB3NzaC1yc2EAAAADAQABAAQADHO50MVT4A9NI7vjDIS+76LgD
BtEDm+J1gaQPNiIV62CGA6cm5wASDiddY/KZkHA
 - `root@platypus.employee.bne.opengear.com` (*example only*).
- `{{ nom_device_hostname }}`
 - This feature is only supported by Operations Manager nodes.
 - Hostname advertised by target device



- Example: router
- {{ nom_device_mac_address }}

Note: This feature is only supported by Operations Manager nodes.

- MAC Address of target device
- Example: 00:12:34:56:78:9A

For example, a basic Cumulus templated provisioning script may look like:

cumulus_setup.sh.j2

```
#!/bin/bash

curl tftp://{{nom_remote_server}}/cumulus_interfaces >
/etc/network/interfaces
```

POST-PROVISIONING SCRIPTS

Note: This feature is only supported by Operations Manager nodes.

It is possible to upload a script and associated with a device Resource Bundle, to be run by remote Operations Manager node once a Managed Device is considered provisioned. A device is considered to be in a provisioned state once has downloaded all of the files in the Resource Bundle it is being provisioned with.

The script may be uploaded and associated via the UI during Resource Bundle creation using the **Post-Provisioning Script** option, or checked-in to the **downloads** directly via [git/scp](#) and specified in the YAML configuration for the device Resource Bundle:

```
demo_arista:
  device_type: arista
  config_file: 'demo_arista.cfg'
```

```
image_file: 'arista_eos.swi'
post_provision_script: arista_fixups_over_ssh.py
post_provision_script_timeout: 900
```

Scripts may be implemented in bash, Python 2 or Python 3, and must start with a shebang – i.e. the first line must be one of:

```
#!/bin/bash
#!/usr/bin/env python2
#!/usr/bin/env python3
```

Notes:

- Scripts are run in a monitored background processes in the Secure Provisioning container (remote-dop) on the node
- Scripts have a default 15 minute timeout, this can be manually configured in the YAML config (postprovisionscripttimeout_)
- Scripts may login to target device via the network using SSH key auth where nomremotesshpubkey has been injected into the device config (see Templated resource above), or using username/password with the sshpass command

ORDERED PROVISIONING

Note: This feature is only supported by Operations Manager nodes.

The **Provision After** option allows you to create basic dependency chains, to enforce the order in which devices are provisioned. In certain scenarios it may be advantageous to control the order in which devices are provisioned, for example:

- Ensure security infrastructure is provisioned ahead of systems that may otherwise become inadvertently exposed on the network.

- Bring the production WAN up early to allow devices to provision services in-band, saving cellular data.
- Disallow local user access to the LAN until the network is fully up and running.

When a dependent Resource Bundle has the **Provision After** option set, the node will not respond to ZTP requests for these resources until all required dependencies have been met.

The Provision After property lists of one or more other, required Resource Bundles. Each required Resource Bundle creates a dependency that at least one device has been provisioned using the required bundle.

If multiples of a particular required device must be provisioned before a dependent device, simply specify the dependency multiple times in the list.



You may configure this via the UI during Resource Bundle creation using the Provision After option, or directly via git/scp in the YAML configuration for the device Resource Bundle:

```
access_switch:
  device_type: juniper
  config_file: 'jn-switch35.config'
  image_file: 'jinstall-ex-4200-13.2R1.1-domestic-signed.tgz'
  provision_after:
    - branch_router
```

TROUBLESHOOTING SECURE PROVISIONING

Secure Provisioning consists of several Docker containers:

- The central-dop container runs on Lighthouse, hosting git repository
- The dop-ui container runs on Lighthouse, serving the Secure Provisioning web UI
- The remote-dop container runs on Operations Manager nodes, running DHCP and TFTP/HTTP ZTP services

Additionally, the deployment container runs on Lighthouse, orchestrates new module installation on Lighthouse and nodes.

See the troubleshooting commands on the following page.

TROUBLESHOOTING COMMANDS


The following are useful commands for troubleshooting issues with the NetOps modules:

Command	
<code>docker ps</code>	
View running Docker containers.	
<code>docker exec -ti container-name bash</code>	
Spawn a bash shell inside a container.	
<code>docker logs container-name</code>	
View logs of a container.	
<code>docker exec -ti deployment ansible-playbook -vvv /ansible/dop_2.0.0.yml</code>	
Manually run module deployment in verbose mode, on Lighthouse.	
<code>/etc/scripts/post-receive</code>	
Manually push ZTP resources from Lighthouse to Operations Manager nodes (inside central-dop container).	
<code>/etc/scripts/netops_ui_handler</code>	
If the Lighthouse UI fails to display after an upgrade, it's possible a NetOps UI component is failing to load and may be able to recover by running this command.	

COMMAND LINE TOOLS

Lighthouse includes a web-based terminal. To access this bash shell instance:

1. Select **MANAGE > LIGHTHOUSE > Local Terminal**. A login prompt displays

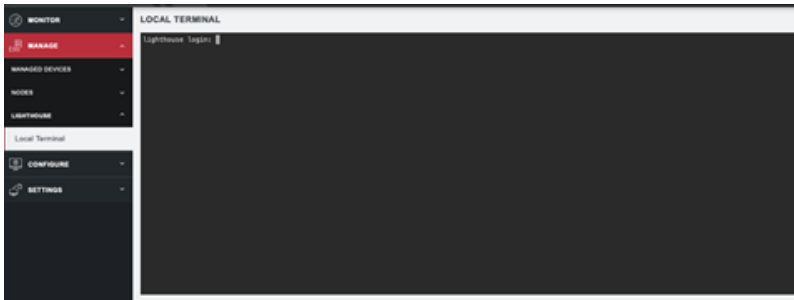

2. Enter an administrator's username and press Return.
3. A password: prompt displays. Enter the administrator's password and press Return.
4. A bash shell prompt displays.

This shell supports most standard bash commands and also supports copy-and-paste to and from the terminal.

Lighthouse-specific shell-based tools are listed below.

```
node-command --list-nodes
```

EXAMPLE NODE-COMMAND OUTPUT

```
== node-command ID 2017-05-19T14:08:33.360164_29534 ==  
14:08:33 [SUCCESS] BNE-R01-ACM7004-5 192.168.128.2:22  
OpenGear/ACM7004-5 Lighthouse 3b90d826 -- Tue May 9 13:42:16 EST 2017
```



```
14:08:33 [SUCCESS] BNE-R02-IM7216 192.168.128.3:22
```

```
OpenGear/IM72xx Lighthouse 3b90d826 -- Tue Jul 5 13:42:16 EST 20167
```

NODE-INFO

`node-info` is a shell-based tool for pulling more detailed information from console servers.

EXAMPLE NODE-INFO OUTPUT

```
$ node-info -A
BNE-R01-ACM7004-5
  address: 192.168.128.2
  id: nodes-1
  ssh port: 22
  description: Brisbane Rack 1
  Enrollment status: Enrolled
  connection status: Connected
BNE-R02-IM7216
  address: 192.168.128.3
  id: nodes-2
  ssh port: 22
  description: Brisbane Rack 2
  Enrollment status: Enrolled
  connection status: Connected
```

NODE-UPGRADE

`node-upgrade` is a tool for running firmware upgrades on multiple managed console servers with a single command and returns the results in tabular form to stdout.

`node-upgrade` accepts the following arguments:

Short Argument	Long Argument	Description
-h	--help	Display usage information and exit
-q	--quiet	Suppress log messages
-V	--verbose	Display logs generated while upgrading
-l	--list-nodes	Display nodes and their upgradeable paths without executing upgrade
-D	--debug	Display detailed log messages, implies --verbose
-I	--ignore-version	Ignore firmware version warnings for upgrade
-i	--node-id=<id>	Select node by config ID
-n	--node-name=<name>	Select node by name

Short Argument	Long Argument	Description
-a	--node-address-s=<address>	Select node by VPN address
-A	--all	Select all available nodes
-p	--product=<family>	Select node by product family
-g	--smartgroup=<name>	Select nodes by smartgroup filter
-f	--firmware-dir=r=<directory>	The directory of the firmware files(s)
-F	--firmware-file=<path>	The firmware image to use for upgrade
-v	--version=<version>	The firmware version to upgrade to

AN EXAMPLE NODE-UPGRADE RUN

The following is an example node-upgrade command. It sets /mnt/data/nvram/latest-firmware as the directory node-upgrade looks to for the firmware image used as the source for all the firmware upgrade attempts. Every console server being managed from the active Lighthouse instance is targeted for an upgrade and the target console servers are set to upgrade to firmware 4.11.0.

```
# node-upgrade --all --firmware-dir /mnt/data/nvram/latest-firmware/  
--version 4.11.0
```

```
NODE (UUID) MODEL FAMILY ADDRESS VERSION RESULT
```

```
-----  
-----
```

```
cm7116-2 (nodes-4) CM7116-2 CM71XX 192.168.128.5 4.11.0 SUCCESS  
im7208-2 (nodes-6) IM7208-2 IM72XX 192.168.128.7 4.10.0 SUCCESS  
cm7196a-2 (nodes-5) CM7196A-2 CM7196 192.168.128.6 4.10.0 SUCCESS  
acm7004-2 (nodes-2) ACM7004-2 ACM700X 192.168.128.3 4.11.0 SUCCESS  
acm5508-2 (nodes-1) ACM5508-2 ACM550X 192.168.128.2 4.1.1u2 SUCCESS  
acm7004-5 (nodes-3) ACM7004-5 ACM7004-5 192.168.128.4 4.11.0 SUCCESS  
om2216-1 (nodes-8) OM2216-L OMXXXX 192.168.128.9 21.Q2.1  
FileNotFoundError  
om1208-8e (nodes-7) OM1208-8E OMXXXX 192.168.128.8 21.Q2.1  
FileNotFoundError
```

- Version shows the device version prior to upgrade.
- Result shows whether the upgrade for each device succeeded, or returns an error with more detail.

RESULTS AND ERROR MESSAGES IN NODE-UPGRADE

When the node-upgrade command is run with valid arguments and parameters, the program will return exit status 0 and the following results and error messages may be returned for each node listed.

Result	Causes
SUCCESS	Node upgrade succeeded
FileNotFoundError	No upgrade file found matching provided device family or version
UpgradeError	Device already has same or higher firm-ware version Network connection lost
IncompatibleFirmwareError	Firmware file provided does not match the product family

In addition, the following exit statuses may be returned.

Exit Status	Description
0	Command exited normally
1	Invalid parameter
2	Unknown argument

CRON

The `cron` service can be used to schedule file execution at specific times. Daemon can be managed via the `/etc/init.d/crond` interface, and cron tables managed via `crontab`.

Usage:

```
crontab [options] file
crontab [options]
crontab -n [hostname]
```

Options:

Options	Description
<code>-u <user></code>	define user
<code>-e</code>	edit user's crontab
<code>-l</code>	list user's crontab
<code>-r</code>	delete user's crontab
<code>-i</code>	prompt before deleting
<code>-n <host></code>	set host in cluster to run users' crontabs

Options	Description
<code>-C</code>	get host in cluster to run users' crontabs
<code>-x <mask></code>	enable debugging

To perform start/stop/restart on `crond` service:

```
/etc/init.d/crond start
```

To verify the current `crond` status:

```
/etc/init.d/crond status
```

To check current cron jobs running with the following command to list all crontabs:

```
crontab -l
```

To edit or create a custom crontab file:

```
crontab -e
```

This opens a personal `cron` configuration file. Each line can contain one command to run. The following format is used:

```
minute hour day-of-month month day-of-week command
```

For example, the following entry will run a the specified `backup.sh` script every day at 3am:

```
0 3 * * * /etc/config/backup.sh
```

When finished, save and close the `crontab` file.

SYSFLASH

`sysflash` is a shell-based tool for upgrading a Lighthouse instance's system. `sysflash` will warn you if you do not have enough available space to upgrade to, though this is unlikely as space is reserved specifically for the upgrade process.

Basic syntax is as follows:

```
# sysflash [flags] [path/to/system-image.lg_upg | Percent-  
encoded URL to firmware-image.lg_upg]
```

Note:URLs must be Percent-encoded and image filenames cannot include spaces.

`sysflash` includes eight flags which modify the standard upgrade behavior as well as the `-h` or `--help` flag, which returns all the available flags and their effects:

Arguments	Description
<code>-b</code>	Override board name (currently lighthouse-vm)
<code>--board-name <name></code>	
<code>-B</code>	Override board revision (currently 1.0)
<code>--board-revision <version></code>	
<code>-V</code>	Override vendor (currently opengear)
<code>--vendor <vendor></code>	
<code>-l</code>	Do not check software version for upgradability
<code>--no-version-check</code>	
<code>-m</code>	Do not migrate current config. Start fresh.
<code>--no-migration</code>	

-v	Increase verbosity (may repeat)
--verbose	
-o	Do not modify bootloader (implies --no-reboot)
--no-boot-once	
-r	Do not reboot after upgrading
--no-reboot	
-h	Print this help
--help	

SUPPORT FOR MOUNTING THE HARD DISKS WITH OGCONFIG-CLI

Extra hard disks can be mounted in the Lighthouse VM by adding them to the configuration. Each new disk must have a partition created and formatted. Partitions can be created using `fdisk` or `cfdisk`, and should be formatted using the `ext4` filesystem, using the `mkfs.ext4` command:

```
root@lighthouse:~# mkfs.ext4 /dev/sdb1
```

The directory in which to mount the filesystem must be created. In general, new filesystems should be mounted in the provided mountpoint of `/mnt/au`. Any other filesystems should be mounted within the filesystem mounted here. The UUID can be obtained by running `blkid`. This will output the UUID's of all the extra hard disks on the system. When referencing the UUID, ensure the entire UUID is enclosed within quote marks like this:

```
"UUID=33464920-f54f-46b6-bd84-12f76eeb92da"
```

else the command will not run correctly.

Add the information to the configuration system using `ogconfig-cli` as follows, modifying the path for the specific situation.

```
ogcfg> var m !append system.mountpoints map
{8435270-fb39-11e7-8fcf-4fa11570959}: Map <>
ogcfg> set {m}.node "UUID=33464920-f54f-46b6-bd84-12f76eeb92da"
{b8c37c6-fb39-11e7-971c-23517b19319}: String </dev/sdb1>
ogcfg> set {m}.path "/mnt/aux"
{1fb50d8-fb39-11e7-994c-0f10b09cbd4}: String </mnt/aux>
ogcfg> push
OK
```

SUPPORT FOR MULTIPLE INSTANCE LIGHTHOUSE WITH OGCONFIG-CLI

Configuration system information can be displayed, searched, and set from both the primary and secondary Lighthouse instances. To reference the primary instance, use `lighthouse_configurations[0]`. The secondary instance is reachable with `lighthouse_configurations[1]`.

For example, to display nodes all network connections to the primary Lighthouse, use:

```
ogcfg> print lighthouse_configurations[0].system.net.conns
```

CLI SUPPORT FOR CONFIGURING NETWORK TRAFFIC MIRRORING

`traffic_mirroring` is a tool that allows network administrators to set up an integration with their enterprise Intrusion Detection System (IDS). For more details see ["Configuring Lighthouse for Network traffic Mirroring" on page 306](#).

```
root@lighthouse:~# traffic_mirroring --enable --destination-ip
10.97.100.1 --vlan-id 100
Configuring for Primary Lighthouse instance (Instance ID: 1).
Confirming that Traffic Mirroring is set up...
Traffic Mirroring successfully enabled.
root@lighthouse:~# traffic_mirroring --status
Primary Lighthouse 1 has traffic mirroring enabled.
Mirroring Node VPN (tun0) -> 10.97.100.1 (VLAN 100)
Mirroring Multi Instance VPN (tun1) -> 10.97.100.1 (VLAN 100)
root@lighthouse:~# traffic_mirroring --test
Preparing to test Node VPN (tun0) interface.
Pinging address '192.168.128.2' on interface 'tun0'.
Preparing to test Multi Instance VPN (tun1) interface.
Pinging address '172.16.1.2' on interface 'tun1'.
Test complete. The pings sent across the VPN's should have been
mirrored.
root@lighthouse:~# traffic_mirroring --disable
Traffic Mirroring disabled.
```


NETWORK TRAFFIC MIRRORING

Network Traffic Mirroring can only be configured by a network administrator with `sudo` access. Only a command line interface is available for this feature.

These commands work on the primary Lighthouse to enable network traffic mirroring, however secondary lighthouses can use `--test` and `--status` to check if the network traffic mirroring is in use.

Command Argument	Description
<code>traffic_mirroring --help</code>	Display usage information and exit
<code>traffic_mirroring --test</code>	Test the setup by sending a single ping on each VPN and attempt to confirm that the current setup is valid, and the correct rules and interfaces exist, and the destination IP is reachable.
<code>traffic_mirroring --disable</code>	Disable network traffic mirroring
<code>traffic_mirroring --status</code>	Get the current status of the traffic mirroring config

Command Argument	Description
<code>traffic_mirroring --enable --destination-ip <ip_address></code>	Enable network traffic mirroring and configure the destination IP address where mirrored packets will be sent to (for example, IDS).
<code>traffic_mirroring --enable --destination-ip <ip_address> --vlan-id <vlan_number></code>	Enable network traffic mirroring, configure the destination IP address, and configure the VLAN tag for all mirrored packets.
<code>traffic_mirroring --enable --destination-ip <ip_address> --vlan-id <vlan_number> --ignore-multi-instance</code>	Enable network traffic mirroring, configure the destination IP address, configures the VLAN tag and not mirror traffic between multi-instances Lighthouses.
<code>traffic_mirroring --enable --destination-ip <ip_address> --vlan-id <vlan_number> --instance-id <lighthouse_instance_id></code>	Enable network traffic mirroring, configure the destination IP address, configure the VLAN

Command Argument	Description
	tag, and configure the instance ID of the lighthouse for which to configure traffic mirroring. If <code>--instance-id</code> is omitted, then all Lighthouses in a multi-instances will be configured for traffic mirroring.

GLOSSARY

Terms used in this guide to define Lighthouse elements and concepts are listed below.

Term	Definition
AUTHDOWNLOCAL (RADIUS/LDAP/TACAS)	When AUTHDOWNLOCAL authentication option is selected, if remote authentication fails because the user does not exist on the remote AAA server, the user is denied access.
AUTHLOCAL (RADIUS/LDAP/TACAS)	When AUTHLOCAL authentication option is selected, if remote authentication fails because the user does not exist on the remote AAA server, Lighthouse tries to authenticate the user using a local account.
CELLULAR HEALTH	Status of the cellular connection of a node.
DARK MODE	Changes the user interface to display mostly dark colors, reducing the light emitted by device screens.
DOCKER	<p>An open platform for developing, shipping, and running applications. Docker enables you to separate your applications from your infrastructure so you can deliver software quickly.</p> <p>Docker powers the NetOps platform within the Lighthouse product.</p>

ENROLLMENT	Connecting a node to Lighthouse.
ENROLLMENT BUNDLE	Used to assign a number of tags to a set of nodes when they are enrolled. During Enrollment, the bundle is specified using its name, and a bundle-specific Enrollment token.
ENROLLED NODE	A Node that has been connected to Lighthouse and is ready for use.
ENROLLMENT TOKEN	A password that authorizes the node with Lighthouse. Used when performing Node-based, or ZTP Enrollment.
INSTANCE	A single running Lighthouse.
INTRUSION DETECTION SYSTEM	An Intrusion Detection System (IDS) is a network security technology built for detecting vulnerability exploits against a target application.
LIGHT MODE	Changes the user interface to display mostly light colors. This is the default UI setting.
LIGHTHOUSE	System for accessing, managing and monitoring Opendgear console servers.
LIGHTHOUSE ENTERPRISE	Offers an elevated centralized management solution with additional functionality. It sup-

	ports growing trends such as edge computing and SD-WAN with High Availability and Remote IP Access.
LIGHTHOUSE VPN	The OpenVPN based connections that the Lighthouse instance has with the nodes it is managing
LOCALAUTH (RADIUS/LDAP/AAA)	When LOCALAUTH authentication option is selected, if local authentication fails, Lighthouse tries to authenticate the user using a remote AAA server.
MANAGED DEVICE	A device that is managed via a node through a serial, USB, or network connection.
MULTIPLE INSTANCE	Access nodes through multiple Lighthouse instances at the same time.
NODE	A device that can be enrolled with Lighthouse, allowing it to be accessed, managed, and monitored. Currently, Opengear console servers are supported on a standard license, with support for other vendors Console Servers available as an add-on.
OSPF	OSPF (Open Shortest Path First) is an interior gateway protocol used to distribute routing information within a single autonomous system. It is based on link-state technology. OSPF routers exchange link-state information with their neighbors to build a complete map of the network topology. This

	information is used to calculate the shortest path to each destination using Dijkstra's algorithm. OSPF supports multiple paths of equal cost and can load balance traffic across these paths.
PASSWORD POLICY	Administrative users can define rules for Lighthouse user passwords including length, types of characters, reuse, and expiration period.
PENDING NODE	A node that has been connected to Lighthouse and has been configured with a VPN Tunnel, but which has not yet been approved for access, monitoring, or management. The approval operation can be automated by configuring Lighthouse to auto- approve nodes.
PRIMARY INSTANCE	The main instance of Lighthouse used for updating configuration and node enrollment.
REMOTE LOGGING/REMOTE SYSLOG	The ability to send logs to a remote server, for the offsite storage and review of logs.
REPLICATION	Automatic copying of the primary Lighthouse database to any connected dependent instances. Replication ensures that these instances mirror the same information and maintains connections to the same nodes.
Smart Management Fabric (SMF)	Smart Management Fabric (SMF) is a turn-key management network overlay that uses dynamic routing to allow IP connectivity to IT resources regardless of whether these are connected via USB, serial, SSH, https

	(GUI), SPs/BMCs (iLO, iDRAC, etc.), RDP, Ansible, Python, vCenter or other commonly used technologies.
ROLE	A set of access rights for a particular group. Three roles are defined within Lighthouse: Lighthouse Administrator, Node Administrator, and Node User.
SECONDARY/DEPENDENT INSTANCES	Redundant instances of Lighthouse that are used to access Lighthouse information and connected nodes.
SMART GROUP	Dynamic filter used to search for particular nodes, or for defining the access rights of a group of users. Smart Groups use node properties, as well as tags defined by users.
TAG	User-defined attribute and value that is assigned to one or more nodes or ports. Tags are used when creating Smart Groups for filtering views or access to nodes and ports.